


SERVICE MANUAL

BE-3C CHASSIS

MODEL	COMMANDER	DEST.	CHASSIS NO.	MODEL	COMMANDER	DEST.	CHASSIS NO.
KV-C2501A	RM-833	Italian	SCC-G81M-A	KV-C2503E	RM-833	Spanish	SCC-G82L-A
KV-C2503B	RM-833	French	SCC-G85K-A	KV-C2508E	RM-833	Spanish	SCC-H63C-A
KV-C2509B	RM-833	French	SCC-H61C-A	KV-C2509E	RM-833	Spanish	SCC-H63D-A
KV-C2501D	RM-833	AEP	SCC-G77M-A	KV-C2501K	RM-833	OIRT	SCC-H68C-A
KV-C2508D	RM-833	AEP	SCC-H62C-A	KV-C2509K	RM-833	OIRT	SCC-H68D-A
KV-C2509D	RM-833	AEP	SCC-H62D-A				

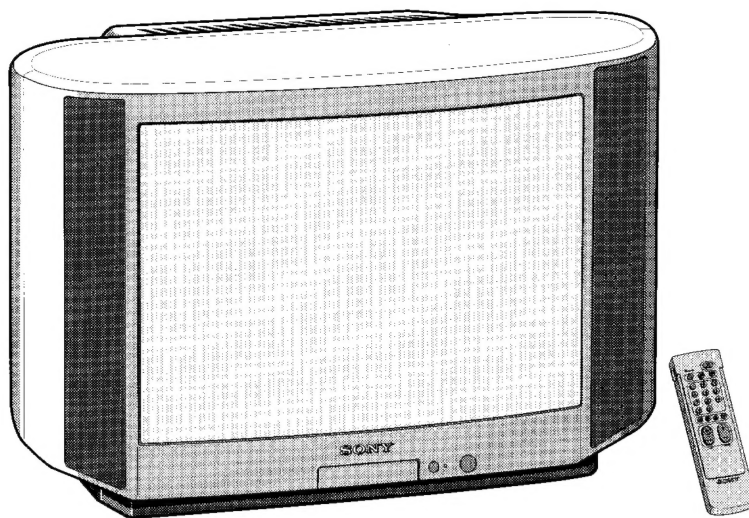

TRINITRON® COLOR TV
SONY®

ITEM	MODEL	Television System	Stereo System	Channel Coverage	Color System
AEP		B/G/H, D/K	GERMAN Stereo	PAL B/G/H VHF:E2-E12 UHF:E21-E69 CABLE TV (1):S1-S41 CABLE TV (2):S01-S05, M1-M10, U1-U10 ITALIA VHF:A-H2 (C) D/K VHF:R01-R12 UHF:R21-R69	PAL, SECAM NTSC4.43, NTSC3.58 (VIDEO IN)
Italian		B/G/H	GERMAN Stereo	ITALIA VHF:A-H2 PAL B/G VHF:E2-E12 UHF:E21-E69 CABLE TV (1):S1-S41 CABLE TV (2):S01-S05, M1-M10, U1-U10	PAL NTSC4.43, NTSC3.58 (VIDEO IN)
French		B/G/H, L, I	GERMAN / Nicam Stereo	L VHF:F02-F10 UHF:F21-F69 CABLE:B-Q S21-S44 B/G/H VHF:E2-E12 UHF:E21-E69 CABLE TV (1):S1-S41 CABLE TV (2):S01-S05, M1-M10, U1-U10 ITALIA VHF:A-H2 (C) I UHF:B21-B69	PAL, SECAM NTSC4.43, NTSC3.58 (VIDEO IN)
Spanish		B/G/H	GERMAN / Nicam Stereo	PAL B/G/H VHF:E2-E12 UHF:E21-E69 CABLE TV (1):S1-S41 CABLE TV (2):S01-S05, M1-M10, U1-U10 ITALIA VHF:A-H2	PAL, SECAM NTSC4.43, NTSC3.58 (VIDEO IN)
OIRT		B/G/H, D/K	GERMAN Stereo	B/G/H VHF:E2-E12 UHF:E21-E69 CABLE TV (1):S1-S41 CABLE TV (2):S01-S05, M1-M10, U1-U10 ITALIA VHF:A-H2 (C) D/K VHF:R01-R12 UHF:R21-R69	PAL, SECAM NTSC4.43, NTSC3.58 (VIDEO IN)

MODEL	Italian	French	AEP	Spanish	OIRT
Power Consumption	79W	101Wh	101Wh	102Wh	101Wh

SPECIFICATIONS

Picture Tube Hi-Black Trinitron
Approx. 63 cm (25 inches)
(Approx. 59 cm picture measured diagonally)
110° -deflection

Input/Output Terminals

[REAR]

- Ⓔ 1 21-pin Euro connector (CENELEC standard)
 - inputs for audio and video signals
 - inputs for RGB
 - outputs of TV video and audio signals
- Ⓔ 2/Ⓔ 2 21-pin Euro connector
 - inputs for audio and video signals
 - inputs for S video
 - outputs for audio and video signals (selectable)

[FRONT]

- Ⓔ Video input - phono jack
- Ⓔ 3 Audio inputs - phono jacks
- Ⓔ S video input 4-pin DIN
- Ω Headphone jacks : stereo minijack

- Sound output 2 x 15W (Music power)
- Dimensions Approx. 717x507x480 mm
- Weight Approx. 32.5kg
- Supplied accessories RM-833 Remote Commander (1)
IEC designation R6 battery (1)
- Other features NICAM, FASTEXT, TOPTXT.



[RM-833]

- Remote control system infrared control
- Power requirements 1.5V dc
1 battery IEC designation R6 (size AA)
- Dimensions Approx. 65x225x21 mm (w/h/d)
- Weight Approx. 157g (Not including batteries)

Design and specifications are subject to change without notice

Model name Item	KV-C2501A	KV-C2503B KV-C2509B	KV-C2501D KV-C2508D KV-C2509D	KV-C2503E KV-C2508E KV-C3509E	KV-C2501K KV-C2509K
Pal Comb	OFF	OFF	OFF	OFF	OFF
PIP	OFF	OFF	OFF	OFF	OFF
RGB Priority	ON	ON	OFF	OFF	OFF
Woofers Box	OFF	OFF	OFF	OFF	OFF
Scart 1	ON	ON	ON	ON	ON
Scart 2	ON	ON	ON	ON	ON
Front in (3)	ON	ON	ON	ON	ON
Scart 4	OFF	OFF	OFF	OFF	OFF
Projector	OFF	OFF	OFF	OFF	OFF
AKB in 16:9 mode	ON	ON	ON	ON	ON
Norm B/G/H	ON	ON	ON	ON	ON
Norm I	OFF	ON	OFF	OFF	OFF
Norm D/K	OFF	OFF	ON	OFF	ON
Norm AUS	OFF	OFF	OFF	OFF	OFF
Norm L	OFF	ON	OFF	OFF	OFF
Norm SAT	OFF	OFF	OFF	OFF	OFF
Norm M	OFF	OFF	OFF	OFF	OFF
Toptext	ON	ON	ON	ON	ON
Nicam Stereo	OFF	ON	OFF	ON	OFF
Language Preset	Italian	French	German	Spanish	OIRT

21 pin connector (1 2 4)

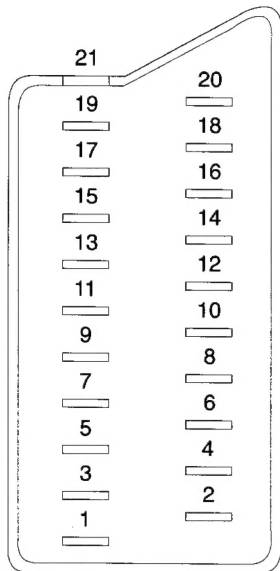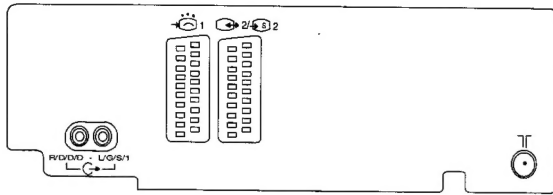

Pin No.	1	2	4	Signal	Signal level
1	○	○	○	Audio output B (right)	Standard level : 0.5V rms Output impedance :Less than 1kohm*
2	○	○	○	Audio input B (right)	Standard level : 0.5V rms Output impedance :More than 10kohm*
3	○	○	○	Audio output A (left)	Standard level : 0.5V rms Output impedance :Less than 1kohm*
4	○	○	○	Ground (audio)	
5	○	○	○	Ground (blue)	
6	○	○	○	Audio input A (left)	Standard level : 0.5V rms Output impedance :More than 10kohm*
7	○	●	●	Blue input	0.7 ± 3dB, 75 ohms, positive
8	○	○	○	Function select (AV control)	High state (9.5 - 12V) : Part mode Low state (0 - 2V) : TV mode Input impedance : More than 10k ohms Input capacitance : Less than 2nF
9	○	○	○	Ground (green)	
10	○	○	○	Open	
11	○	●	●	Green	Green signal : 0.7 ± 3dB, 75 ohms, positive
12	○	○	○	Open	
13	○	○	○	Ground (red)	
14	○	○	○	Ground(blanking)	
15	○	—	—	Red input	0.7 ± 3dB, 75 ohms, positive
	—	○	○	(S signal) chroma input	0.3 ± 3dB, 75 ohms, positive
16	○	●	●	Blanking input (Ys signal)	High state (1 - 3V) Low state (0 - 0.4V) Input impedance : 75ohms
17	○	○	○	Ground(video output)	
18	○	○	○	Ground(video input)	
19	○	○	○	Video output	1V ± 3dB,75ohms,positive sync:0.3V(-3+10dE
20	○	—	—	Video input	1V ± 3dB,75ohms,positive sync:0.3V(-3+10dE
	—	○	○	Video input Y (S signal)	1V ± 3dB,75ohms,positive sync:0.3V(-3+10dE
21	○	○	○	Common ground (plug, shield)	

○ Connected ● Not Connected (open) * at 20Hz - 20kHz

Pin No	Signal	Signal level
1	Ground	
2	Ground	
3	Y (S signal) input	1V ± 3dB 75 ohm , positive Sync. 0.3V -3/+10 dB
4	C (S signal) input	0.3V ± 3dB 75 ohm , positive Sync.

 


TABLE OF CONTENTS

<u>Section</u>	<u>Title</u>	<u>Page</u>	<u>Section</u>	<u>Title</u>	<u>Page</u>
1. GENERAL			5. DIAGRAMS		
	Getting Started	6	5-1.	Block Diagram	27
	Advanced TV Operations	8	5-2.	Circuit Boards Location	32
	Adjusting the Picture and Sound	8	5-3.	Schematic Diagrams and Printed Wiring Boards	32
	Advanced Presetting Functions	10		* D Board	37
	Teletext Operation	11		* A Board	42
	Connecting Other Equipment	12		* C Board	52
	For Your Information	13	5-4.	Semiconductors	55
2. DISASSEMBLY			6. EXPLODED VIEWS		
2-1.	Rear Cover Removal	14	6-1.	Chassis	57
2-2.	Chassis Assy Removal	14	6-2.	Picture Tube	58
2-3.	Service Position	15			
2-4.	A Board Removal	15	7. ELECTRICAL PARTS LIST		59
2-5.	Extension Board	15			
2-6.	Picture Tube Removal	16			
3. SET-UP ADJUSTMENTS					
3-1.	Beam Landing	17			
3-2.	Convergence	18			
3-3.	Focus	20			
3-4.	White Balance	20			
4. CIRCUIT ADJUSTMENTS					
4-1.	Electrical Adjustments	21			
4-2.	Test Mode 2:	22			
4-3.	BE-3C Self Diagnostic Software	25			


CAUTION

SHORT CIRCUIT THE ANODE OF THE PICTURE TUBE AND THE ANODE CAP TO THE METAL CHASSIS, CRT SHIELD, OR CARBON PAINTED ON THE CRT, AFTER REMOVAL OF THE ANODE CAP.

WARNING !!

AN ISOLATING TRANSFORMER SHOULD BE USED DURING ANY SERVICE WORK TO AVOID POSSIBLE SHOCK HAZARD, DUE TO A LIVE CHASSIS. THE CHASSIS OF THIS RECEIVER IS DIRECTLY CONNECTED TO THE AC POWER LINE.

SAFETY-RELATED COMPONENT WARNING !!

COMPONENTS IDENTIFIED BY SHADING AND MARKED  ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL FOR SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLIMENTS PUBLISHED BY SONY.


ATTENTION

APRES AVOIR DECONNECTE LE CAP DE L'ANODE, COURT-CIRCUITER L'ANODE DU TUBE CATHODIQUE ET CELUI DE L'ANODE DU CAP AU CHASSIS METALLIQUE DE L'APPAREIL, OU AU COUCHE DE CARBONE PEINTE SUR LE TUBE CATHODIQUE OU AU BLINDAGE DU TUBE CATHODIQUE.

ATTENTION !!

AFIN D'EVITER TOUT RISQUE D'ELECTROCUTION PROVENANT D'UN CHÂSSIS SOUS TENSION, UN TRANSFORMATEUR D'ISOLEMENT DOIT ETRE UTILISÉ LORS DE TOUT DÉPANNAGE. LE CHÂSSIS DE CE RÉCEPTEUR EST DIRECTEMENT RACCORDÉ À L'ALIMENTATION SECTEUR.


ATTENTION AUX COMPOSANTS RELATIFS À LA SÉCURITÉ !!

LES COMPOSANTS IDENTIFIÉS PAR UNE TRAME ET PAR UNE MARQUE  SUR LES SCHÉMAS DE PRINCIPE, LES VUES EXPLOSÉES ET LES LISTES DE PIÈCES SONT D'UNE IMPORTANCE CRITIQUE POUR LA SÉCURITÉ DU FONCTIONNEMENT, NE LES REMPLACER QUE PAR DES COMPOSANTS SONY DONT LE NUMÉRO DE PIÈCE EST INDIQUÉ DANS LE PRÉSENT MANUEL OU DANS DES SUPPLÉMENTS PUBLIÉS PAR SONY.

SECTION 1 GENERAL

Getting Started

Inserting the Battery Into the Remote Commander

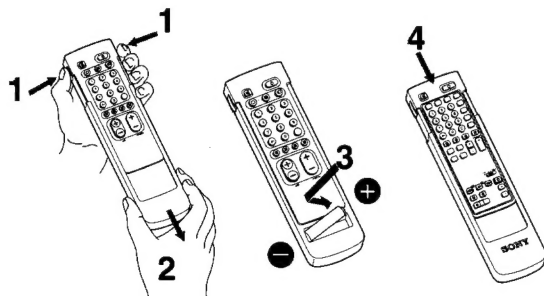

Remove the cover.

Check the correct polarity.


Refit the outside cover making sure that the Full Function side is visible.

About Battery Life

Under normal operation, a battery will last up to half a year.

Connecting the Aerial

Connect aerial to the socket at the rear of the TV.
(cable not supplied)

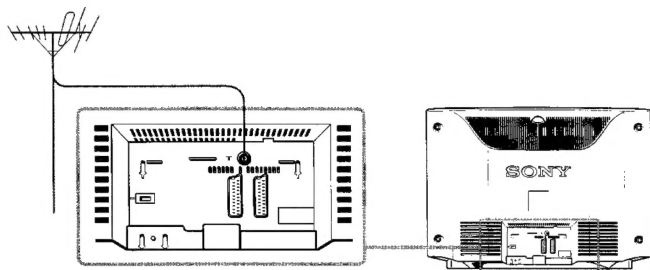

Choosing a Language

(See inside of front cover and back cover)

1 Depress [A] on the TV.

The TV turns on. If the standby indicator [B] on the TV is lit, press [3] or any number button [4] on the Remote Commander.

2 Press MENU [7] on the Remote Commander.

The SELECT LANGUAGE screen appears.

MENU

The operating instructions mentioned here are partial abstracts from the Operating Instruction Manual. The page numbers of the Operating Instruction Manual remain as in the manual.

- 3 Press one of the colour buttons [17] on the Remote Commander to select a language (Press the white button [17] to display other language alternatives). The SELECT LANGUAGE screen clears and all subsequent menus appear in the chosen language.

SELECT LANGUAGE

- ENGLISH
- DEUTSCH
- FRANÇAIS
- ESPAÑOL
- MORE

SELECT COL. BUTTON

Note: From the second time when you turn on the TV, the MENU screen appears instead of the SELECT LANGUAGE screen. Press the yellow button [17] then press the white button [17] to redisplay the SELECT LANGUAGE screen.

Tuning in to Channels

You can tune in up to 100 channels to programme positions either automatically or manually.

auto tuning: A single button press allows all receivable channels to be tuned. Use if you are unfamiliar with the channel numbers of stations.

manual tuning: Use if you are familiar with the channel numbers of stations.
(Channel numbers from the main UK transmitters are shown on page 13)

Choose the more appropriate way for you.

Tuning in to Channels Automatically

There are two possibilities for auto tuning;

A. On the TV: hold down [E] on the front of the TV for 2 seconds
(All receivable channels are tuned in the order noted below).

or

B. On the Remote Commander: as follows

1 Press MENU [7].

2 Press the white button [17].

3 Hold down the red button [17] for 2 seconds,

Note: Press the green button [17] to cancel.

Channels are automatically stored as follows:

Programme1	BBC1
Programme2	BBC2
Programme3	ITV
Programme4	CH4 or S4C

Note: Programme names are automatically taken from TELETEXT if available. If not, "-----" is placed in the name.

- If you connect a VCR via the aerial cable, set the VCR to its test signal or play mode before auto-tuning.
- You may have to exchange the programme positions, if there are duplicated signals from local transmitters.

Tuning in to Channels Manually


1 Press MENU [7].

The MENU screen appears.




2 Press the white button [17] to select PRESET.

The PRESET screen appears.

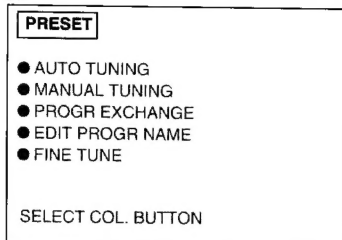

3 Press the green button [17] to select MANUAL TUNING.

The MANUAL TUNING screen appears.

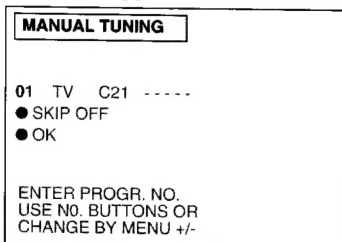


4 Press the number buttons [4] or MENU+/- [9] to select a programme position.

If you use the number buttons [4], enter a double-digit number. (e.g. for programme number 4, first press 0, then 4)

5 Press the green button [17].


Note: Use MENU +/- [9] to select "TV". You can alternatively select input sources which may be assigned to programme positions. The display changes as follows:

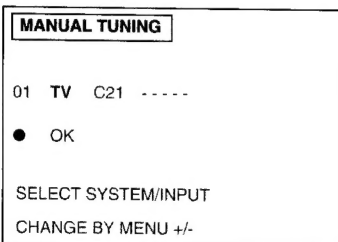

TV ↔ AV1 ↔ RGB ↔ AV2 ↔ YC2 ↔ AV3 ↔ YC3

6 Press the green button [17].

Note: If a video input source is selected in step 5, this is now stored. Refer to step 4 to tune other programme positions.

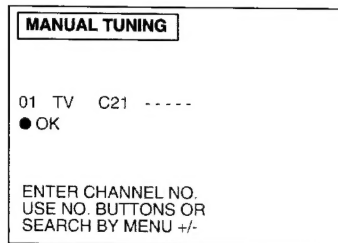

7 Press the number buttons [4] or MENU+/- [9] to select the channel number.

If you use the number buttons [4], enter a double-digit number. (e.g. for channel 23, first press 2, then 3)

Note: Programme names are automatically taken from TELETEXT if available. If not, "----" is placed in the name. Or if you select AV1, RGB, AV2, YC2, AV3 or YC3 as an input source, AV1, RGB, ... is placed.

8 Press the green button [17] to store.

Note: If you want to preset other channels, repeat steps 4 to 8.

9 Press MENU [7] twice to return to the normal screen.

Note: You can skip unused programme positions when selecting programmes with the PROGR +/- buttons [18]. Press the red button [17] to skip in step 4. However, the skipped programmes may still be called up when you use the number buttons.

Basic TV Operations

Turning the TV on and off

Turning on

Depress ⓐ [A] on the TV.

Turning off temporarily

Press ⓐ [10] on the Remote Commander.

The TV enters standby mode and the standby indicator ⓑ [B] on the front of the TV lights up.

Turning on again

Press ⓐ [3], PROGR +/- [18], or one of the number buttons [4] on the Remote Commander.

Turning off completely

Depress ⓐ [A] on the TV.

Note: It is recommended to use ⓐ [A] to turn off the TV. This could help you save energy.

Selecting TV Programmes

Press PROGR +/- [18] or press number buttons [4].

To select a double-digit number

Press +/- [5], then the number buttons [4].

Adjusting the Volume

Press ⓐ +/- [19].

Muting the Sound

Press ⓐ [1].

To resume normal sound, press ⓐ [1] again.

Displaying the On-screen Indications

Press ⓐ [14] once to display the on-screen indications.

Press again to make the indications disappear.

Note: If NICAM is transmitted regardless of whether it is stereo or mono, the two speaker symbol automatically appears on the screen for several seconds.

Operating the TV Using the Buttons on the TV

With the buttons on the TV, you can adjust or select the functions as follows:

Press ⓐ +/- [D] to adjust the volume.

Press P +/- [C] to select programme numbers or to turn the TV on from the standby mode.











Press ⓐ [F] to select the input source.

Press ⓐ [E] to preset channels automatically.

Advanced TV Operations

Operating the Menu System



 

 
 
 
You can adjust picture and sound, preset channels to programme positions and utilise other convenient features by using the following menu system.

Press;	to;
1 MENU  	enter the MENU screen
2 a colour button  	select an item you want to change (The selected item is marked by a triangle.)
3 MENU +/-   	change (or adjust) the contents of the item
4 MENU 	return to the MENU screen
5 MENU  again	return to the normal screen
Press MENU  once or twice whenever you want to return to the normal screen.	

Note: When selecting menus, the picture becomes darker. If, however, an item in the PICTURE ADJUSTMENT menu is selected, normal level of TV picture is restored to allow the best adjustment.



 
 
Adjusting the Picture and Sound





Although picture and sound are adjusted at the factory you can adjust them to suit your own taste.

- 1** Press MENU .
The MENU screen appears. 
- 2** Press the red button  to select PICTURE or the green button  to select SOUND.
- 3** Press the respective colour button  to select an item.
- 4** Press MENU +/-  to adjust.
- 5** Press MENU  twice or wait until the menu displays disappear automatically to return to the normal screen.

PICTURE ADJUSTMENT


(First Page)


PICTURE ADJUSTMENT	
▶ 
● 
● 
● 
● MORE	
SELECT COL. BUTTON ADJUST BY MENU +/-	


Press colour button	Effect
Red: For Picture 	Less — — More
Green: For Colour 	Less — — More
Yellow: For Brightness 	Darker — — Brighter
Blue: For Sharpness 	Softer — — Sharper
White:	Next page of PICTURE ADJUSTMENT

PICTURE ADJUSTMENT

(Second Page)


PICTURE ADJUSTMENT	
▶ COLOUR TONE NORMAL	
● FORMAT NORMAL	
● ROTATION NORMAL	
●  BACK	
SELECT COL. BUTTON CHANGE BY MENU +/-	

Press colour button	Effect
Red: For Colour Tone	Normal -> Warm (reddish colour tone) -> Cool (blueish colour tone)
Green: For Format	Normal: Normal setting 16:9 Wide screen effect
Yellow: For Picture Rotation (only for KV-C29")	Normal: Normal setting -5 ~ +5: Adjusts the picture slant caused by the earth magnetism
Blue: For Hue control  (only for NTSC video signals)	Reddish — — Greenish
White:	Back to first page of PICTURE ADJUSTMENT

Note: Press <>  on the Remote Commander to reset to the factory preset levels for picture and sound.

SOUND ADJUSTMENT


(First Page)

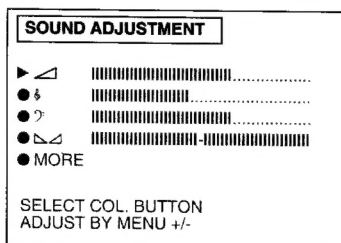

Press colour button	Effect
Red: For Volume	Less — — More
Green: For Treble	Less — — More
Yellow: For Bass	Less — — More
Blue: For Balance	More left - more right
White:	Next page of SOUND ADJUSTMENT

SOUND ADJUSTMENT

(Second Page)

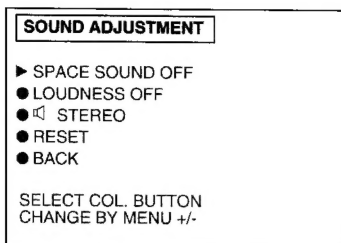

Press colour button	Effect
Red: For Space Sound	OFF: normal sound ON: for a special acoustic sound effect
Green: For Loudness	OFF: normal sounds ON: when listening to music broadcast
Yellow: For Stereo:	Stereo -> Mono A (left channel) -> Mono B (right channel) -> Mono
Blue: For Reset:	Resets to the factory preset levels for picture and sound
White:	Back to first page of SOUND ADJUSTMENT

Note: Press [8] on the Remote Commander to reset to the factory preset levels for picture and sound.


Using Special Features

With your TV you can utilise special features such as Parental Lock or Sleep Timer.

- 1 Press MENU [7].
The MENU screen appears.
- 2 Press the yellow button [17] to select FEATURES.
- 3 Press the respective colour button [17] to select an item.
- 4 Press MENU +/- [9] to change.
- 5 Press MENU [7] twice or wait until the menu displays disappear automatically to return to the normal screen.

MENU

FEATURES

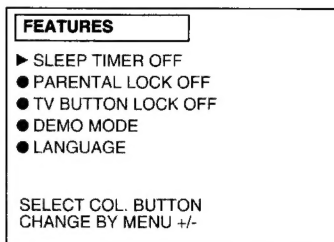

Press colour button	Effect
Red: For Sleep Timer (Automatic switch off function)	OFF -> 0:30 -> 1:00 -> 1:30 -> 2:00 (hours) After the selected time the TV set switches itself automatically into standby mode.
Green: For Parental Lock (For preventing children from watching programmes which you consider unsuitable)	OFF: Normal setting ON: The TV-channel you are watching is now blocked. In this way you can prevent undesirable broadcasts from appearing on the screen.
Yellow: For TV Button Lock	OFF: Normal setting ON: The buttons on the TV do not function anymore. (The Remote Commander still operates)
Blue: For Demo Mode	ON: A sequence of menu pictures is displayed. Press any button on the Remote Commander to stop the function.
White: For Language	The SELECT LANGUAGE screen appears.

Advanced Presetting Functions

Exchanging Programme Positions

You can exchange the programme positions to a preferred order (example: exchange programme 09 (channel C21) with programme 15 (channel C24)).

- 1 Press **MENU** **[7]**.
The MENU screen appears.



- 2 Press the white button **[17]**.
The PRESET screen appears.

- 3 Press the yellow button **[17]**.
The PROGR EXCHANGE screen appears.

PROGR EXCHANGE

01 TV C21 -----

- NEXT CHANNEL
- LAST CHANNEL

- STORE

SELECT COL. BUTTON

- 4 Press the white button **[17]** repeatedly until the desired programme number (09) appears.
- 5 Press the red or the green button **[17]** repeatedly until the desired channel number (C24) appears.
- 6 Press the white button **[17]** to store.
Now the exchange has been completed. Channel C24 is tuned in to programme 09 and channel C21 is tuned in to programme 15.
- 7 Press **MENU** **[7]** twice to return to the normal screen.

Editing Programme Names

You can edit the programme names up to five letters.

- 1 Press **MENU** **[7]**.
The MENU screen appears.



- 2 Press the white button **[17]**.
The PRESET screen appears.

- 3 Press the blue button **[17]**.
The EDIT PROGR NAME screen appears.
The first character flashes.

EDIT PROGR NAME

01 TV C21 -----

- NEXT LETTER
- STORE

CHANGE BY MENU +/-

- 4 Press **MENU** +/- **[9]** to edit the first letter.
The first letter changes as follows;

A ↔ B ↔ ... ↔ Z ↔ 0 ↔ 1 ↔ ... ↔ 9 ↔ " " (space)

- 5 Press the red button **[17]** to move to the next letter.

- 6 Repeat steps 4 to 5, until the fifth letter is chosen.

- 7 Press the green button **[17]**.
The programme name is stored, and the normal screen appears. To edit another programme name, repeat steps 1 to 7.

Fine Tuning

You can adjust the receiving condition by the FINE TUNE function.

- 1 Press **MENU** **[7]**.
The MENU screen appears.
- 2 Press the white button **[17]**.
The PRESET screen appears.
- 3 Press the white button **[17]** again.
The FINE TUNE screen appears.

FINE TUNE

- STORE
- EXIT/WATCH

ADJUST BY MENU +/-

- 4 Press **MENU** +/- **[9]** to adjust the receiving condition.
- 5 Press the red button **[17]** to store the adjustment, or press the green button **[17]** not to store.
Then the normal screen appears. If you have pressed the green button, the fine tuned condition is cancelled once you choose another programme.

Tuning in to a Channel Temporarily

You can tune in to a channel temporarily, even when it has not been preset.

- 1 Press **C** **[16]** on the Remote Commander.
The indicator "C" appears on the screen.
- 2 Enter a double-digit channel number using the number buttons (e.g. for channel 23, first press 2, then 3).
The channel appears.
However, the channel is not stored.

Teletext Operation

TV stations broadcast teletext programmes via the TV channels. For basic operation of teletext, use the simple side of the Remote Commander. For the advanced features of teletext, use the buttons indicated in green on the full function side of the Remote Commander.

Basic Teletext Operation

Switching Teletext on and off

- 1 Select the channel which carries the teletext service you wish to view.
- 2 Press **[11]** to display Teletext.
If no teletext signal is broadcast, the indication P100 is displayed on a black screen.



- 3 Input three digits for the page number using the number buttons **[4]**.
The numbers are displayed on the screen and the requested page appears in a few seconds.
Note: If you make a mistake, type in any three digits, then re-enter the correct page number.

- 4 Press **[3]** once or **[11]** twice to return to the TV mode.

Note: To change the teletext channels. First press **[3]** to return to the TV mode, then repeat steps 1 to 3.

Note: If the signal of a TV channel is weak, teletext errors may occur.

Advanced Teletext Operation

Using Fastext

With Fastext you can access pages with one button press. When a Fastext page is broadcast, a colour-coded menu will appear at the bottom of the screen. The colours of this menu correspond to the red, green, yellow and blue buttons **[6]** on the Remote Commander.

Press the corresponding colour button **[6]** on the Remote Commander which corresponds to the colour-coded menu. The page will be displayed in a few seconds.

Requesting the Index page

Press **[17]**. The Index page appears.

Accessing the next or preceding page

Press **[18]** (PAGE +) or **[19]** (PAGE -). The next or the preceding page appears on the screen.

Superimposing the teletext display on the TV picture

Press **[11]** once if you are in text mode or press **[11]** twice if in TV mode.

To return to the normal teletext display press **[11]** twice.



Preventing a teletext page from being updated or changed

Press **[2]** (HOLD). The HOLD symbol (**[2]**) appears on the screen and the selected subpage is held until you press **[11]** to cancel.

Enlarging the teletext display

Press **[13]** once to enlarge the upper half. Press twice to enlarge the lower half. Press again to restore the normal display.



Revealing concealed information (e.g. answers to a quiz)

Press **[14]** (REVEAL). The information is revealed. Press **[14]** again to conceal the information.

Watching TV while waiting for a requested page to be displayed

- 1 Request a new teletext page.

- 2 Press **[12]** (TEXT CL).
The TV programme is displayed and the symbol **[12]** is displayed at the top of the page.
Note: When the requested page is available the page number is displayed at the top of the screen.

- 3 Press **[11]** to view the page.

Note: To cancel the request

Display the teletext page, then press **[11]**. The request is now cancelled. Press **[3]** to resume TV mode.

Using the Favourite Page system

You can store up to four of your favourite teletext pages per programme with the help of the Favourite page system. In this way you have quick access to the pages you watch frequently.

Storing the Favourite Pages

- 1 Select the page you would like to store using the number buttons **[4]**.
- 2 Press **[15]** twice.
The colour prompts at the bottom of the screen flash.
- 3 Press any of the colour buttons **[6]** on the Remote Commander to store the selected page.
The page is now stored on this button.

Repeat steps 1 to 3 for the other 3 pages available.

Displaying the Favourite pages

- 1 Press **[15]**.
- 2 Press the colour button **[6]** corresponding to the colour prompt onto which the desired page is stored.
The page is requested. (It may take a few seconds to be received).

Note: Step 1 must be taken before every favourite page selection, otherwise the normal Fastext facility operates.

 
 
 
 

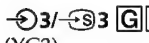 
 
Using the Time Function in the TV mode


Press **[12]** to request the time. Press again to cancel the request.



Note: This function is available only when teletext is broadcast.


Connecting Other Equipment

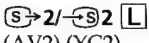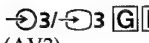 You can connect optional audio/video equipment to this TV such as VCRs, video disc players, cameras or stereo systems.

Connector	Acceptable input signal	Available output signal
 1 M (AV1/RGB)	Audio/video and RGB signal	Audio/video signal from TV Tuner
 2 /  2 L (AV2) (YC2)	Audio/video and S video signal	Audio/video signal from selected source
 3 /  3 G H (AV3)	Audio/video signal and	No outputs
 3 /  3 G I (YC3)	Audio/S video signal	


To watch a video input picture, press  2 until the desired video input appears.

 To return to the normal TV picture, press  2 repeatedly or press  3.

Note: If you have a decoder, connect it to  1 **M**.

Connecting a VCR Using the TV Aerial Terminal

Connect the aerial output of the VCR to the aerial terminal **K** of the TV. It is recommended to tune in the VCR signal to programme number "0". For details, see "Tuning in to Channels Manually" on page 6.

Note: S video input (Y/C input)  1 **L**

Video signals may be separated into Y (luminance or brightness) and C (chrominance) signals.

Separating the Y and C signals prevents them from interfering with each other and therefore improves the picture quality (especially luminance). This TV is equipped with 2 video input terminals through which these signals can be input directly.

Checking and Selecting the Input and Output Sources Using the Menu

You can display a menu screen to see which input and output source are selected. You can also change the selection using this menu.


Checking the Input and Output Sources

1 Press MENU .


 
The MENU screen appears

2 Press the blue button 7 to select INPUT/OUTPUT.

 
The INPUT/OUTPUT screen appears.

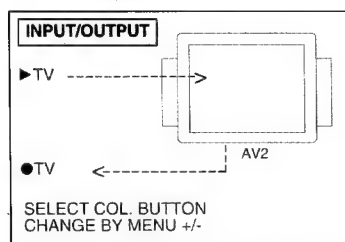


 



Selecting an Input Signal

Press the red button  7 to select INPUT. Press MENU +/-  9 to select the desired input source.


You can select among the following sources:



 
Selecting an Output Signal

The  2 /  2 connector  outputs the source input from the other connectors. Press the green button  7 to select OUTPUT. Press MENU +/-  9 to select the desired output source.

 You can select among the following sources:



Note: Press MENU  7 twice or wait until the menu displays disappear automatically to return to the normal screen.

Remote Control of Other Sony Equipment

You can use the TV Remote Commander to control most Sony remote-controlled video equipment such as: Beta, 8mm or VHS VCRs or video disc players.

Tuning the Remote Commander to the equipment

1 Set the VTR 1/2/3 MDP selector 20 according to the equipment you want to control:

VTR 1: Beta VCR

VTR 2: 8mm VCR


VTR 3: VHS VCR

MDP: Video Disc Player


2 Use the buttons 21 to operate the additional equipment.

Note: If your video equipment is furnished with a COMMAND MODE selector: set this selector to the same position as the VTR 1/2/3 MDP selector on the TV Remote Commander.

Note: If the equipment does not have a certain function, the corresponding button on the Remote Commander will not operate.

Note: When you use the  (record) button, make sure to press this button and the one to the right of it simultaneously.

Using Headphones

You can utilise headphones. Connect them to the headphone jack  to mute the sound from the speakers.

Note: You cannot control the sound adjustment except for volume.

For your information

Troubleshooting

Here are some simple solutions to problems which may affect the picture and sound.




No picture (screen is dark), no sound

- Plug the TV in.
- Press **⏻ [A]** on the TV. (If the standby indicator **[B]** is lit, press **⏻ [3]** or any number button **[4]** on the Remote Commander.)
- Check if the selected video source is on.
- Turn the TV off for three or four seconds and then turn it on again using **⏻ [A]**.

Poor or no picture (screen is dark), but good sound

- Press **MENU** **[7]** to enter the MENU screen, and press the red button **[17]**, then adjust **●** and **☼**.

Good picture but no sound

- Press  + **19**.
- If  is displayed on the screen, press  **1**.


No colour for colour programmes

- Press **MENU** **[7]** to enter the MENU screen, and press the red button **[17]**, then adjust **⊙**.


Remote Commander does not function

- Replace the battery.


If you continue to have problems, have your TV serviced by qualified personnel. Never open the casing yourself.

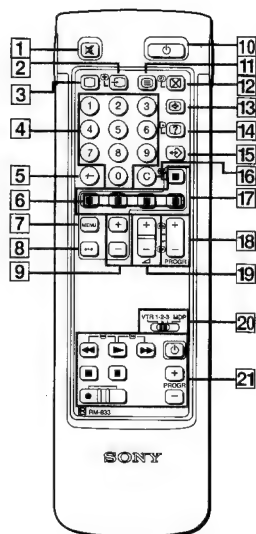

Full-Function Side

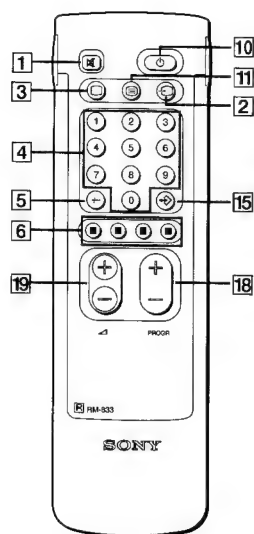


Simple Side

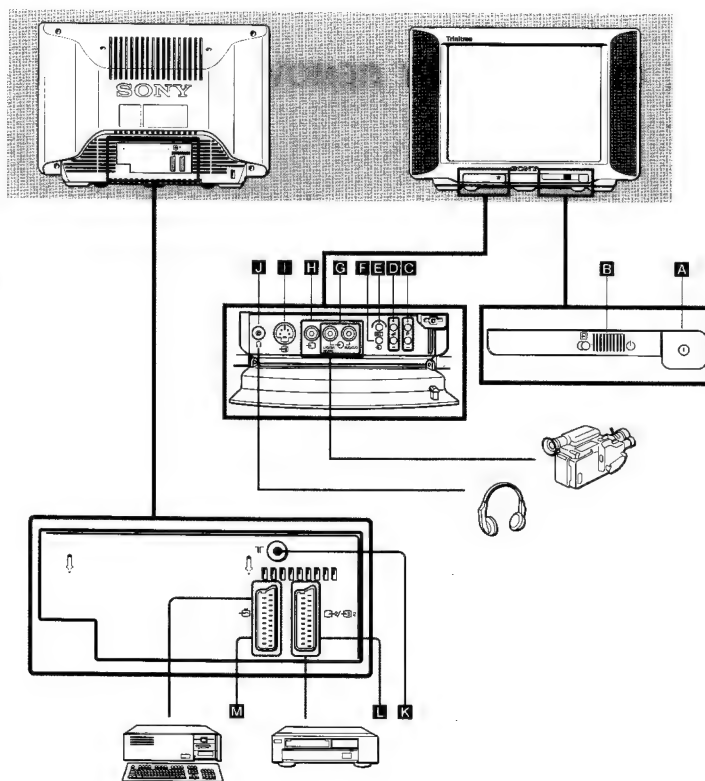


SECTION 2 DISASSEMBLY


2-1. REAR COVER REMOVAL

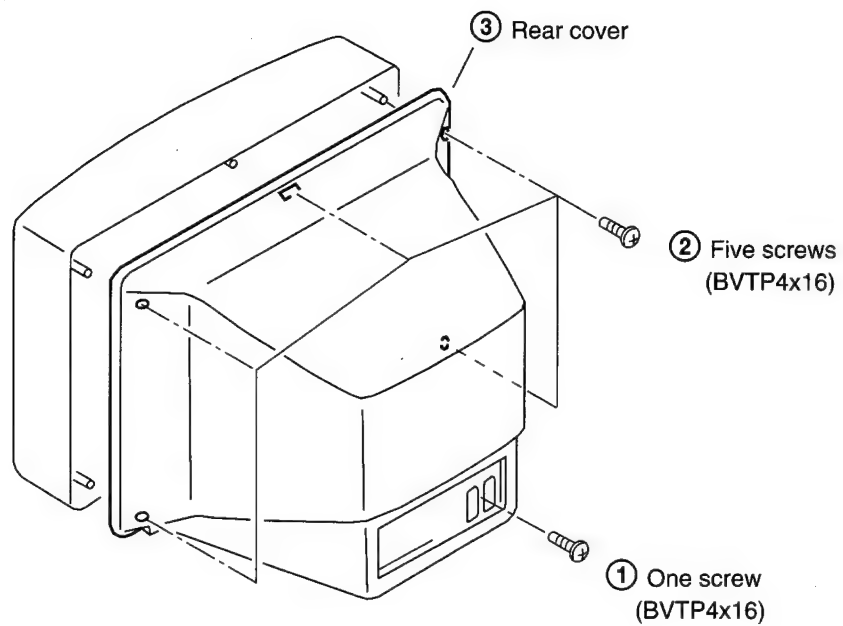

2-2. CHASSIS ASSY REMOVAL

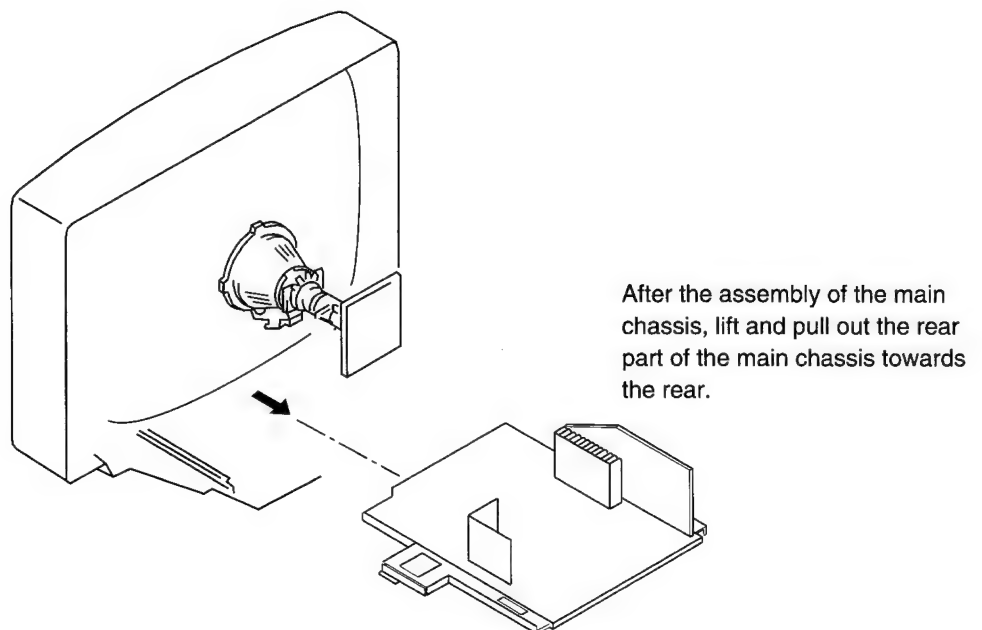


2-3. SERVICE POSITION

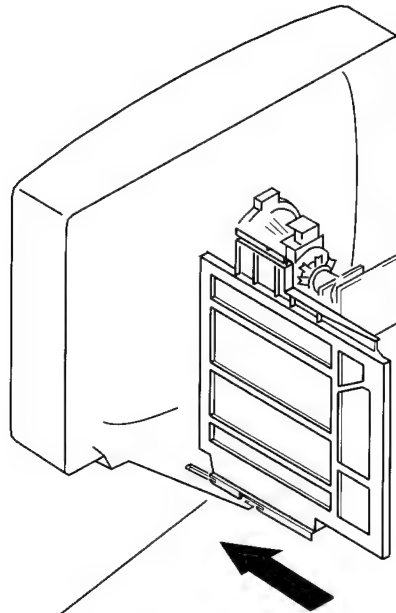


Locate the 2 slots on the edge of the chassis bracket in the locating holes and slide in the direction of the arrow


2-4. A BOARD REMOVAL

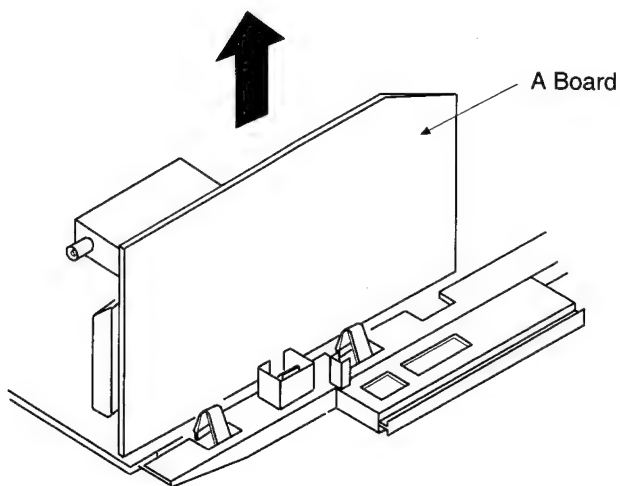

2-5. EXTENSION BOARD

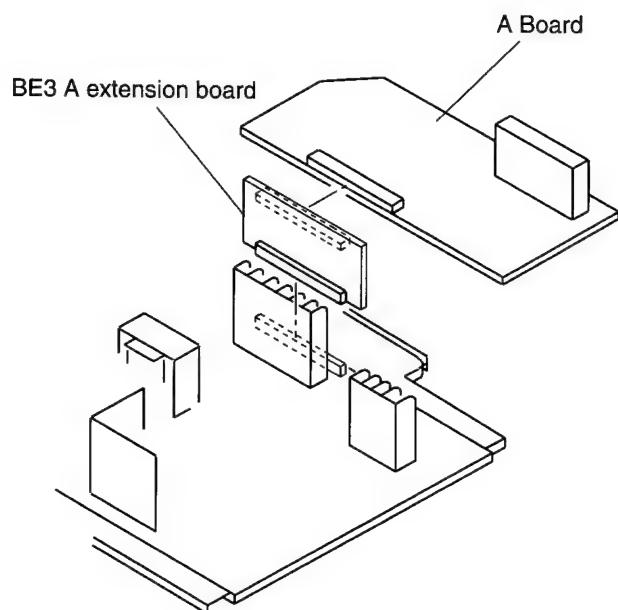


2-6. PICTURE TUBE REMOVAL

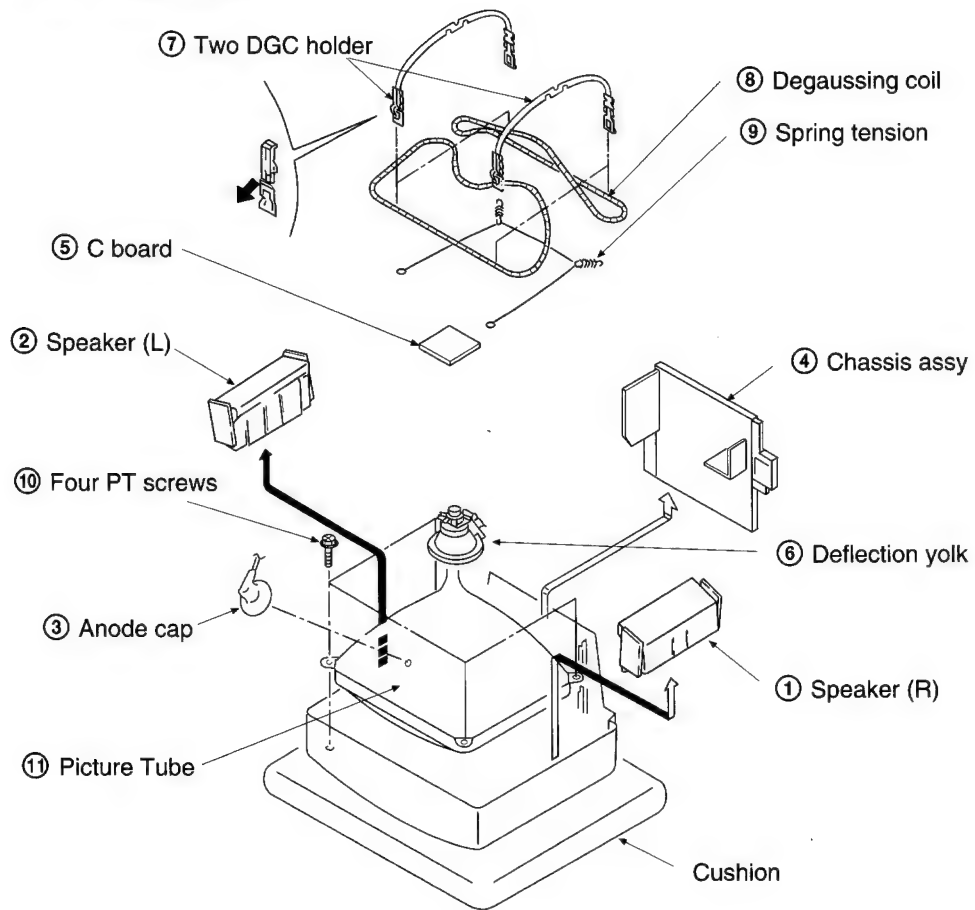

• REMOVAL OF ANODE-CAP


Note: Short circuit the anode of the picture tube and the anode cap to the metal chassis, CRT shield or carbon paint on the CRT, after removing the anode.

* REMOVING PROCEDURES.

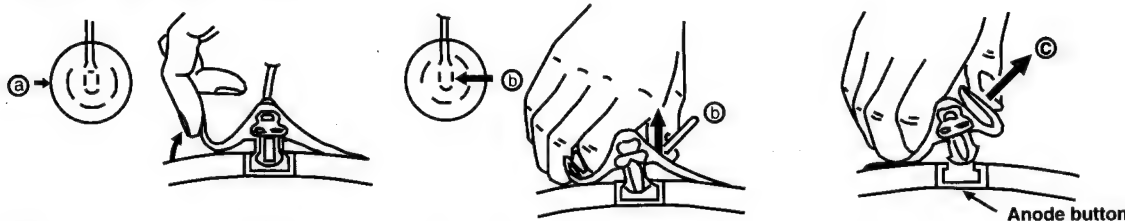

• HOW TO HANDLE AN ANODE-CAP

- ① Don't damage the surface of anode-cap with sharp shaped material !
- ② Don't press the rubber hardly not to hurt inside of anode-caps !
A metal fitting called as shatter-hook terminal is built into the rubber.
- ③ Don't turn the foot of rubber over hardly !
The shatter-hook terminal will stick out or damage the rubber.

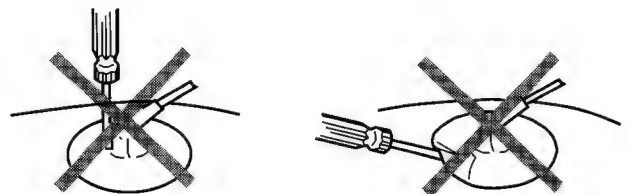

SECTION 3

SET - UP ADJUSTMENTS

- When complete readjustment is necessary or a new picture tube is installed, carry out the following adjustments.
- Unless there are specific instructions to the contrary, carry out these adjustments with the rated power supply.
- Unless there are specific instructions to the contrary, set the controls and switches to these settings :

Ⓢ Contrast 80% (or remote control normal)
 ⚙ Brightness 50%

- Carry out the following adjustments in this order :

1. Beam landing
2. Convergence
3. Focus
4. White balance

Note: Testing equipment required.

1. Color bar/pattern generator
2. Degausser
3. DC power supply
4. Digital multimeter
5. Oscilloscope

Preparation:

- In order to reduce the influence of geomagnetism on the set's picture tube, face it east or west.
- Switch on the set's power and degauss with the degausser.

3-1. BEAM LANDING

1. Input the white signal with the pattern generator.
 CONTRAST } normal
 BRIGHTNESS }
2. Set the pattern generator raster signal to red.
3. Move the deflection yoke forward and adjust with the purity control so that the red is at the center and the blue and the green take up equally sized areas on each side. (See Fig. 3-1 - 3-3)
4. Move the deflection yoke forward and adjust so that the entire screen becomes red. (See Fig. 3-1)
5. Switch the raster signal to blue, then to green and verify the condition.
6. When the position of the deflection yoke has been decided, fasten the deflection yoke with the screws.
7. If the beam does not land correctly in all the corners, use a magnet to adjust it. (See Fig. 3-4)

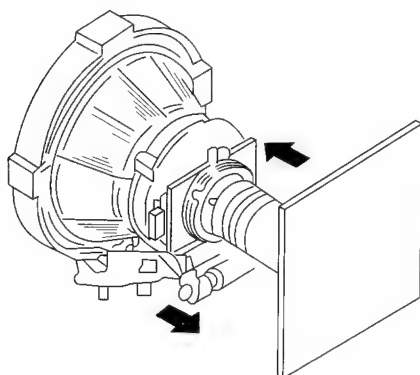


Fig. 3-1

Fig. 3-2

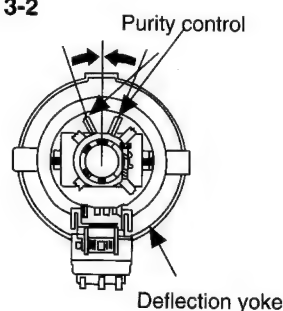


Fig. 3-3

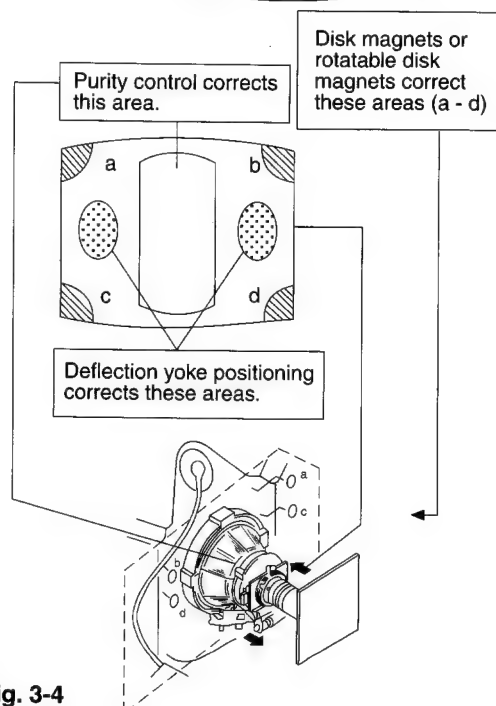
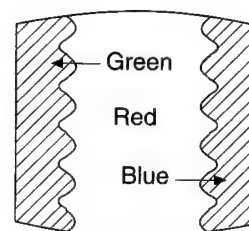



Fig. 3-4

3-2. CONVERGENCE

Preparation:


- Before starting this adjustment, adjust the focus, horizontal size, and vertical size.
- Minimize the brightness setting.
- Provide a dot pattern.

(1) Horizontal and vertical static convergence




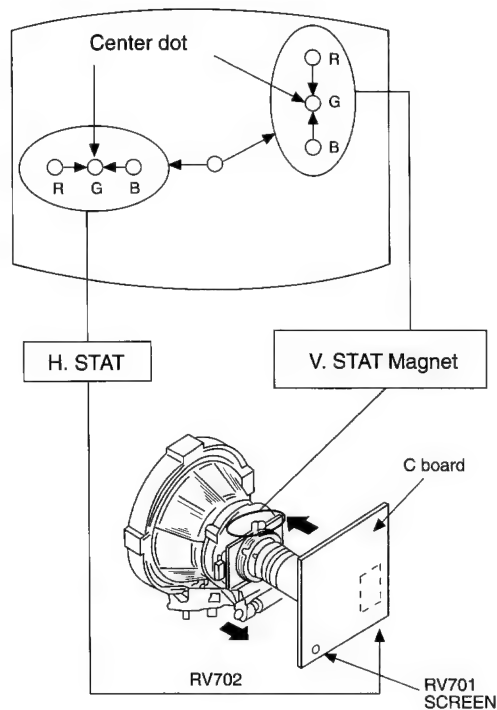


1. (Moving horizontally), adjust the H.STAT control so that the red, green, and blue points are on top of each other at the center of the screen.
2. (Moving vertically), adjust the V.STAT magnet so that the red, green, and blue points are on top of each other at the center of the screen.
3. If the H.STAT variable resistor cannot bring the red, green, and blue points together at the center of the screen, adjust the horizontal convergence with the H.STAT variable resistor and the V.STAT magnet in the manner given below.
(In this case, the H.STAT variable resistor and the V.STAT magnet influence each other)



- Tilt the V.STAT magnet and adjust the static convergence by opening or closing the V.STAT magnet.

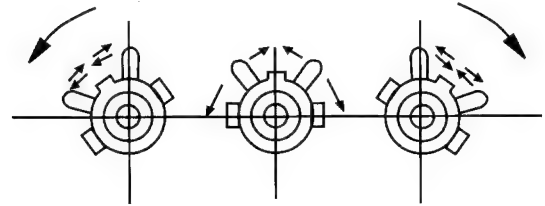

4. If the V.STAT magnet is moved in the direction of the (a) and (b) arrows, the red, green, and blue points move as shown below.

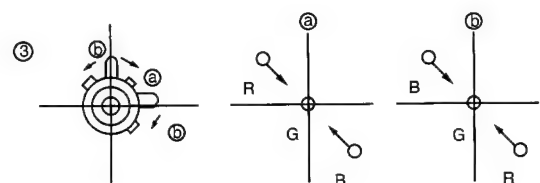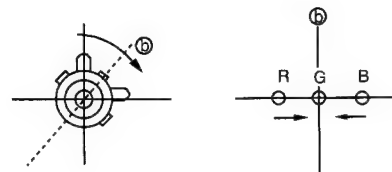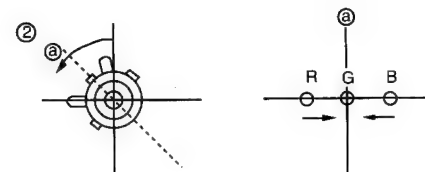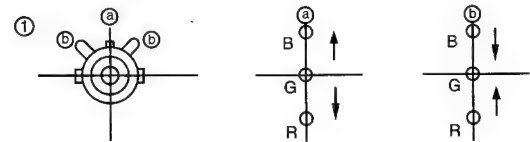

- Operation of BMC (Hexapole) Magnet

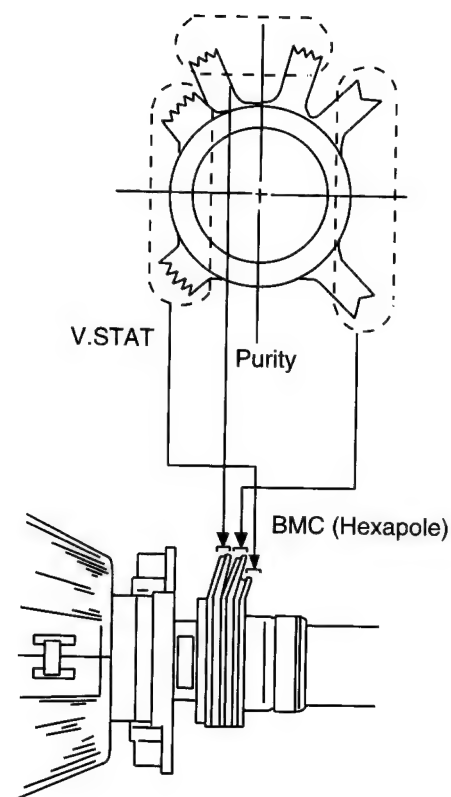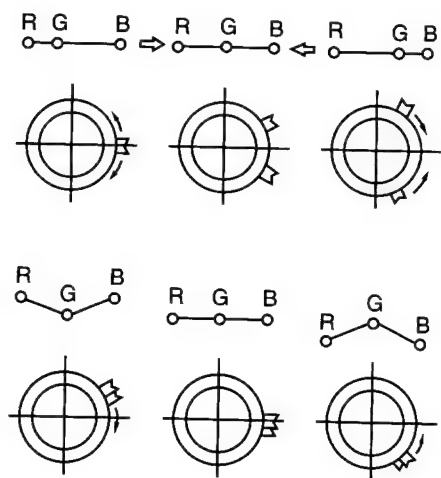


- The respective dot position resulting from moving each magnet interact, so be sure to perform adjustment while tracking.
Use the H.STAT VR to adjust the red, green, and blue dots so they coincide at the center of the screen (by moving the dots in the horizontal direction).

(2) Dynamic convergence adjustment.

Preparation:



- Before starting this adjustment, adjust the horizontal static convergence and the vertical static convergence.
- Slightly loosen the deflection yoke screws.

- Remove the deflection yoke spacer.
- Move the deflection yoke as shown in the figure below and optimize the convergence.
- Tighten the deflection yoke screws.
- Re-install the deflection yoke spacer.

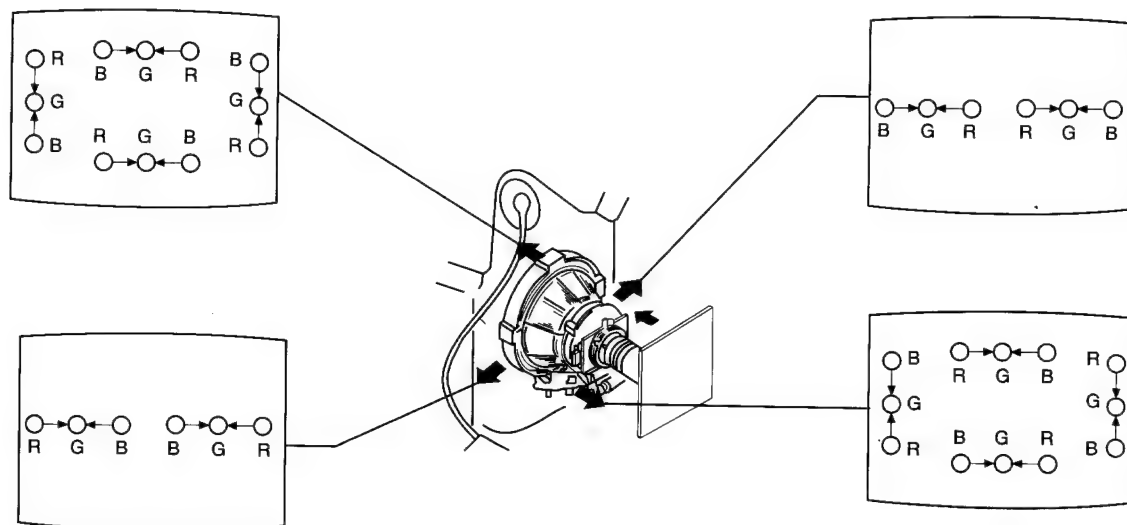


(3) Screen corner convergence.

If you are unable to adjust the corner convergence properly, correct them with the use of permalloy assemblies.

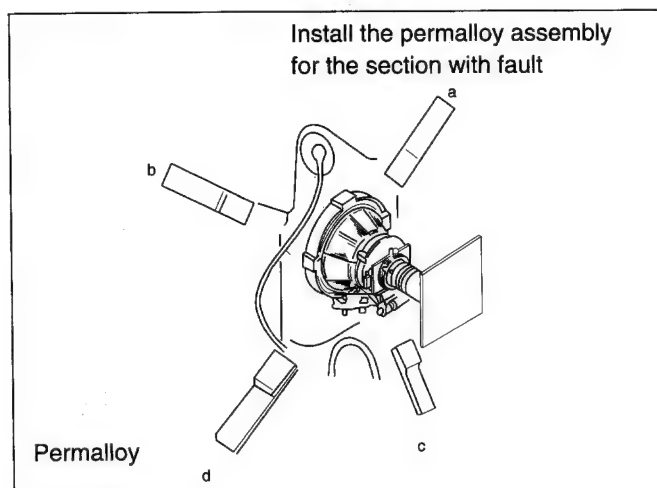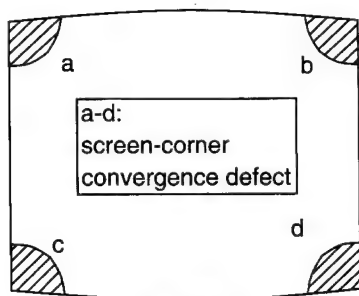**3-3. Focus**

Adjust the focus to optimize the screen.

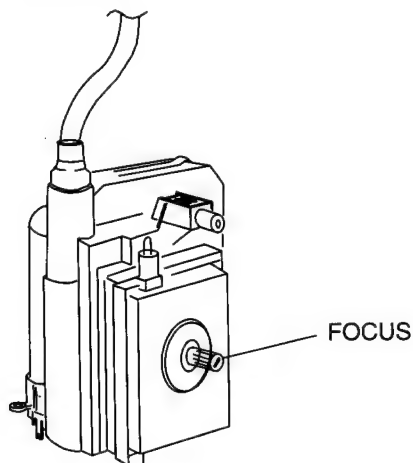**3-4. WHITE BALANCE****Screen G2 Setting**

1. Input the dot signal from the pattern generator.
2. Set the picture brightness control to its lowest level.
3. Apply 180V DC to the R,G, and B cathodes with an external power supply.
4. While watching the picture, adjust G2 control RV701 (Screen) to the point just before the return lines disappear.

White balance adjustment

1. Receive an all-white signal.
2. Enter into service mode. (Refer to the section 4 "Electrical Adjustment" on how to enter service mode.)
3. Select TDA8366 1 on menu.

DEVICE : TDA8366 1

STAT : 12

☐ NEXT
☐ PREVIOUS
☐ OK

USE COLOUR KEYS
 SONY TEST MENU.

4. Press the White button on the Remote Commander to enter into the device Menu.
5. Press the Red button 10 times "Next" "Next" "Next" to select HWB RED, adjust to 32.
6. Press the Red button to select HWB GREEN, adjust with the + and - menu buttons so that the white balance becomes optimum.
7. Press the Red button to select HWB BLUE, adjust with the + and - menu buttons so that the white balance becomes optimum.
8. Press the TV button twice on the Remote Commander to store the data and return to TV operation.

SECTION 4


CIRCUIT ADJUSTMENTS

4-1. ELECTRICAL ADJUSTMENTS

Service adjustment to this model can be performed with the supplied remote commander RM-833.

HOW TO ENTER INTO SERVICE MODE

1. Turn on the main power switch of the set and enter into standby mode.
2. Press the following sequence of buttons on the Remote Commander.

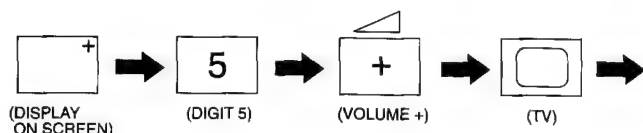

“TT” will appear in the top right corner of the screen. Other status information will also be displayed.

3. Press the MENU button on the Remote Commander to obtain the menu on the screen.

DEVICE NAME

STAT : xxxx

☐ NEXT

☐ PREVIOUS

☐ OK

USE COLOUR KEYS
SONY TEST MENU.

4. Press the Red (Next) and Green (Previous) buttons to select the device corresponding to the adjustment item from the table. Then press the White button (OK).

DEVICE NAME

00 ADJUSTMENT : xxx

☐ NEXT

☐ PREVIOUS

SELECT COL.BUTTON
CHANGE BY MENU +/-

5. Press the Red (Next) or Green (previous) buttons to select the adjustment item. Then press the and buttons to change the data to comply with each standard.
6. Turn off the power to quit the service mode when adjustments are completed.

Initial Conditions for setup of TDA8366, TDA6612 and SAA7283. (Stereo Models Only)

TDA8366 1	INIT VALUE	TDA8366 2	INIT VALUE
Hue	31	Interlace	00
H Shift	Adj	Sync Mode	00
H Size	Adj	Col Dec	00
Pin Amp	Adj	Vert Div	00
Corn Pin	Adj	Vid ID	00
Tilt	Adj	EHT Track	01
V.Linear	Adj	En V Grd	00
V.Size	Adj	Serv Blk	00
S.Corr	Adj	OVF Mode	00
V.Cent	Adj	Aspect R	00
HWB Red	Adj	Start Freq	00
HWB Green	Adj	Y/C Input	00
HWB Blue	Adj	PAL/NTSC	00
Peaking	8	Xtal PLL	00
Bright	32	Y Delay	07
Colour	32	RGB Blk	00
Picture	37	Noise Cor	00
AGC Set	00	Fast Blk	01
Src Sel 1	00	AFC Wind	00
Src Sel 2	00	IF Sensy	00
Time Con	03	Mod Std	00
Xtal Ind	03	Vid Mute	01
FF Freq	02		

TDA6612	INIT VALUE	TDA6612	INIT VALUE
MPX Per	00	Mute 2	01
Quasi St	00	C1/2LS	00
Bass Exp	00	C1/2KH	00
H Pulse	00	Mono	01
Matrix St	00	Scart	00
Bypass	00	Scart D	00
Vol L Sp	07	AM	00
Vol R Sp	07	SAA7283	INIT VALUE
Vol HP	00	Mon M1/M2	01
PII Sync	00	DM Select	01
Mute 3	01	SSWIT 123	07
Treble	08	Port 2	00
Bass	09	Mute Def	00
X Talk Adj	Adj	AMDIS	00
Mute 1	00	E Max	80
		E Min	01

4-2. TEST MODE 2 :

Is available by pressing Test button twice, OSD 'TT ' appears. The functions described below are available by pressing the two numbers. To release the Test Mode 2, press 0 twice, or switch the TV into Stand-by Mode.

00	switch Test Mode 2 off
01	picture maximum
02	picture minimum
03	Volume 35%
04	Volume 50%
05	Volume 65%
06	Volume 80%
07	Ageing Condition (Volume min., Picture max., Brightness max.
08	Shipping Condition (Analog Values are RESET due to factory setting, Prog 1 is selected, TT Mode is switched off)
09	"Menu" Flag request
10	Tenth entry is deleted
11	dummy
12	dummy
13	dummy
14	Forced AV 16:9 detection on/off
15	Read factory setting from NVM Reads Volume, Balance, Treble, Bass, Brightness, Contrast, Hue, Sharpness, Colour values from ROM to the actual used values (Last Power Memory)
16	Save actual used values as RESET values Memorize actual used values Balance, Treble, Bass, Hue, Sharpness at RESET position in NVM.
17	Preset Label for AV Sources
18	RGB Priority on/off
19	Clear all preset labels
20	Tenth entry is deleted
21	Sub Contrast
22	Sub Colour
23	Sub Brightness
24	Set destination = U RGB Priority = Off
25	Set destination = D RGB Priority = Off
26	Set destination = B RGB Priority = On
27	Set destination = K RGB Priority = Off
28	Set destination = L RGB Priority = Off
29	Set destination = E RGB Priority = Off

30	Tenth entry is deleted
31	Set Destination = A RGB Priority = On
32	dummy
33	Auto AGC
34	N/S Pin Adjust
35	Manual AGC Adjust
36	dummy
37	dummy
38	To Activate Rotation Coil Adjustment
39	Check Rotation Coil Adjustment
40	Tenth entry is deleted
41	Re-initialise NVM
42	Production use only
43	Initialise Geom Settings
44	Initialise all favorite pages = 100
45	Channel locks = off
46	IR Channel Presetting Mode The channel presetting can be done by a Special IR Transmitter (Ver 2 and above software only)
47	dummy
48	Set NVM testbyte to 44h
49	Erase the NVM Testbyte (this byte detects already stored NVM's) After selecting this function, switch TV Off and On -> the NVM will be preset by µ-Controller.

In Test Mode the Menu display is switchable by the Speaker-Off button.

Note : For Test Modes 41 - 49 it is necessary to ensure that the TV is set to Prog 59.

SUB BRIGHTNESS ADJUSTMENT


1. Input a Phillips pattern.
2. Enter into service mode and press 23.
3. Adjust data so that 0-IRE of grey scale and CUT-OFF 20-IRE are only slightly visible on screen.

SUB CONTRAST ADJUSTMENT

1. Input a video that contains a small 100% area on a Black Background.
2. Enter into service mode and press 01 to have PIC max followed by 21.
3. Connect oscilloscope to pin ① of CN703 (R OUT) and adjust HWB Red data of TDA8366 1 to obtain 2.3Vp-p.

SUB COLOR ADJUSTMENT

1. Input a PAL color bar signal.
2. Connect an oscilloscope to pin ③ of CN703 (B OUT) on the C board.
3. Enter into service mode and press 22.
4. Adjust data so that the right sides of the waveform are set to the same level.

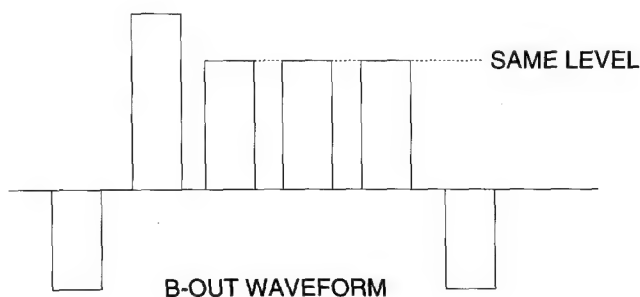**STEREO SEPARATION ADJUSTMENT**

1. Input a 1KHz stereo signal to the L-ch and a 400Hz stereo signal to the R-ch.
2. Enter into service mode and select the "Test Menu" to be TDA6612.
3. Select the Stereo Xtalk Adjustment Menu, by using the Red (Next) and Green (Previous) buttons.
4. Monitor the Scart 1 L-channel output and adjust the data so that the R-channel sound is not detected in the L-channel.

I.F. COIL ADJUSTMENT (T101) - B/G, D/K, I AND L STANDARD FOR CONTINENTAL MODELS.

1. Apply a 38.9MHz signal at 100dBuV to the input of SWF101.
2. Receive a channel so that the I.C. is selected for negative modulation.
3. Measure the voltage at the AFT test point and adjust (T101) to obtain 2.4V +/- 0.2V.


L, BAND 1 ADJUSTMENT (RV102) - L, STANDARD FOR FRENCH MODELS.

1. Apply a 33.95MHz signal at 100dBuV to the input of SWF101.
2. Receive a channel so that the I.C. is selected for positive modulation and system L band 1.
3. Measure the voltage at the AFT test point and adjust (RV102) to obtain 2.4V +/- 0.2V.

Note : Only adjust RV102 after T101 has been correctly adjusted.

AGC ADJUSTMENT

1. Receive an off- air signal.
2. Enter the service mode, ("Test" "Test") and 35.
3. Adjust the data so that there is no snow or cross - modulation visible on the screen.
4. Change the receiving off-air channel, and confirm the above status.

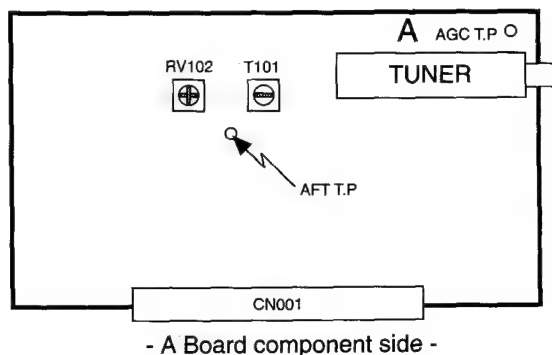


DEFLECTION SYSTEM ADJUSTMENT

1. Enter into service mode.
2. Select and adjust each item in order to obtain the optimum image.

Item No	Adjustment item.	Data Amount
03	H SHIFT	ADJ.
04	H SIZE	ADJ.
05	PIN AMP	ADJ.
06	CORR PIN	ADJ.
07	TILT	ADJ.
08	V LINEAR	ADJ.
09	V SIZE	ADJ.
0A	S CORR	ADJ.
0B	V CENTER	ADJ.

Note : V ANGLE is adjusted by a Variable Resistor on the 'D' Board (RV301)

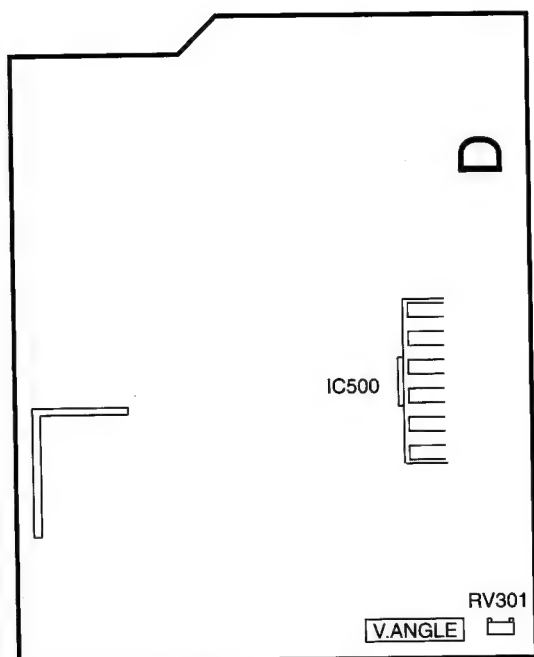


- D Board Component Side -

V SIZE



 
V CENTER




S CORR



 
V LIN



H SIZE

 


PIN AMP

 


TILT



 CORR PIN



V ANGLE

 

H SHIFT



4-3. BE-3C SELF DIAGNOSTIC SOFTWARE

The identification of errors within the BE-3C chassis is triggered in 1 of 2 ways :- 1: Bus busy or 2: Device failiure to respond to IIC. In the event of one of these situations arrising the software will first try to release the bus if busy (Failiure to do so will report with continous flashing LED) and then communicate with each device in turn to establish if a device is faulty. If a device is found to be faulty the relevant device number will be displayed through the led (Series of flashes which must be counted) See Table 1., on fatal errors are reported with this method.


If a fatal error is found the set will simply stay in whichever state it was when the error ocured, but if a non fatal error occurs the set will try to continue operation.

Table 1


Device	LED Error Count	Fatal Error
NVM	2 .. 9	√
Teletext	10	
Jungle	11	√
Video_sw	12	
Tuner	13	√
Nicam	14	
Audio_cont	15	√

Flash Timing Example : e.g. error number 3.

 Stby LED



5-2. CIRCUIT BOARDS LOCATION

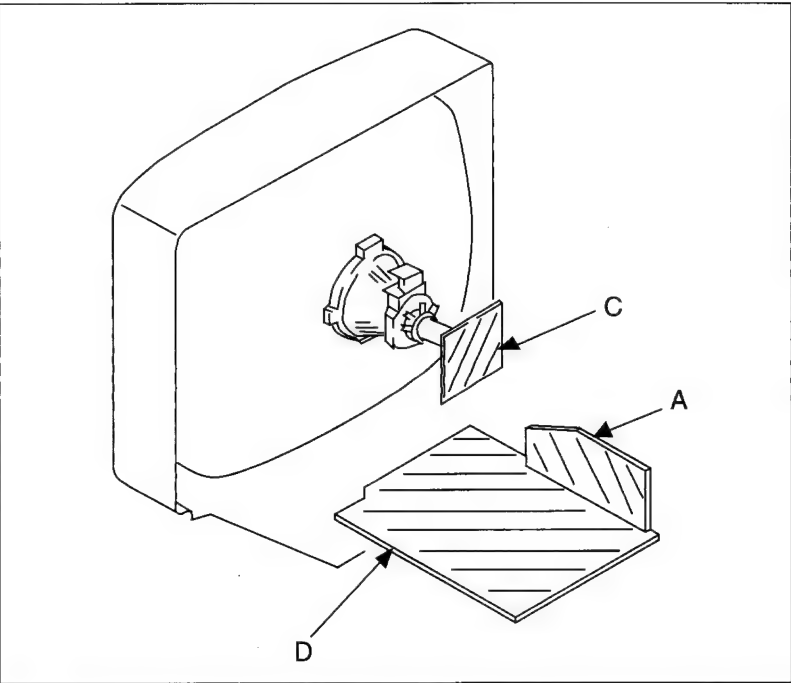








5-3. SCHEMATIC DIAGRAMS AND PRINTED WIRING BOARDS


Note :

 - All capacitors are in μF unless otherwise noted. pF : $\mu\mu\text{F}$ 50WV or less are not indicated except for electrolytic and tantalums.
- All resistors are in ohms.
 $k = 1000$, $M = 1000K$
- Indication of resistance, which does not have one for rating electrical power, is as follows.

 
Pitch : 5 mm
Rating electrical power $\frac{1}{4}$ W



-  : nonflammable resistor.
-  : internal component.
-  : panel designation, or adjustment for repair.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
-  : earth - ground.
-  : earth - chassis.
-  : no mounted.

Note : The components identified by shading and marked  are critical for safety. Replace only with the part number specified.

Note : Les composants identifiés par une trame et une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.


Reference information

RESISTOR	: RN	METAL FILM
	: RC	SOLID
	: FPRD	NONFLAMMABLE CARBON
	: FUSE	NONFLAMMABLE FUSIBLE
	: RS	NONFLAMMABLE METAL OXIDE
	: RB	NONFLAMMABLE CEMENT
	: RW	NONFLAMMABLE WIREWOUND
COIL	: 	ADJUSTABLE RESISTOR
	: LF-8L	MICRO INDUCTOR
CAPACITOR	: TA	TANTALUM
	: PS	STYROL
	: PP	POLYPROPYLENE
	: PT	MYLAR
	: MPS	METALIZED POLYESTER
	: MPP	METALIZED POLYPROPYLENE
	: ALB	BIPOLAR
	: ALT	HIGH TEMPERATURE
	: ALR	HIGH RIPPLE


- Readings are taken with a colour-bar signal input.
- Readings are taken with 10M digital multimeter.
- Voltages are dc with respect to ground unless otherwise noted.
- Voltage variations may be noted due to normal production tolerances.
- All voltages are in V.
- Circled numbers are waveform references.
-  : B+ bus.
-  : signal path. (RF)

5-4. SEMICONDUCTORS


BA7046F

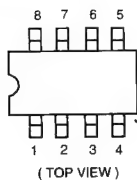


CF70200FN-R
CF70203FN-F
CF70205FN-R

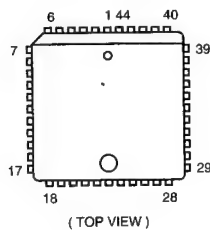


CF72416DW-R
TDA8395T

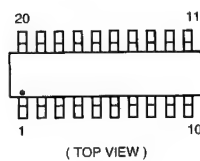


CXA1855Q

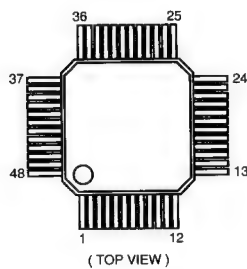


CXP85340A
SAA7283T
TDA8366T

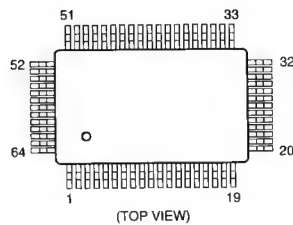


HD14053BFP
MC14053BF

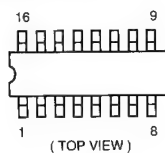

 
LM2940CT-5.0
LM2940T-9.0
MCT7812CT
TA7812S
 μ PC2405HF




LM393P
TDA2822M
 μ PC393C

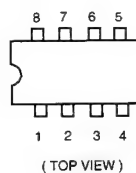


MN1382S

 


SBX1790-51

 


SE135N-LF12

 


STR-S6708

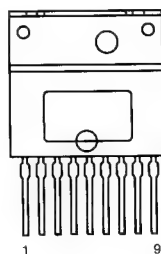


STV9379

 


ST24E32M6TR

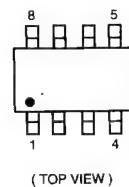


TDA4665T

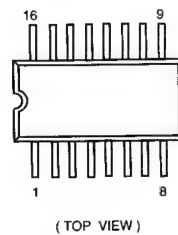


TDA6612-5X-GEG
TDA6622-5X-GEG

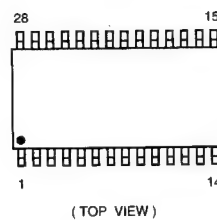

TDA7264

 


TDA9813T
TDA9814T

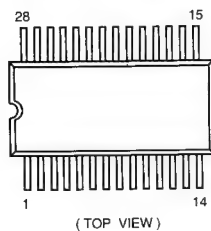

TL750L05CLPR



 
BF871




DTA144ES
DTC114ES
DTC143TS
DTC144ES



 DTC114EK
DTC144EK
2SA1037K
2SA1162-G
2SC2412K




IMX1

 

JA101
JC501
2SA1091-O
2SA733-K
2SC2389S-R
2SC2808S-R

 


MPA502T
2SC3779C


2SC4927-01



D4SB60L



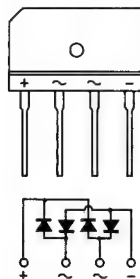


TLP721-GR

 


AU-01Z-V1 FML-G12S
 EG-1Z-V1 GP08D
 EGP20G RGP02
 EL1Z RGP10GPKG23
 EL1Z-V1 RGP15GPKG23
 EM1-V1 RU3YX
 EU-1-V1 RU4DS
 EU-1Z

  
MTZJ-3.6A MTZJ-9.1C
 MTZJ-3.9B RD3.9ESB2
 MTZJ-5.1B RD5.1ESB2
 MTZJ-5.6B RD5.6ESB2
 MTZJ-6.8C RD6.8ESB2
 MTZJ-7.5C RD7.5ESB2
 MTZJ-9.1 RD9.1ESB3
 MTZJ-9.1A 1SS133

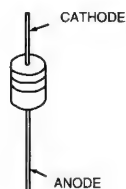2SA1667
2SC3852A

 
2SC2688-LK





BAS216
 DTZ33B
 MA8330
 1SS355
 1SV214

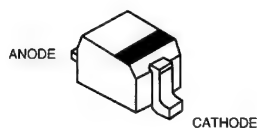


FMS-3FU

 


2SC2785-HFE

  DAN202K
UMZ12N


SLA-570KT3F

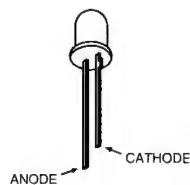2SC4793
2SD1763A

 
DA204K



6-1. CHASSIS

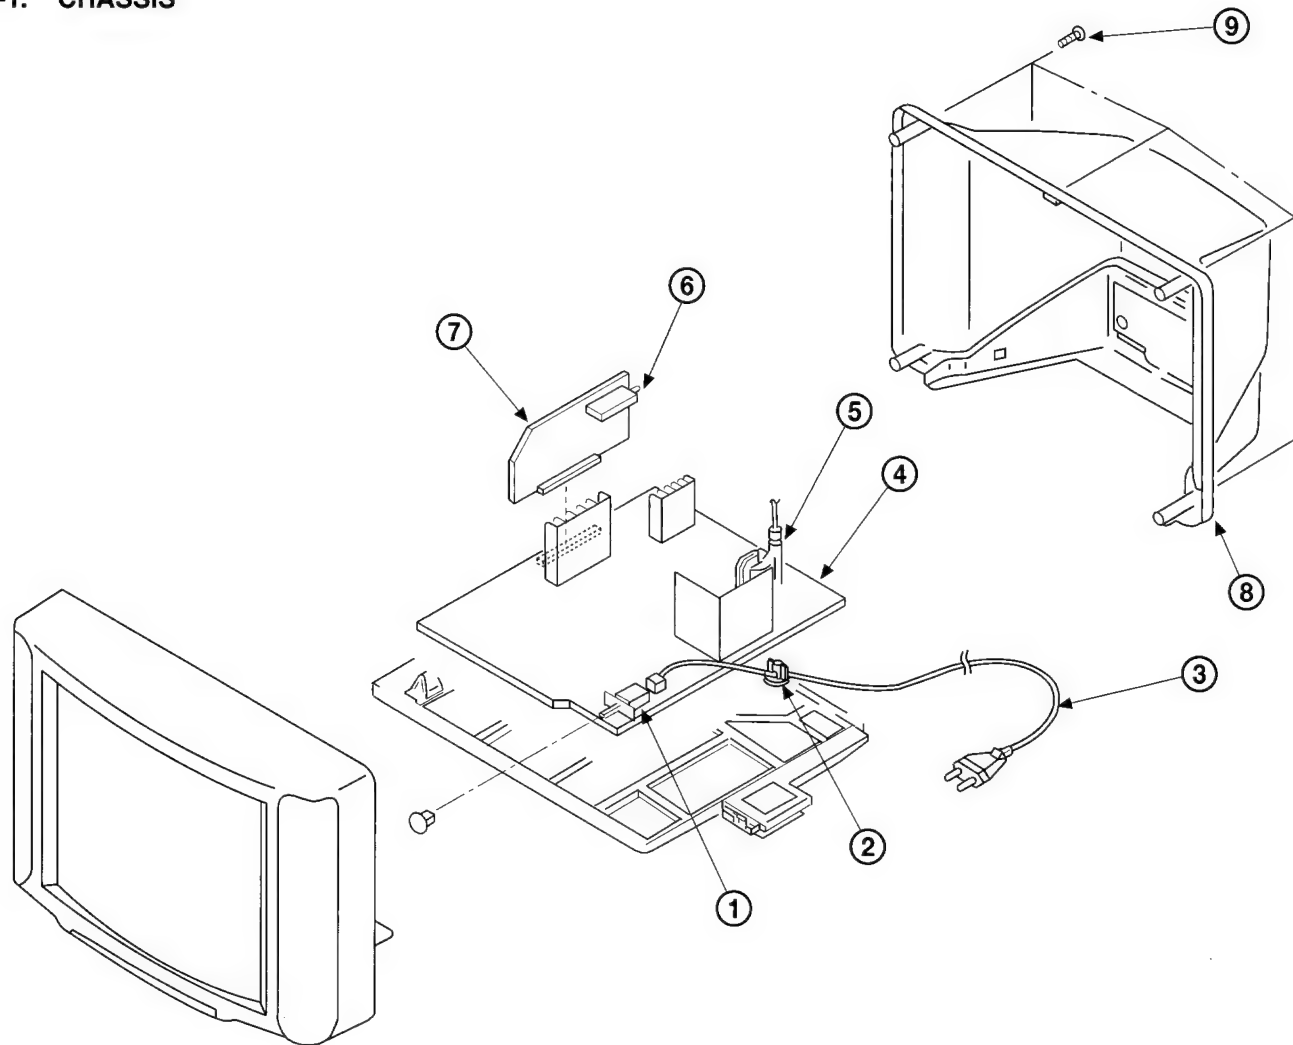

6-2. PICTURE TUBE

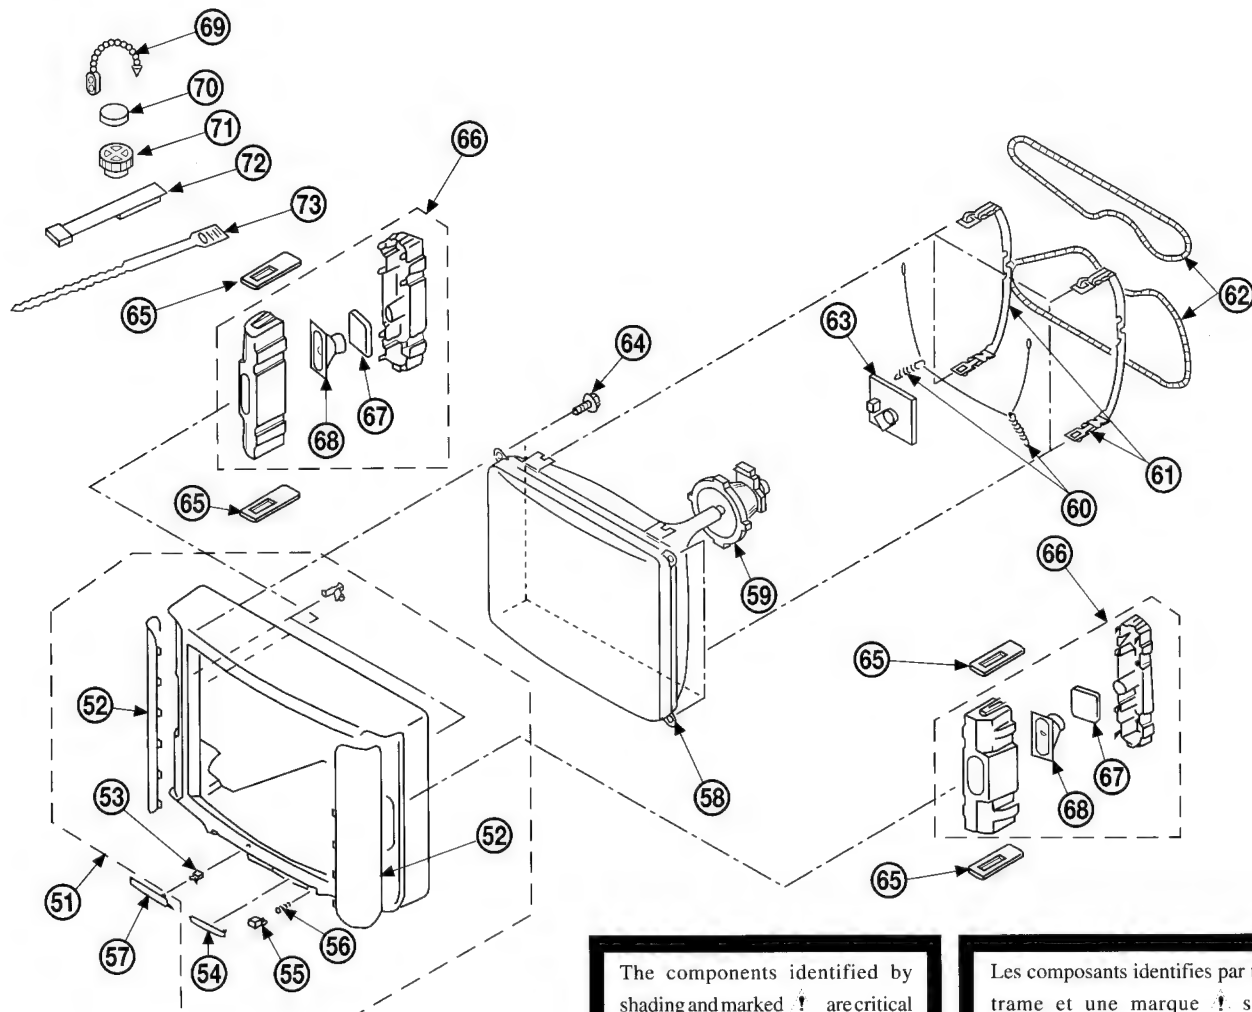


The components identified by shading and marked ! are critical for safety.
Replace only with the part number specified.

Les composants identifiés par une trame et une marque ! sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

SERVICE MANUAL

BE-3C CHASSIS

MODEL	COMMANDER	DEST.	CHASSIS NO.	MODEL	COMMANDER	DEST.	CHASSIS NO.
KV-C2901A	RM-833	Italian	SCC-G81N-A	KV-C2909D	RM-833	AEP	SCC-H62B-A
KV-C2903B	RM-833	French	SCC-G85L-A	KV-C2903E	RM-833	Spanish	SCC-G82M-A
KV-C2908B	RM-833	French	SCC-H61A-A	KV-C2908E	RM-833	Spanish	SCC-H63A-A
KV-C2909B	RM-833	French	SCC-H61B-A	KV-C2909E	RM-833	Spanish	SCC-H63B-A
KV-C2901D	RM-833	AEP	SCC-G77N-A	KV-C2901K	RM-833	OIRT	SCC-H68A-A
KV-C2908D	RM-833	AEP	SCC-H62A-A	KV-C2909K	RM-833	OIRT	SCC-H68B-A

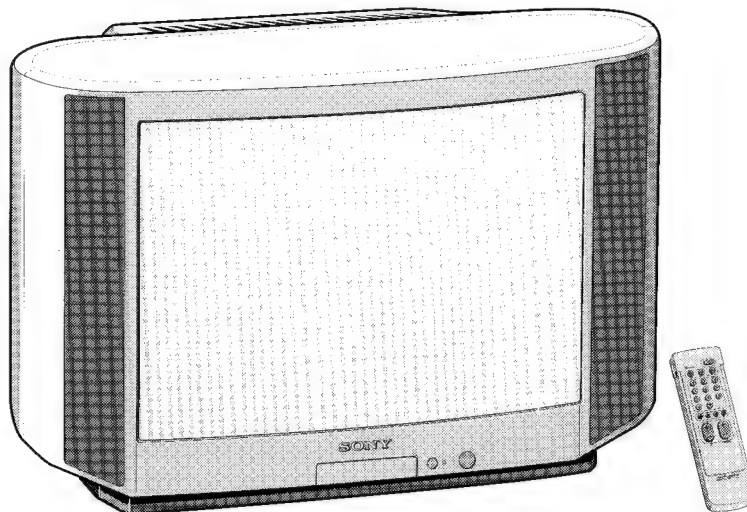

TRINITRON® COLOR TV
SONY®

ITEM MODEL	Television System	Stereo System	Channel Coverage	Color System
AEP	B/G/H, D/K	GERMAN Stereo	PAL B/G/H VHF:E2-E12 UHF:E21-E69 CABLE TV (1):S1-S41 CABLE TV (2):S01-S05, M1-M10, U1-U10 ITALIA VHF:A-H2 (C) D/K VHF:R01-R12 UHF:R21-R69	PAL, SECAM NTSC4.43, NTSC3.58 (VIDEO IN)
Italian	B/G/H	GERMAN Stereo	ITALIA VHF:A-H2 PAL B/G VHF:E2-E12 UHF:E21-E69 CABLE TV (1):S1-S41 CABLE TV (2):S01-S05, M1-M10, U1-U10	PAL NTSC4.43, NTSC3.58 (VIDEO IN)
French	B/G/H, L, I	GERMAN / Nicam Stereo	L VHF:F02-F10 UHF:F21-F69 CABLE:B-Q S21-S44 B/G/H VHF:E2-E12 UHF:E21-E69 CABLE TV (1):S1-S41 CABLE TV (2):S01-S05, M1-M10, U1-U10 ITALIA VHF:A-H2 (C) I UHF:B21-B69	PAL, SECAM NTSC4.43, NTSC3.58 (VIDEO IN)
Spanish	B/G/H	GERMAN / Nicam Stereo	PAL B/G/H VHF:E2-E12 UHF:E21-E69 CABLE TV (1):S1-S41 CABLE TV (2):S01-S05, M1-M10, U1-U10 ITALIA VHF:A-H2	PAL, SECAM NTSC4.43, NTSC3.58 (VIDEO IN)
OIRT	B/G/H, D/K	GERMAN Stereo	B/G/H VHF:E2-E12 UHF:E21-E69 CABLE TV (1):S1-S41 CABLE TV (2):S01-S05, M1-M10, U1-U10 ITALIA VHF:A-H2 (C) D/K VHF:R01-R12 UHF:R21-R69	PAL, SECAM NTSC4.43, NTSC3.58 (VIDEO IN)

MODEL	Italian	French	AEP	Spanish	OIRT
Power Consumption	95W	118Wh	118Wh	119Wh	118Wh

SPECIFICATIONS

Picture Tube Hi-Black Trinitron
Approx. 72 cm (29 inches)
(Approx. 68 cm picture measured diagonally)
110° -deflection

Input/Output Terminals

[REAR]

- Ⓔ-1 21-pin Euro connector (CENELEC standard)
 - inputs for audio and video signals
 - inputs for RGB
 - outputs of TV video and audio signals
- Ⓔ-2/Ⓔ-3 2 21-pin Euro connector
 - inputs for audio and video signals
 - inputs for S video
 - outputs for audio and video signals (selectable)

[FRONT]

- Ⓔ-3 Video input - phono jack
- Ⓔ-3 Audio inputs - phono jacks
- Ⓔ-3S video input 4-pin DIN
- Ω Headphone jacks : stereo minijack
- Sound output 2 x 15W (Music power)
- Dimensions Approx. 794x567x530 mm
- Weight Approx. 44kg
- Supplied accessories RM-833 Remote Commander (1)
IEC designation R6 battery (1)
- Other features NICAM, FASTEXT, TOPTEXT.



[RM-833]

- Remote control system infrared control
- Power requirements 1.5V dc
1 battery IEC designation R6 (size AA)
- Dimensions Approx. 65x225x21 mm (w/h/d)
- Weight Approx. 157g (Not including batteries)

Design and specifications are subject to change without notice.

Item	Model name	KV-C2901A	KV-C2903B KV-C2908B KV-C2909B	KV-C2901D KV-C2908D KV-C2909D	KV-C2903E KV-C2908E KV-C3909E	KV-C2901K KV-C2909K
Pal Comb		OFF	OFF	OFF	OFF	OFF
PIP		OFF	OFF	OFF	OFF	OFF
RGB Priority		ON	ON	OFF	OFF	OFF
Woofer Box		OFF	OFF	OFF	OFF	OFF
Scart 1		ON	ON	ON	ON	ON
Scart 2		ON	ON	ON	ON	ON
Front in (3)		ON	ON	ON	ON	ON
Scart 4		OFF	OFF	OFF	OFF	OFF
Projector		OFF	OFF	OFF	OFF	OFF
AKB in 16:9 mode		ON	ON	ON	ON	ON
Norm B/G/H		ON	ON	ON	ON	ON
Norm I		OFF	ON	OFF	OFF	OFF
Norm D/K		OFF	OFF	ON	OFF	ON
Norm AUS		OFF	OFF	OFF	OFF	OFF
Norm L		OFF	ON	OFF	OFF	OFF
Norm SAT		OFF	OFF	OFF	OFF	OFF
Norm M		OFF	OFF	OFF	OFF	OFF
Toptext		ON	ON	ON	ON	ON
Nicam Stereo		OFF	ON	OFF	ON	OFF
Language Preset		Italian	French	German	Spanish	OIRT

21 pin connector (1 2 4)

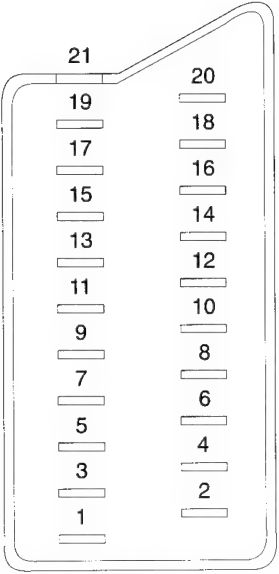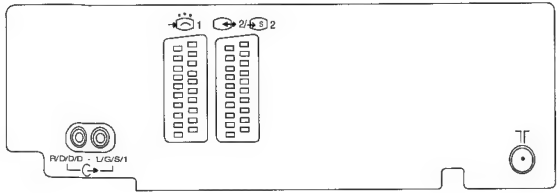

Pin No.	1	2	4	Signal	Signal level
1	○	○	○	Audio output B (right)	Standard level : 0.5V rms Output impedance :Less than 1kohm*
2	○	○	○	Audio input B (right)	Standard level : 0.5V rms Output impedance :More than 10kohm*
3	○	○	○	Audio output A (left)	Standard level : 0.5V rms Output impedance :Less than 1kohm*
4	○	○	○	Ground (audio)	
5	○	○	○	Ground (blue)	
6	○	○	○	Audio input A (left)	Standard level : 0.5V rms Output impedance :More than 10kohm*
7	○	●	●	Blue input	0.7 ± 3dB, 75 ohms, positive
8	○	○	○	Function select (AV control)	High state (9.5 - 12V) : Part mode Low state (0 - 2V) : TV mode Input impedance : More than 10k ohms Input capacitance : Less than 2nF
9	○	○	○	Ground (green)	
10	○	○	○	Open	
11	○	●	●	Green	Green signal : 0.7 ± 3dB, 75 ohms, positive
12	○	○	○	Open	
13	○	○	○	Ground (red)	
14	○	○	○	Ground(blanking)	
15	○	—	—	Red input	0.7 ± 3dB, 75 ohms, positive
	—	○	○	(S signal) chroma input	0.3 ± 3dB, 75 ohms, positive
16	○	●	●	Blanking input (Ys signal)	High state (1 - 3V) Low state (0 - 0.4V) Input impedance : 75ohms
17	○	○	○	Ground(video output)	
18	○	○	○	Ground(video input)	
19	○	○	○	Video output	1V ± 3dB,75ohms,positive sync:0.3V(-3+10dB)
20	○	—	—	Video input	1V ± 3dB,75ohms,positive sync:0.3V(-3+10dB)
	—	○	○	Video input Y (S signal)	1V ± 3dB,75ohms,positive sync:0.3V(-3+10dB)
21	○	○	○	Common ground (plug, shield)	

○ Connected ● Not Connected (open) * at 20Hz - 20kHz

Pin No	Signal	Signal level
1	Ground	
2	Ground	
3	Y (S signal) input	1V ± 3dB 75 ohm , positive Sync. 0.3V -3/+10 dB
4	C (S signal) input	0.3V ± 3dB 75 ohm , positive Sync.

 


TABLE OF CONTENTS

<u>Section</u>	<u>Title</u>	<u>Page</u>	<u>Section</u>	<u>Title</u>	<u>Page</u>
1. GENERAL			5. DIAGRAMS		
	Getting Started	6	5-1.	Block Diagram	27
	Advanced TV Operations	8	5-2.	Circuit Boards Location	32
	Adjusting the Picture and Sound	8	5-3.	Schematic Diagrams and Printed Wiring Boards	32
	Advanced Presetting Functions	10		* D Board	37
	Teletext Operation	11		* A Board	42
	Connecting Other Equipment	12		* C Board	52
	For Your Information	13		* VM Board	54
				* D2 Board	54
2. DISASSEMBLY			5-4.	Semiconductors	57
2-1.	Rear Cover Removal	14	6. EXPLODED VIEWS		
2-2.	Chassis Assy Removal	14	6-1.	Chassis	59
2-3.	Service Position	15	6-2.	Picture Tube	60
2-4.	A Board Removal	15	7. ELECTRICAL PARTS LIST		
2-5.	Extension Board	15			61
2-6.	Picture Tube Removal	16			
3. SET-UP ADJUSTMENTS					
3-1.	Beam Landing	17			
3-2.	Convergence	18			
3-3.	Focus	20			
3-4.	White Balance	20			
4. CIRCUIT ADJUSTMENTS					
4-1.	Electrical Adjustments	21			
4-2.	Test Mode 2:	22			
4-3.	BE-3C Self Diagnostic Software	25			


CAUTION

SHORT CIRCUIT THE ANODE OF THE PICTURE TUBE AND THE ANODE CAP TO THE METAL CHASSIS, CRT SHIELD, OR CARBON PAINTED ON THE CRT, AFTER REMOVAL OF THE ANODE CAP.

WARNING !!

AN ISOLATING TRANSFORMER SHOULD BE USED DURING ANY SERVICE WORK TO AVOID POSSIBLE SHOCK HAZARD, DUE TO A LIVE CHASSIS. THE CHASSIS OF THIS RECEIVER IS DIRECTLY CONNECTED TO THE AC POWER LINE.

SAFETY-RELATED COMPONENT WARNING !!

COMPONENTS IDENTIFIED BY SHADING AND MARKED  ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL FOR SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLIMENTS PUBLISHED BY SONY.


ATTENTION

APRES AVOIR DECONNECTE LE CAP DE L'ANODE, COURT-CIRCUITER L'ANODE DU TUBE CATHODIQUE ET CELUI DE L'ANODE DU CAP AU CHASSIS METALLIQUE DE L'APPAREIL, OU AU COUCHE DE CARBONE PEINTE SUR LE TUBE CATHODIQUE OU AU BLINDAGE DU TUBE CATHODIQUE.

ATTENTION !!

AFIN D'EVITER TOUT RISQUE D'ELECTROCUTION PROVENANT D'UN CHÂSSIS SOUS TENSION, UN TRANSFORMATEUR D'ISOLEMENT DOIT ETRE UTILISÉ LORS DE TOUT DÉPANNAGE. LE CHÂSSIS DE CE RÉCEPTEUR EST DIRECTEMENT RACCORDÉ À L'ALIMENTATION SECTEUR.


ATTENTION AUX COMPOSANTS RELATIFS À LA SÉCURITÉ !!

LES COMPOSANTS IDENTIFIÉS PAR UNE TRAME ET PAR UNE MARQUE  SUR LES SCHÉMAS DE PRINCIPE, LES VUES EXPLOSÉES ET LES LISTES DE PIÉCES SONT D'UNE IMPORTANCE CRITIQUE POUR LA SÉCURITÉ DU FONCTIONNEMENT, NE LES REMPLACER QUE PAR DES COMPOSANTS SONY DONT LE NUMÉRO DE PIÉCE EST INDIQUÉ DANS LE PRÉSENT MANUEL OU DANS DES SUPPLÉMENTS PUBLIÉS PAR SONY.

SECTION 1 GENERAL

Getting Started

Inserting the Battery Into the Remote Commander

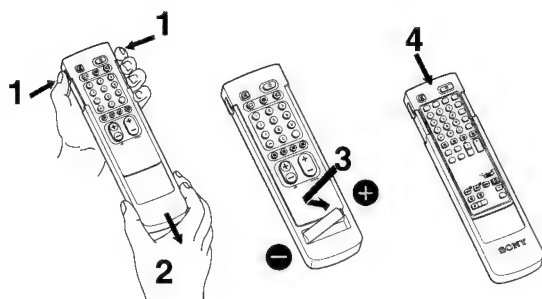

Remove the cover.

Check the correct polarity.


Refit the outside cover making sure that the Full Function side is visible.

About Battery Life

Under normal operation, a battery will last up to half a year.



Connecting the Aerial

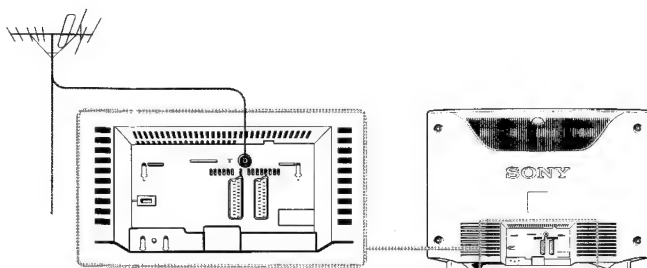Connect aerial to the  socket at the rear of the TV. (cable not supplied)



Choosing a Language

(See inside of front cover and back cover)

- 1 Depress  **A** on the TV.
The TV turns on. If the standby indicator **B** on the TV is lit, press  **3** or any number button **4** on the Remote Commander.

- 2 Press **MENU**  on the Remote Commander.
The SELECT LANGUAGE screen appears.

MENU



The operating instructions mentioned here are partial abstracts from the Operating Instruction Manual. The page numbers of the Operating Instruction Manual remain as in the manual.

- 3 Press one of the colour buttons  on the Remote Commander to select a language (Press the white button  to display other language alternatives). The SELECT LANGUAGE screen clears and all subsequent menus appear in the chosen language.

SELECT LANGUAGE

- ENGLISH
- DEUTSCH
- FRANÇAIS
- ESPAÑOL
- MORE

SELECT COL. BUTTON

Note: From the second time when you turn on the TV, the MENU screen appears instead of the SELECT LANGUAGE screen. Press the yellow button  then press the white button  to redisplay the SELECT LANGUAGE screen.

Tuning in to Channels

You can tune in up to 100 channels to programme positions either automatically or manually.


auto tuning: A single button press allows all receivable channels to be tuned. Use if you are unfamiliar with the channel numbers of stations.

manual tuning: Use if you are familiar with the channel numbers of stations. (Channel numbers from the main UK transmitters are shown on page 13)

Choose the more appropriate way for you.




Tuning in to Channels Automatically

There are two possibilities for auto tuning;

- A. On the TV: hold down  **E** on the front of the TV for 2 seconds
(All receivable channels are tuned in the order noted below).

or

- B. On the Remote Commander: as follows

- 1 Press **MENU** .
- 2 Press the white button .
- 3 Hold down the red button  for 2 seconds,

Note: Press the green button  to cancel.

Channels are automatically stored as follows:

Programme1	BBC1
Programme2	BBC2
Programme3	ITV
Programme4	CH4 or S4C

Note: Programme names are automatically taken from TELETEXT if available. If not, "----" is placed in the name.

- If you connect a VCR via the aerial cable, set the VCR to its test signal or play mode before auto-tuning.
- You may have to exchange the programme positions, if there are duplicated signals from local transmitters.

Tuning in to Channels Manually


1 Press MENU [7].

The MENU screen appears.




2 Press the white button [17] to select PRESET.

The PRESET screen appears.

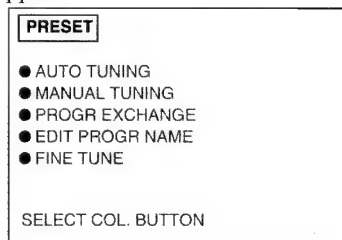

3 Press the green button [17] to select MANUAL TUNING.

The MANUAL TUNING screen appears.


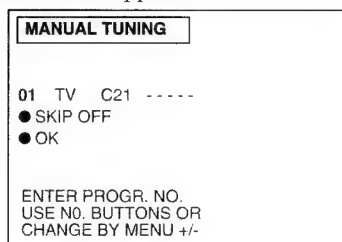


4 Press the number buttons [4] or MENU+/- [9] to select a programme position.

If you use the number buttons [4], enter a double-digit number. (e.g. for programme number 4, first press 0, then 4)


5 Press the green button [17].

 Note: Use MENU +/- [9] to select "TV". You can alternatively select input sources which may be assigned to programme positions. The display changes as follows:

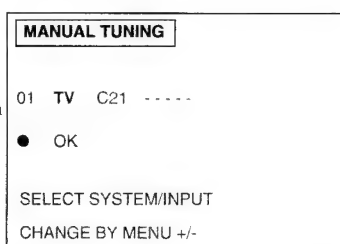

6 Press the green button [17].

Note: If a video input source is selected in step 5, this is now stored. Refer to step 4 to tune other programme positions.

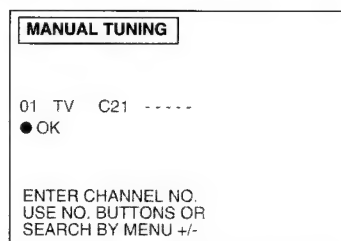

7 Press the number buttons [4] or MENU+/- [9] to select the channel number.

If you use the number buttons [4], enter a double-digit number. (e.g. for channel 23, first press 2, then 3)

Note: Programme names are automatically taken from TELETEXT if available. If not, "-----" is placed in the name. Or if you select AV1, RGB, AV2, YC2, AV3 or YC3 as an input source, AV1, RGB, ... is placed.

8 Press the green button [17] to store.

Note: If you want to preset other channels, repeat steps 4 to 8.

9 Press MENU [7] twice to return to the normal screen.

Note: You can skip unused programme positions when selecting programmes with the PROGR +/- buttons [18]. Press the red button [17] to skip in step 4. However, the skipped programmes may still be called up when you use the number buttons.

Basic TV Operations

Turning the TV on and off

Turning on

Depress [A] on the TV.

Turning off temporarily

Press [10] on the Remote Commander.

The TV enters standby mode and the standby indicator [B] on the front of the TV lights up.

Turning on again

Press [3], PROGR +/- [18], or one of the number buttons [4] on the Remote Commander.

Turning off completely

Depress [A] on the TV.

Note: It is recommended to use [A] to turn off the TV. This could help you save energy.

Selecting TV Programmes

Press PROGR +/- [18] or press number buttons [4].

To select a double-digit number

Press -/- [5], then the number buttons [4].

Adjusting the Volume

Press +/- [19].

Muting the Sound

Press [1].

To resume normal sound, press [1] again.

Displaying the On-screen Indications

Press [14] once to display the on-screen indications.

Press again to make the indications disappear.

Note: If NICAM is transmitted regardless of whether it is stereo or mono, the two speaker symbol automatically appears on the screen for several seconds.

Operating the TV Using the Buttons on the TV

With the buttons on the TV, you can adjust or select the functions as follows:

Press +/- [D] to adjust the volume.

Press P +/- [C] to select programme numbers or to turn the TV on from the standby mode.



 

 
 
Press [F] to select the input source.

Press [E] to preset channels automatically.

Advanced TV Operations

Operating the Menu System







You can adjust picture and sound, preset channels to programme positions and utilise other convenient features by using the following menu system.

Press;	to;
1 MENU 	enter the MENU screen
2 a colour button 	select an item you want to change (The selected item is marked by a triangle.)
3 MENU +/- 	change (or adjust) the contents of the item
4 MENU 	return to the MENU screen
5 MENU  again	return to the normal screen
Press MENU  once or twice whenever you want to return to the normal screen.	

  Note: When selecting menus, the picture becomes darker. If, however, an item in the PICTURE ADJUSTMENT menu is selected, normal level of TV picture is restored to allow the best adjustment.





Adjusting the Picture and Sound





Although picture and sound are adjusted at the factory you can adjust them to suit your own taste.

- 1 Press MENU .
The MENU screen appears.
- 2 Press the red button  to select PICTURE or the green button  to select SOUND.
- 3 Press the respective colour button  to select an item.
- 4 Press MENU +/-  to adjust.
- 5 Press MENU  twice or wait until the menu displays disappear automatically to return to the normal screen.

PICTURE ADJUSTMENT


(First Page)


PICTURE ADJUSTMENT	
▶ 
● 
● 
● 
● MORE	
SELECT COL. BUTTON ADJUST BY MENU +/-	

 
 
 
 
 
Press colour button	Effect
Red: For Picture 	Less — — More
Green: For Colour 	Less — — More
Yellow: For Brightness 	Darker — — Brighter
Blue: For Sharpness 	Softer — — Sharper
White:	Next page of PICTURE ADJUSTMENT

PICTURE ADJUSTMENT

(Second Page)


PICTURE ADJUSTMENT	
▶ COLOUR TONE NORMAL	
● FORMAT NORMAL	
● ROTATION NORMAL	
● 	
● BACK	
SELECT COL. BUTTON CHANGE BY MENU +/-	

Press colour button	Effect
Red: For Colour Tone	Normal -> Warm (reddish colour tone) -> Cool (blueish colour tone)
Green: For Format	Normal: Normal setting 16:9 Wide screen effect
Yellow: For Picture Rotation (only for KV-C29")	Normal: Normal setting -5 ~ +5: Adjusts the picture slant caused by the earth magnetism
Blue: For Hue control  (only for NTSC video signals)	Reddish — — Greenish
White:	Back to first page of PICTURE ADJUSTMENT

Note: Press      on the Remote Commander to reset to the factory preset levels for picture and sound.

SOUND ADJUSTMENT


(First Page)

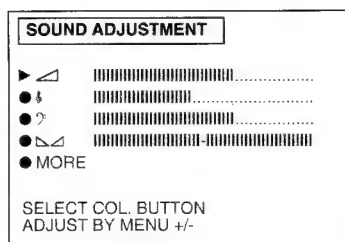

Press colour button	Effect
Red: For Volume	Less — — More
Green: For Treble	Less — — More
Yellow: For Bass	Less — — More
Blue: For Balance	More left - more right
White:	Next page of SOUND ADJUSTMENT

SOUND ADJUSTMENT

(Second Page)

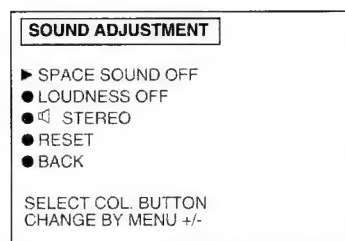

Press colour button	Effect
Red: For Space Sound	OFF: normal sound ON: for a special acoustic sound effect
Green: For Loudness	OFF: normal sounds ON: when listening to music broadcast
Yellow: For Stereo:	Stereo -> Mono A (left channel) -> Mono B (right channel) -> Mono
Blue: For Reset:	Resets to the factory preset levels for picture and sound
White:	Back to first page of SOUND ADJUSTMENT

Note: Press [8] on the Remote Commander to reset to the factory preset levels for picture and sound.

Using Special Features

With your TV you can utilise special features such as Parental Lock or Sleep Timer.

1 Press MENU [7].

The MENU screen appears.




2 Press the yellow button [17] to select FEATURES.

3 Press the respective colour button [17] to select an item.

4 Press MENU +/- [9] to change.

5 Press MENU [7] twice or wait until the menu displays disappear automatically to return to the normal screen.

FEATURES

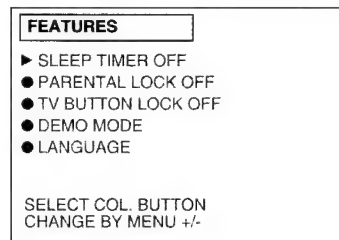

Press colour button	Effect
Red: For Sleep Timer (Automatic switch off function)	OFF -> 0:30 -> 1:00 -> 1:30 -> 2:00 (hours) After the selected time the TV set switches itself automatically into standby mode.
Green: For Parental Lock (For preventing children from watching programmes which you consider unsuitable)	OFF: Normal setting ON: The TV-channel you are watching is now blocked. In this way you can prevent undesirable broadcasts from appearing on the screen.
Yellow For TV Button Lock	OFF: Normal setting ON: The buttons on the TV do not function anymore. (The Remote Commander still operates)
Blue: For Demo Mode	ON: A sequence of menu pictures is displayed. Press any button on the Remote Commander to stop the function.
White: For Language	The SELECT LANGUAGE screen appears.

Advanced Presetting Functions

Exchanging Programme Positions

You can exchange the programme positions to a preferred order (example: exchange programme 09 (channel C21) with programme 15 (channel C24)).

- 1 Press **MENU** **[7]**.

The MENU screen appears.



- 2 Press the white button **[17]**.

The PRESET screen appears.

- 3 Press the yellow button **[17]**.

The PROGR EXCHANGE screen appears.

PROGR EXCHANGE

01 TV C21 -----

- NEXT CHANNEL
- LAST CHANNEL

- STORE

SELECT COL. BUTTON

- 4 Press the white button **[17]** repeatedly until the desired programme number (09) appears.

- 5 Press the red or the green button **[17]** repeatedly until the desired channel number (C24) appears.

- 6 Press the white button **[17]** to store.
Now the exchange has been completed. Channel C24 is tuned in to programme 09 and channel C21 is tuned in to programme 15.

- 7 Press **MENU** **[7]** twice to return to the normal screen.

Editing Programme Names

You can edit the programme names up to five letters.

- 1 Press **MENU** **[7]**.

The MENU screen appears.



- 2 Press the white button **[17]**.

The PRESET screen appears.

- 3 Press the blue button **[17]**.

The EDIT PROGR NAME screen appears.
The first character flashes.

EDIT PROGR NAME

01 TV C21 -----

- NEXT LETTER
- STORE

CHANGE BY MENU +/-

- 4 Press **MENU**+/- **[9]** to edit the first letter.

The first letter changes as follows;

A ↔ B ↔ ... ↔ Z ↔ 0 ↔ 1 ↔ ... ↔ 9 ↔ "-" (space)

- 5 Press the red button **[17]** to move to the next letter.

- 6 Repeat steps 4 to 5, until the fifth letter is chosen.

- 7 Press the green button **[17]**.

The programme name is stored, and the normal screen appears. To edit another programme name, repeat steps 1 to 7.

Fine Tuning

You can adjust the receiving condition by the FINE TUNE function.

- 1 Press **MENU** **[7]**.

The MENU screen appears.

- 2 Press the white button **[17]**.

The PRESET screen appears.

- 3 Press the white button **[17]** again.

The FINE TUNE screen appears.

FINE TUNE

- STORE
- EXIT/WATCH

ADJUST BY MENU +/-

- 4 Press **MENU**+/- **[9]** to adjust the receiving condition.

- 5 Press the red button **[17]** to store the adjustment, or press the green button **[17]** not to store.

Then the normal screen appears. If you have pressed the green button, the fine tuned condition is cancelled once you choose another programme.

Tuning in to a Channel Temporarily

You can tune in to a channel temporarily, even when it has not been preset.

- 1 Press **C** **[16]** on the Remote Commander.

The indicator "C" appears on the screen.

- 2 Enter a double-digit channel number using the number buttons (e.g. for channel 23, first press 2, then 3).

The channel appears.

However, the channel is not stored.

Teletext Operation

TV stations broadcast teletext programmes via the TV channels. For basic operation of teletext, use the simple side of the Remote Commander. For the advanced features of teletext, use the buttons indicated in green on the full function side of the Remote Commander.

Basic Teletext Operation

Switching Teletext on and off

- 1 Select the channel which carries the teletext service you wish to view.

- 2 Press **11** to display Teletext.

If no teletext signal is broadcast, the indication P100 is displayed on a black screen.



- 3 Input three digits for the page number using the number buttons **4**.

The numbers are displayed on the screen and the requested page appears in a few seconds.

Note: If you make a mistake, type in any three digits, then re-enter the correct page number.

- 4 Press **3** once or **11** twice to return to the TV mode.

Note: To change the teletext channels. First press **3** to return to the TV mode, then repeat steps 1 to 3.

Note: If the signal of a TV channel is weak, teletext errors may occur.

Advanced Teletext Operation

Using Fastext

With Fastext you can access pages with one button press. When a Fastext page is broadcast, a colour-coded menu will appear at the bottom of the screen. The colours of this menu correspond to the red, green, yellow and blue buttons **6** on the Remote Commander.

Press the corresponding colour button **6** on the Remote Commander which corresponds to the colour-coded menu. The page will be displayed in a few seconds.

Requesting the Index page

Press **17**. The Index page appears.

Accessing the next or preceding page

Press (PAGE +) or (PAGE -) **18**. The next or the preceding page appears on the screen.

Superimposing the teletext display on the TV picture

Press **11** once if you are in text mode or press **11** twice if in TV mode.

To return to the normal teletext display press **11** twice.



Preventing a teletext page from being updated or changed

Press (HOLD) **2**. The HOLD symbol () appears on the screen and the selected subpage is held until you press **11** to cancel.

Enlarging the teletext display

Press **13** once to enlarge the upper half. Press twice to enlarge the lower half. Press again to restore the normal display.



Revealing concealed information (e.g. answers to a quiz)

Press (REVEAL) **14**. The information is revealed. Press **14** again to conceal the information.

Watching TV while waiting for a requested page to be displayed

- 1 Request a new teletext page.

- 2 Press (TEXT CL) **12**.

The TV programme is displayed and the symbol is displayed at the top of the page.

Note: When the requested page is available the page number is displayed at the top of the screen.

- 3 Press **11** to view the page.

Note: To cancel the request

Display the teletext page, then press **11**. The request is now cancelled. Press **3** to resume TV mode.

Using the Favourite Page system

You can store up to four of your favourite teletext pages per programme with the help of the Favourite page system. In this way you have quick access to the pages you watch frequently.

Storing the Favourite Pages

- 1 Select the page you would like to store using the number buttons **4**.

- 2 Press **15** twice.

The colour prompts at the bottom of the screen flash.

- 3 Press any of the colour buttons **6** on the Remote Commander to store the selected page.

The page is now stored on this button.

Repeat steps 1 to 3 for the other 3 pages available.

Displaying the Favourite pages

- 1 Press **15**.

- 2 Press the colour button **6** corresponding to the colour prompt onto which the desired page is stored.

The page is requested. (It may take a few seconds to be received).

Note: Step 1 must be taken before every favourite page selection, otherwise the normal Fastext facility operates.

Using the Time Function in the TV mode

Press **12** to request the time. Press again to cancel the request.

Note: This function is available only when teletext is broadcast.

Connecting Other Equipment

You can connect optional audio/video equipment to this TV such as VCRs, video disc players, cameras or stereo systems.

Connector	Acceptable input signal	Available output signal
1 M (AV1/RGB)	Audio/video and RGB signal	Audio/video signal from TV Tuner
2 / 2 L (AV2) (YC2)	Audio/video and S video signal	Audio/video signal from selected source
3 / 3 G H (AV3)	Audio/video signal and	No outputs
3 / 3 G I (YC3)	Audio/S video signal	

To watch a video input picture, press 2 until the desired video input appears.

To return to the normal TV picture, press 2 repeatedly or press 3.

Note: If you have a decoder, connect it to 1 **M**.

Connecting a VCR Using the TV Aerial Terminal

Connect the aerial output of the VCR to the aerial terminal **K** of the TV. It is recommended to tune in the VCR signal to programme number "0". For details, see "Tuning in to Channels Manually" on page 6.

Note: S video input (Y/C input) 1 **L**

Video signals may be separated into Y (luminance or brightness) and C (chrominance) signals.


Separating the Y and C signals prevents them from interfering with each other and therefore improves the picture quality (especially luminance). This TV is equipped with 2 video input terminals through which these signals can be input directly.

Checking and Selecting the Input and Output Sources Using the Menu

You can display a menu screen to see which input and output source are selected. You can also change the selection using this menu.

Checking the Input and Output Sources


- 1 Press **MENU** 7.
The MENU screen appears.
- 2 Press the blue button 17 to select INPUT/OUTPUT.
The INPUT/OUTPUT screen appears.

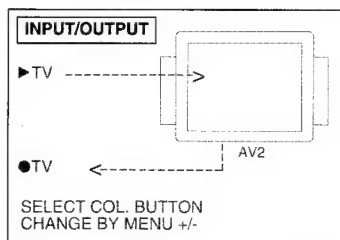

Selecting an Input Signal

Press the red button 17 to select INPUT. Press **MENU** +/- 9 to select the desired input source.

 
You can select among the following sources:



Selecting an Output Signal

The 2 / 2 **L** connector outputs the source input from the other connectors. Press the green button 17 to select OUTPUT. Press **MENU** +/- 9 to select the desired output source.

 You can select among the following sources:



Note: Press **MENU** 7 twice or wait until the menu displays disappear automatically to return to the normal screen.

Remote Control of Other Sony Equipment

You can use the TV Remote Commander to control most Sony remote-controlled video equipment such as: Beta, 8mm or VHS VCRs or video disc players.

Tuning the Remote Commander to the equipment

- 1 Set the VTR 1/2/3 MDP selector 20 according to the equipment you want to control:

VTR 1: Beta VCR

VTR 2: 8mm VCR

VTR 3: VHS VCR

MDP: Video Disc Player

- 2 Use the buttons 21 to operate the additional equipment.

Note: If your video equipment is furnished with a COMMAND MODE selector: set this selector to the same position as the VTR 1/2/3 MDP selector on the TV Remote Commander.

Note: If the equipment does not have a certain function, the corresponding button on the Remote Commander will not operate.

Note: When you use the (record) button, make sure to press this button and the one to the right of it simultaneously.

Using Headphones

You can utilise headphones. Connect them to the headphone jack **J** to mute the sound from the speakers.

Note: You cannot control the sound adjustment except for volume.

For your information

Troubleshooting

Here are some simple solutions to problems which may affect the picture and sound.

No picture (screen is dark), no sound

- Plug the TV in.
- Press **A** on the TV. (If the standby indicator **B** is lit, press **3** or any number button **4** on the Remote Commander.)
- Check if the selected video source is on.
- Turn the TV off for three or four seconds and then turn it on again using **A**.

Poor or no picture (screen is dark), but good sound

- Press MENU **7** to enter the MENU screen, and press the red button **17**, then adjust **1** and **2**.

Good picture but no sound

- Press **19**.
- If **1** is displayed on the screen, press **1**.


No colour for colour programmes

- Press MENU **7** to enter the MENU screen, and press the red button **17**, then adjust **3**.


Remote Commander does not function

- Replace the battery.


If you continue to have problems, have your TV serviced by qualified personnel. Never open the casing yourself.

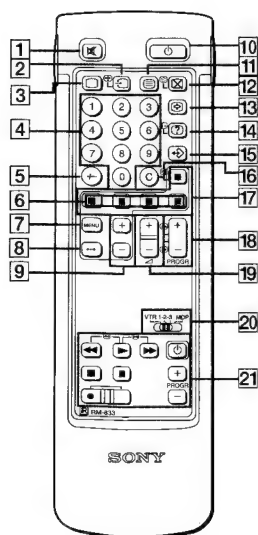

Full-Function Side

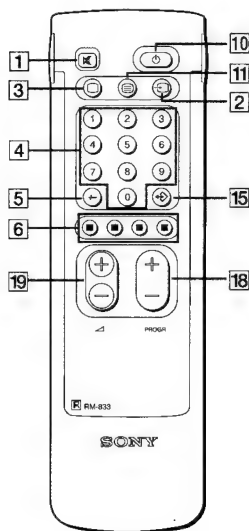


Simple Side

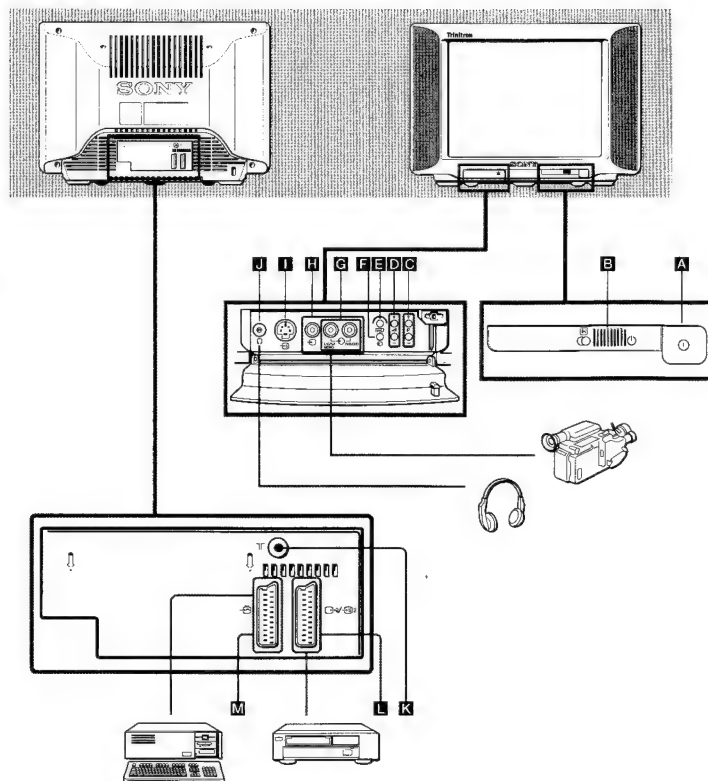


SECTION 2 DISASSEMBLY


2-1. REAR COVER REMOVAL

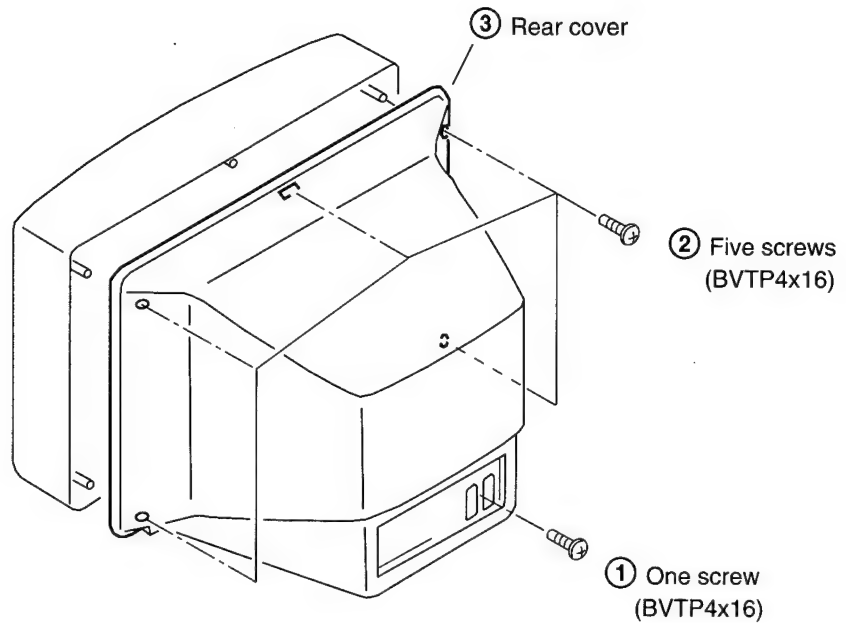

2-2. CHASSIS ASSY REMOVAL

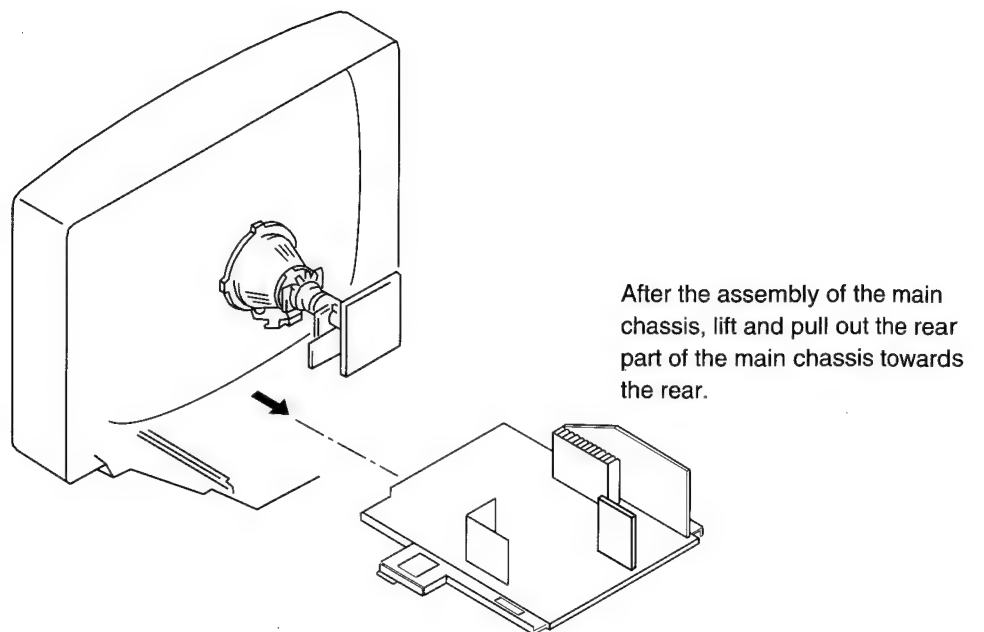


2-3. SERVICE POSITION

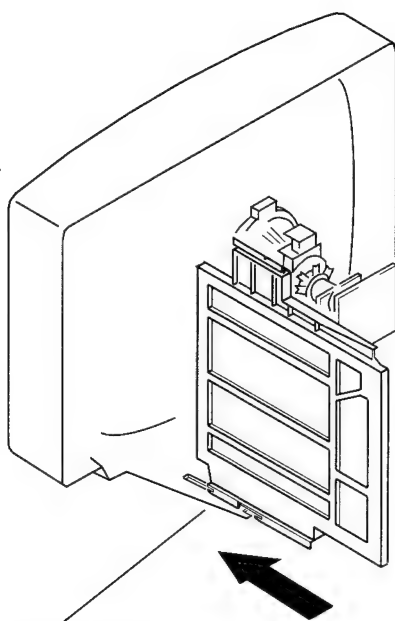


Locate the 2 slots on the edge of the chassis bracket in the locating holes and slide in the direction of the arrow


2-4. A BOARD REMOVAL

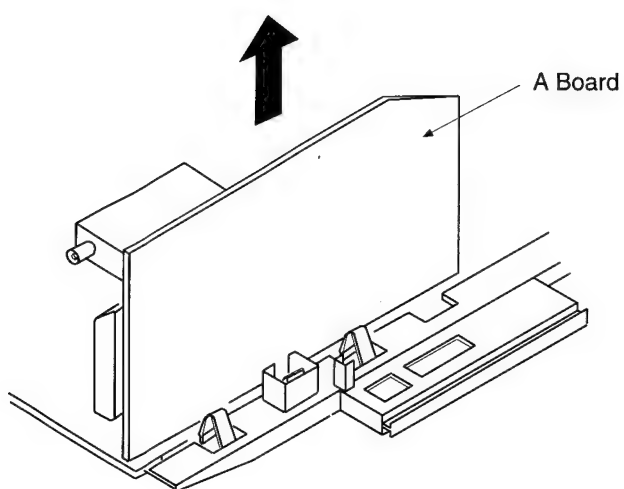

2-5. EXTENSION BOARD

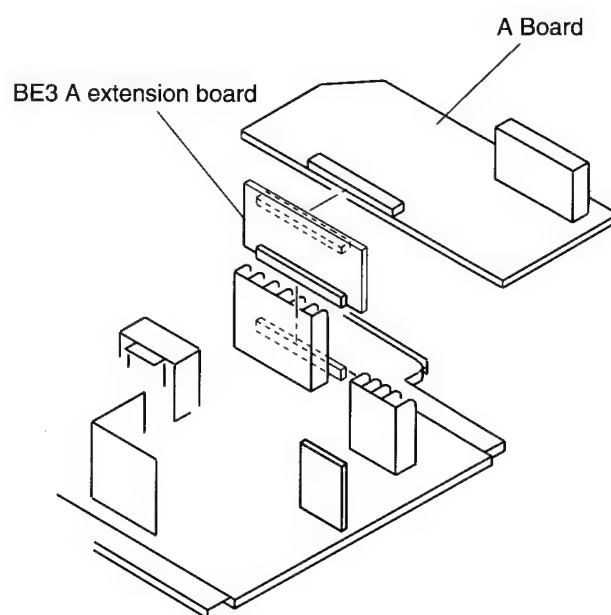


2-6. PICTURE TUBE REMOVAL

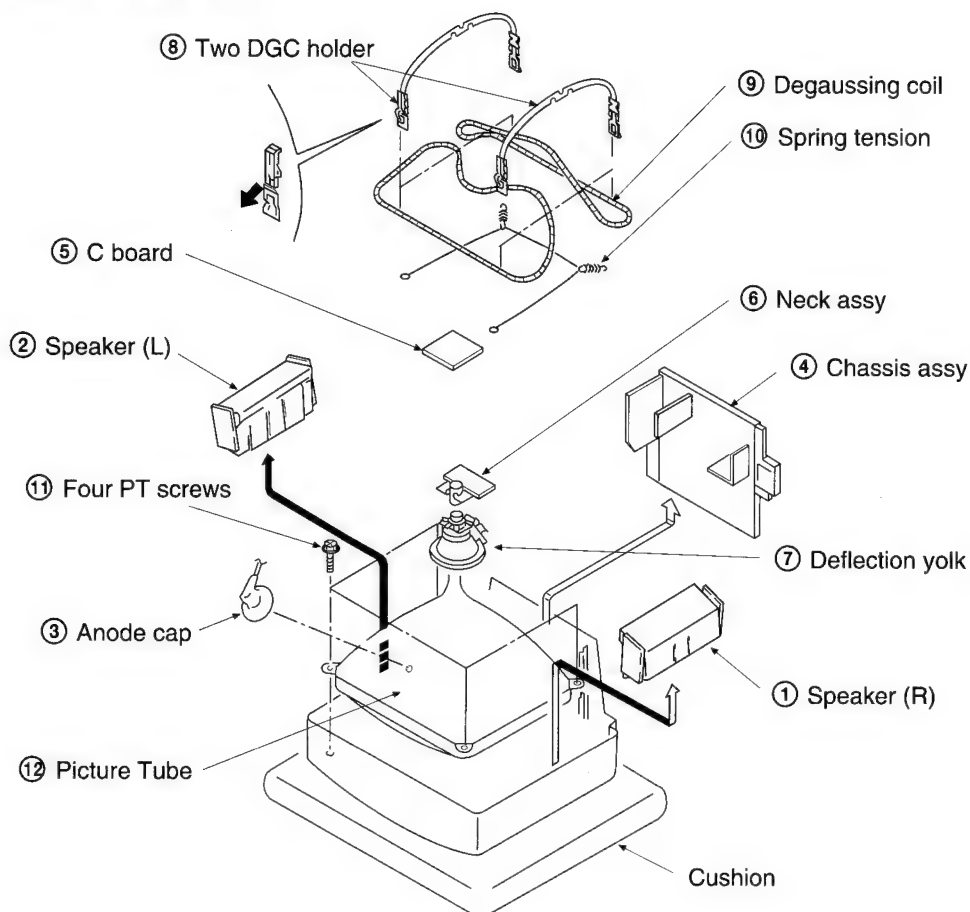

• REMOVAL OF ANODE-CAP

Note: Short circuit the anode of the picture tube and the anode cap to the metal chassis, CRT shield or carbon paint on the CRT, after removing the anode.


* REMOVING PROCEDURES.

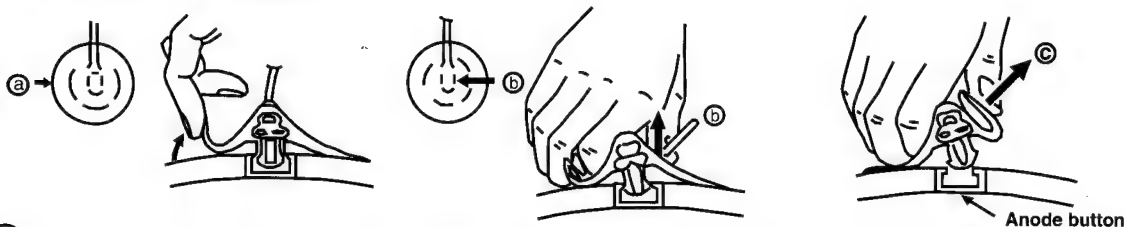

- ① Turn up one side of the rubber cap in the direction indicated by the arrow ①
- ② Using a thumb pull up the rubber cap firmly in the direction indicated by the arrow ②
- ③ When one side of the rubber cap is separated from the anode button, the anode-cap can be removed by turning up the rubber cap and pulling it up in the direction of the arrow ③

• HOW TO HANDLE AN ANODE-CAP

- ① Don't damage the surface of anode-cap with sharp shaped material !
- ② Don't press the rubber hardly not to hurt inside of anode-caps !
A metal fitting called as shatter-hook terminal is built into the rubber.
- ③ Don't turn the foot of rubber over hardly !
The shatter-hook terminal will stick out or damage the rubber.

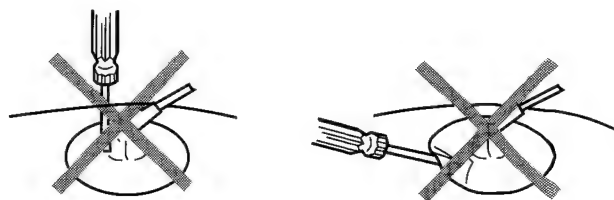

SECTION 3

SET - UP ADJUSTMENTS

- When complete readjustment is necessary or a new picture tube is installed, carry out the following adjustments.
- Unless there are specific instructions to the contrary, carry out these adjustments with the rated power supply.
- Unless there are specific instructions to the contrary, set the controls and switches to these settings :

● Contrast 80% (or remote control normal)
 ☆ Brightness 50%

- Carry out the following adjustments in this order :

1. Beam landing
2. Convergence
3. Focus
4. White balance

Note: Testing equipment required.

1. Color bar/pattern generator
2. Degausser
3. DC power supply
4. Digital multimeter
5. Oscilloscope

Preparation:

- In order to reduce the influence of geomagnetism on the set's picture tube, face it east or west.
- Switch on the set's power and degauss with the degausser.

3-1. BEAM LANDING

1. Input the white signal with the pattern generator.
 CONTRAST } normal
 BRIGHTNESS }
2. Position neck assy as shown in Fig.3-2.
3. Set the pattern generator raster signal to red.
4. Move the deflection yoke forward and adjust with the purity control so that the red is at the center and the blue and the green take up equally sized areas on each side. (See Fig. 3-1 - 3-3)
5. Move the deflection yoke forward and adjust so that the entire screen becomes red. (See Fig. 3-1)
6. Switch the raster signal to blue, then to green and verify the condition.
7. When the position of the deflection yoke has been decided, fasten the deflection yoke with the screws.
8. If the beam does not land correctly in all the corners, use a magnet to adjust it. (See Fig. 3-4)

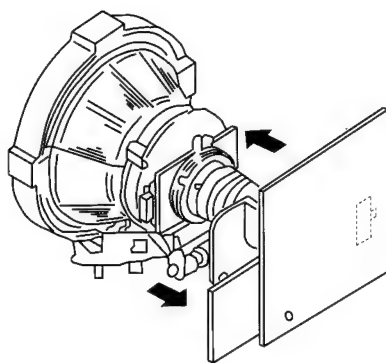


Fig. 3-1

Fig. 3-2

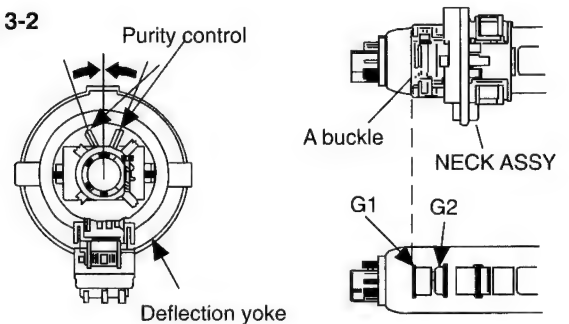


Fig. 3-3

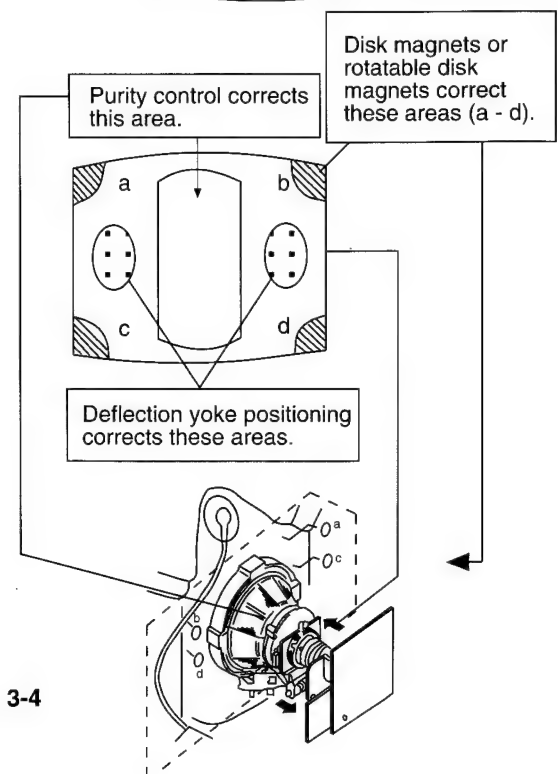
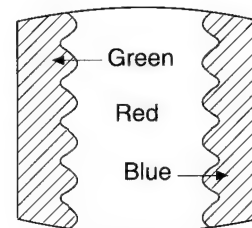



Fig. 3-4

3-2. CONVERGENCE

Preparation:


- Before starting this adjustment, adjust the focus, horizontal size, and vertical size.
- Minimize the brightness setting.
- Provide a dot pattern.

(1) Horizontal and vertical static convergence




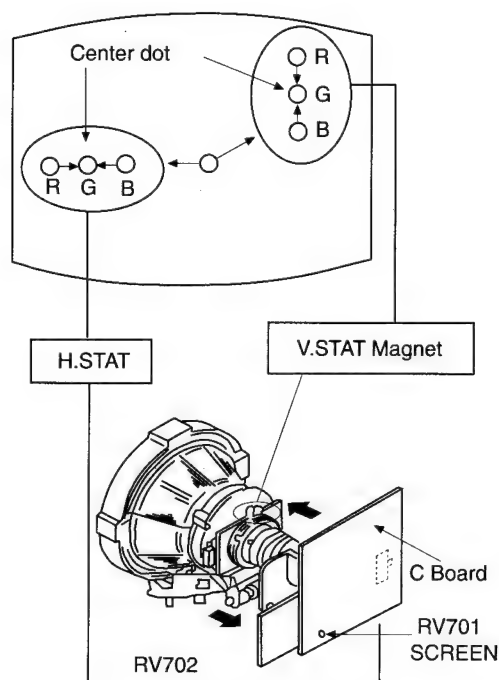


1. (Moving horizontally), adjust the H.STAT control so that the red, green, and blue points are on top of each other at the center of the screen.
2. (Moving vertically), adjust the V.STAT magnet so that the red, green, and blue points are on top of each other at the center of the screen.
3. If the H.STAT variable resistor cannot bring the red, green, and blue points together at the center of the screen, adjust the horizontal convergence with the H.STAT variable resistor and the V.STAT magnet in the manner given below.
(In this case, the H.STAT variable resistor and the V.STAT magnet influence each other)


- Tilt the V.STAT magnet and adjust the static convergence by opening or closing the V.STAT magnet.

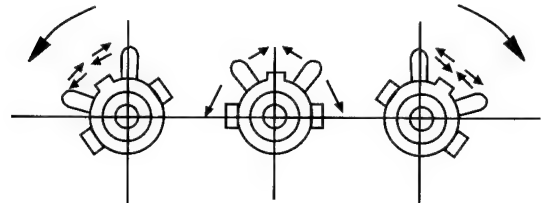


4. If the V.STAT magnet is moved in the direction of the (a) and (b) arrows, the red, green, and blue points move as shown below.

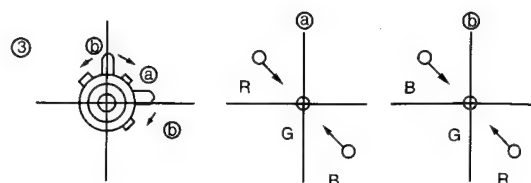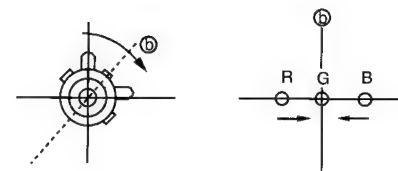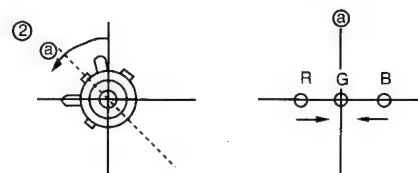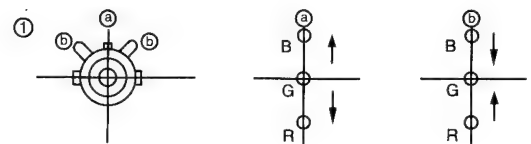

- Operation of BMC (Hexapole) Magnet

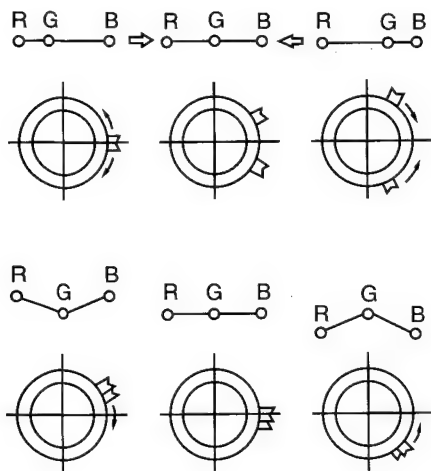

- The respective dot position resulting from moving each magnet interact, so be sure to perform adjustment while tracking.
Use the H. STAT VR to adjust the red, green, and blue dots so they coincide at the center of the screen (by moving the dots in the horizontal direction).

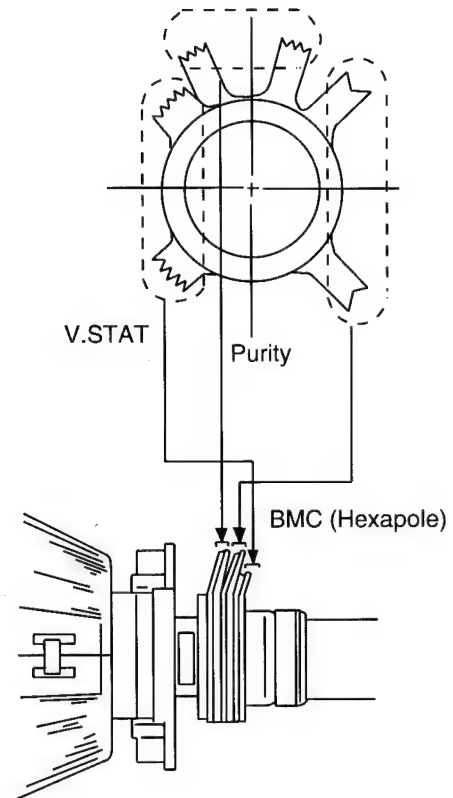


(2) Dynamic convergence adjustment.

Preparation:



- Before starting this adjustment, adjust the horizontal static convergence and the vertical static convergence.
1. Slightly loosen the deflection yoke screws.

2. Remove the deflection yoke spacer.
3. Move the deflection yoke as shown in the figure below and optimize the convergence.
4. Tighten the deflection yoke screws.
5. Re-install the deflection yoke spacer.

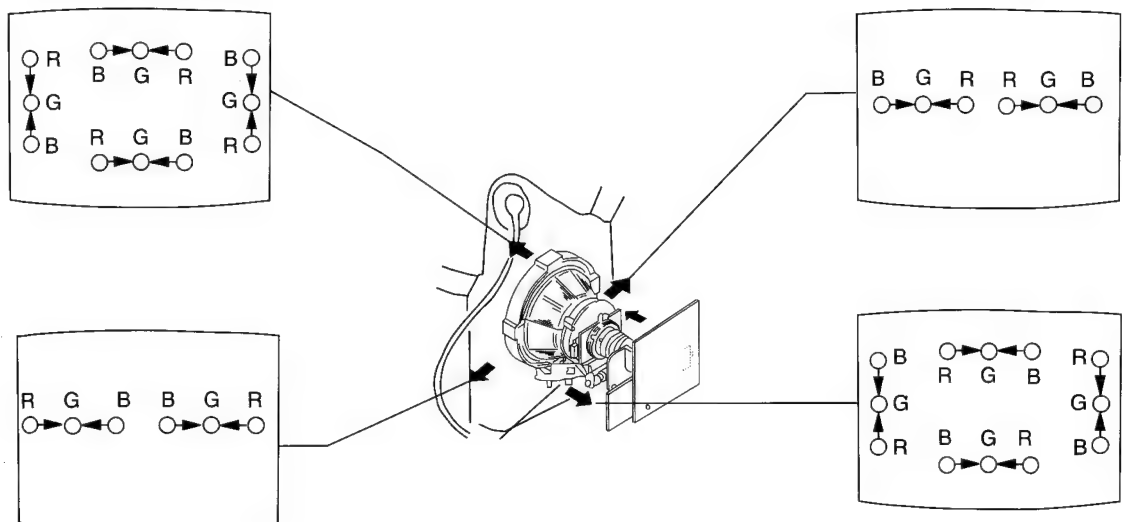


(3) Screen corner convergence.

If you are unable to adjust the corner convergence properly, correct them with the use of permalloy assemblies.

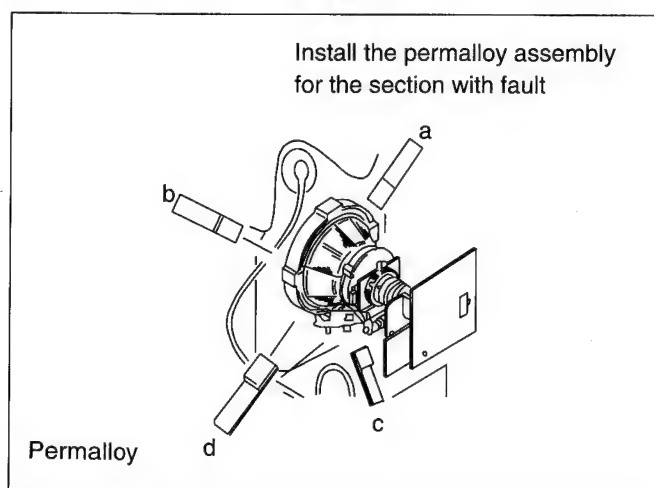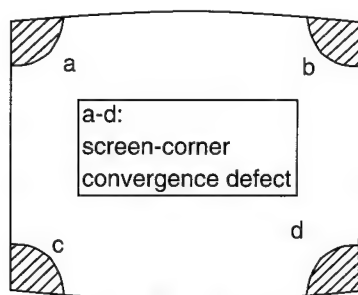

3-3. Focus

Adjust the focus to optimize the screen.

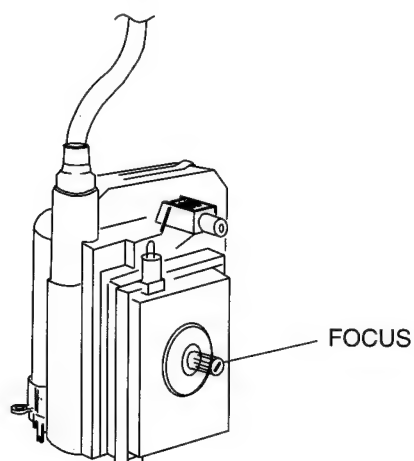

3-4. WHITE BALANCE

Screen G2 Setting

1. Input the dot signal from the pattern generator.
2. Set the picture brightness control to its lowest level.
3. Apply 180V DC to the R,G, and B cathodes with an external power supply.
4. While watching the picture, adjust G2 control RV701 (Screen) to the point just before the return lines disappear.

White balance adjustment

1. Receive an all-white signal.
2. Enter into service mode. (Refer to the section 4 "Electrical Adjustment" on how to enter service mode.)
3. Select TDA8366 1 on menu.

DEVICE : TDA8366 1

STAT : 12

☐ NEXT
☐ PREVIOUS
☐ OK

USE COLOUR KEYS
SONY TEST MENU.

4. Press the White button on the Remote Commander to enter into the device Menu.
5. Press the Red button 10 times "Next" "Next" "Next" to select HWB RED, adjust to 32.
6. Press the Red button to select HWB GREEN, adjust with the + and - menu buttons so that the white balance becomes optimum.
7. Press the Red button to select HWB BLUE, adjust with the + and - menu buttons so that the white balance becomes optimum.
8. Press the TV button twice on the Remote Commander to store the data and return to TV operation.


SECTION 4 CIRCUIT ADJUSTMENTS

4-1. ELECTRICAL ADJUSTMENTS

Service adjustment to this model can be performed with the supplied remote commander RM-833.

HOW TO ENTER INTO SERVICE MODE

1. Turn on the main power switch of the set and enter into standby mode.
2. Press the following sequence of buttons on the Remote Commander.

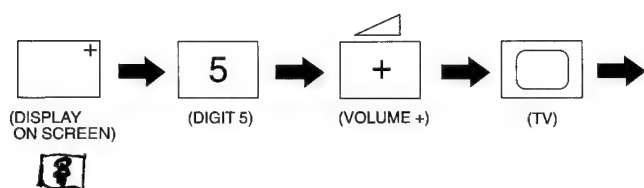

“TT” will appear in the top right corner of the screen.
Other status information will also be displayed.

3. Press the MENU button on the Remote Commander to obtain the menu on the screen.

DEVICE NAME

STAT : xxxx

☐ NEXT

☐ PREVIOUS

☐ OK

USE COLOUR KEYS
SONY TEST MENU.

4. Press the Red (Next) and Green (Previous) buttons to select the device corresponding to the adjustment item from the table. Then press the White button (OK).

DEVICE NAME

00 ADJUSTMENT : xxx

☐ NEXT

☐ PREVIOUS

SELECT COL.BUTTON
CHANGE BY MENU +/-

5. Press the Red (Next) or Green (previous) buttons to select the adjustment item. Then press the and buttons to change the data to comply with each standard.
6. Turn off the power to quit the service mode when adjustments are completed.

Initial Conditions for setup of TDA8366, TDA6612 and SAA7283. (Stereo Models Only)

TDA8366 1	INIT VALUE	TDA8366 2	INIT VALUE
Hue	31	Interlace	00
H Shift	Adj	Sync Mode	00
H Size	Adj	Col Dec	00
Pin Amp	Adj	Vert Div	00
Corn Pin	Adj	Vid ID	00
Tilt	Adj	EHT Track	01
V.Linear	Adj	En V Grd	00
V.Size	Adj	Serv Blk	00
S.Corr	Adj	OVP Mode	00
V.Cent	Adj	Aspect R	00
HWB Red	Adj	Start Freq	00
HWB Green	Adj	Y/C Input	00
HWB Blue	Adj	PAL/NTSC	00
Peaking	8	Xtal PLL	00
Bright	32	Y Delay	07
Colour	32	RGB Blk	00
Picture	37	Noise Cor	00
AGC Set	00	Fast Blk	01
Srce Sel 1	00	AFC Wind	00
Srce Sel 2	00	IF Sensy	00
Time Con	03	Mod Std	00
Xtal Ind	03	Vid Mute	01
FF Freq	02		

TDA6612	INIT VALUE	TDA6612	INIT VALUE
MPX Per	00	Mute 2	01
Quasi St	00	C1/2LS	00
Bass Exp	00	C1/2KH	00
H Pulse	00	Mono	01
Matrix St	00	Scart	00
Bypass	00	Scart D	00
Vol L Sp	07	AM	00
Vol R Sp	07	SAA7283	INIT VALUE
Vol HP	00	Mon M1/M2	01
PII Sync	00	DM Select	01
Mute 3	01	SSWIT 123	07
Treble	08	Port 2	00
Bass	09	Mute Def	00
X Talk Adj	Adj	AMDIS	00
Mute 1	00	E Max	80
		E Min	01

4-2. TEST MODE 2 :

Is available by pressing Test button twice, OSD 'TT ' appears. The functions described below are available by pressing the two numbers. To release the Test Mode 2, press 0 twice, or switch the TV into Stand-by Mode.

00	switch Test Mode 2 off
01	picture maximum
02	picture minimum
03	Volume 35%
04	Volume 50%
05	Volume 65%
06	Volume 80%
07	Ageing Condition (Volume min., Picture max., Brightness max.
08	Shipping Condition (Analog Values are RESET due to factory setting, Prog 1 is selected, TT Mode is switched off)
09	"Menu" Flag request
10	Tenth entry is deleted
11	dummy
12	dummy
13	dummy
14	Forced AV 16:9 detection on/off
15	Read factory setting from NVM Reads Volume, Balance, Treble, Bass, Brightness, Contrast, Hue, Sharpness, Colour values from ROM to the actual used values (Last Power Memory)
16	Save actual used values as RESET values Memorize actual used values Balance, Treble, Bass, Hue, Sharpness at RESET position in NVM.
17	Preset Label for AV Sources
18	RGB Priority on/off
19	Clear all preset labels
20	Tenth entry is deleted
21	Sub Contrast
22	Sub Colour
23	Sub Brightness
24	Set destination = U RGB Priority = Off
25	Set destination = D RGB Priority = Off
26	Set destination = B RGB Priority = On
27	Set destination = K RGB Priority = Off
28	Set destination = L RGB Priority = Off
29	Set destination = E RGB Priority = Off

30	Tenth entry is deleted
31	Set Destination = A RGB Priority = On
32	dummy
33	Auto AGC
34	N/S Pin Adjust
35	Manual AGC Adjust
36	dummy
37	dummy
38	To Activate Rotation Coil Adjustment
39	Check Rotation Coil Adjustment
40	Tenth entry is deleted
41	Re-initialise NVM
42	Production use only
43	Initialise Geom Settings
44	Initialise all favorite pages = 100
45	Channel locks = off
46	IR Channel Presetting Mode The channel presetting can be done by a Special IR Transmitter (Ver 2 and above software only)
47	dummy
48	Set NVM testbyte to 44h
49	Erase the NVM Testbyte (this byte detects already stored NVM's) After selecting this function, switch TV Off and On -> the NVM will be preset by μ -Controller.

In Test Mode the Menu display is switchable by the Speaker-Off button.

Note : For Test Modes 41 - 49 it is necessary to ensure that the TV is set to Prog 59.

SUB BRIGHTNESS ADJUSTMENT


1. Input a Phillips pattern.
2. Enter into service mode and press 23.
3. Adjust data so that 0-IRE of grey scale and CUT-OFF 20-IRE are only slightly visible on screen.

SUB CONTRAST ADJUSTMENT

1. Input a video that contains a small 100% area on a Black Background.
2. Enter into service mode and press 01 to have PIC max followed by 21.
3. Connect oscilloscope to pin ① of CN703 (R OUT) and adjust HWB Red data of TDA8366 1 to obtain 2.3Vp-p.

SUB COLOR ADJUSTMENT

1. Input a PAL color bar signal.
2. Connect an oscilloscope to pin ③ of CN703 (B OUT) on the C board.
3. Enter into service mode and press 22.
4. Adjust data so that the right sides of the waveform are set to the same level.

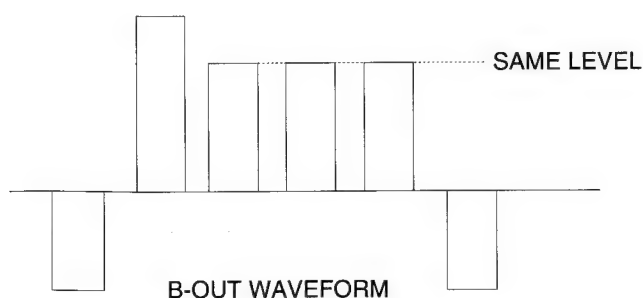

STEREO SEPARATION ADJUSTMENT

1. Input a 1KHz stereo signal to the L-ch and a 400Hz stereo signal to the R-ch.
2. Enter into service mode and select the "Test Menu" to be TDA6612.
3. Select the Stereo Xtalk Adjustment Menu, by using the Red (Next) and Green (Previous) buttons.
4. Monitor the Scart 1 L-channel output and adjust the data so that the R-channel sound is not detected in the L-channel.

I.F. COIL ADJUSTMENT (T101) - B/G, D/K, I AND L STANDARD FOR CONTINENTAL MODELS.

1. Apply a 38.9MHz signal at 100dBuV to the input of SWF101.
2. Receive a channel so that the I.C. is selected for negative modulation.
3. Measure the voltage at the AFT test point and adjust (T101) to obtain 2.4V +/- 0.2V.


L, BAND 1 ADJUSTMENT (RV102) - L, STANDARD FOR FRENCH MODELS.

1. Apply a 33.95MHz signal at 100dBuV to the input of SWF101.
2. Receive a channel so that the I.C. is selected for positive modulation and system L band 1.
3. Measure the voltage at the AFT test point and adjust (RV102) to obtain 2.4V +/- 0.2V.

Note : Only adjust RV102 after T101 has been correctly adjusted.

AGC ADJUSTMENT

1. Receive an off- air signal.
2. Enter the service mode, ("Test" "Test") and 35.
3. Adjust the data so that there is no snow or cross - modulation visible on the screen.
4. Change the receiving off-air channel, and confirm the above status.

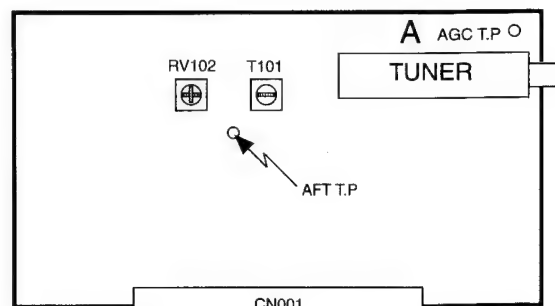


- A Board component side -

DEFLECTION SYSTEM ADJUSTMENT


1. Enter into service mode.
2. Select and adjust each item in order to obtain the optimum image.

Item No	Adjustment item.	Data Amount
03	H SHIFT	ADJ.
04	H SIZE	ADJ.
05	PIN AMP	ADJ.
06	CORR PIN	ADJ.
07	TILT	ADJ.
08	V LINEAR	ADJ.
09	V SIZE	ADJ.
0A	S CORR	ADJ.
0B	V CENTER	ADJ.

Note : V ANGLE is adjusted by a Variable Resistor on the 'D' Board (RV301)

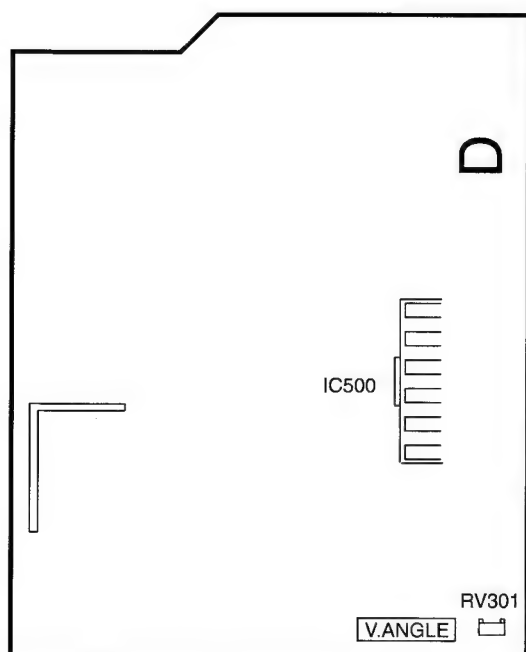


- D Board Component Side -


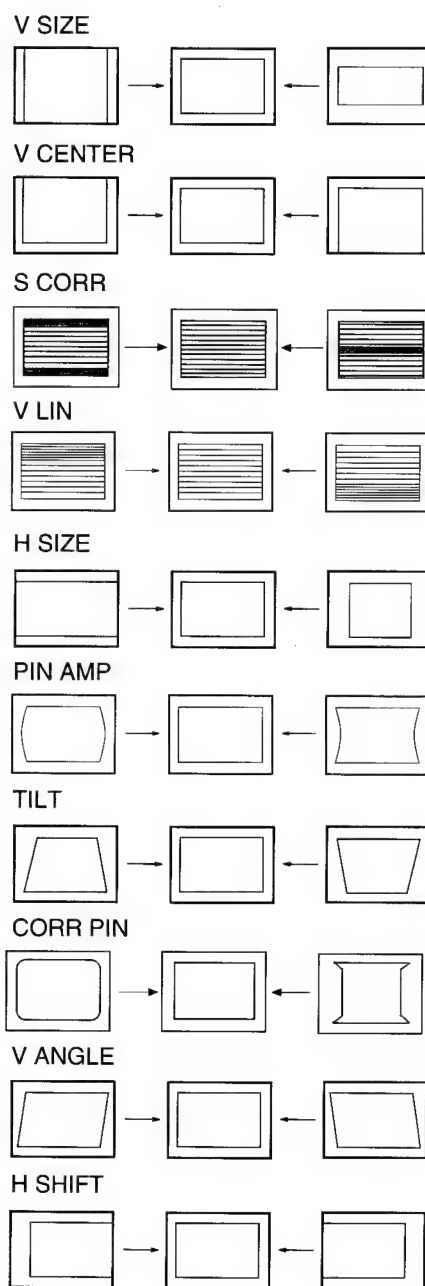


PULSE WIDTH & V-PIN ADJUSTMENTS (RV 1851/1853)

D2 BOARD

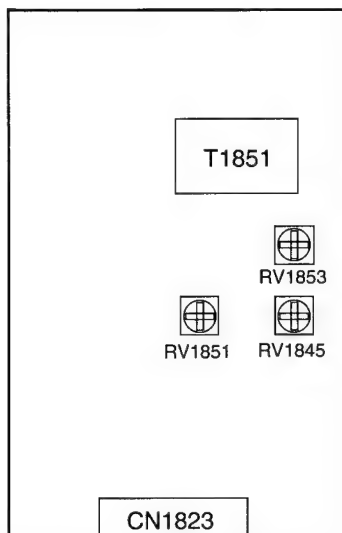

1. Connect an oscilloscope to pin 2 of T1851.
2. Preset RV-1853 to center of its range (mechanical center).
3. Adjust RV-1851 to obtain minimum amplitude.
4. Switch the oscilloscope input to D.C. and adjust RV-1853 to obtain $-33.2 \pm 0.5V$.
5. Adjust RV-1845 so that the difference between leading edge of H-drive pulse and V-pin out is $12\mu s$.

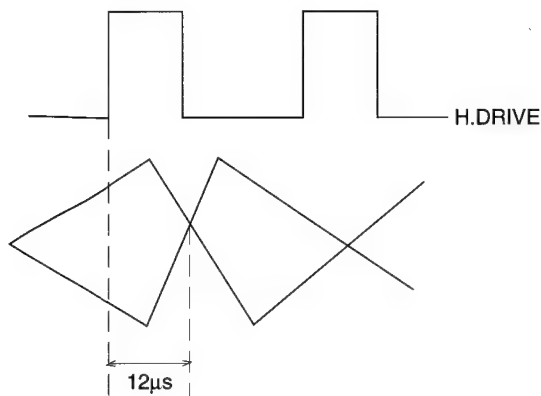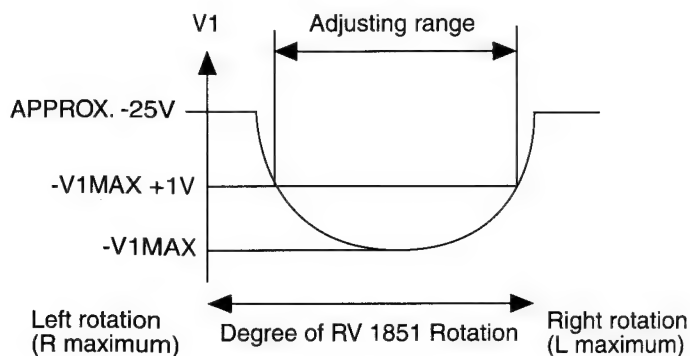

4-3. BE-3C SELF DIAGNOSTIC SOFTWARE

The identification of errors within the BE-3C chassis is triggered in 1 of 2 ways :- 1: Bus busy or 2: Device failiure to respond to IIC. In the event of one of these situations arrising the software will first try to release the bus if busy (Failiure to do so will report with continous flashing LED) and then communicate with each device in turn to establish if a device is faulty. If a device is found to be faulty the relevant device number will be displayed through the led (Series of flashes which must be counted) See Table 1., on fatal errors are reported with this method.


If a fatal error is found the set will simply stay in whichever state it was when the error ocured, but if a non fatal error occurs the set will try to continue operation.

Table 1

Device	LED Error Count	Fatal Error
NVM	2 .. 9	√
Teletext	10	
Jungle	11	√
Video_sw	12	
Tuner	13	√
Nicam	14	
Audio_cont	15	√

Flash Timing Example : e.g. error number 3.

 
Stby LED





MEMO


This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There is no handwriting or other markings on the paper.

5-1. BLOCK DIAGRAM

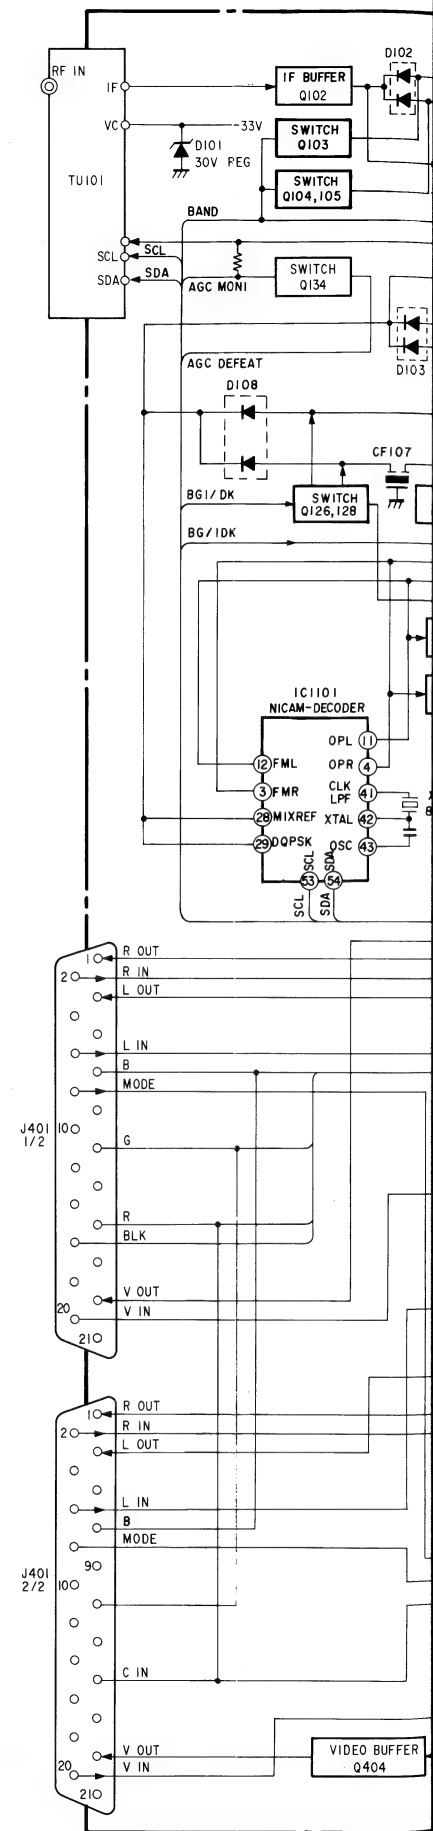

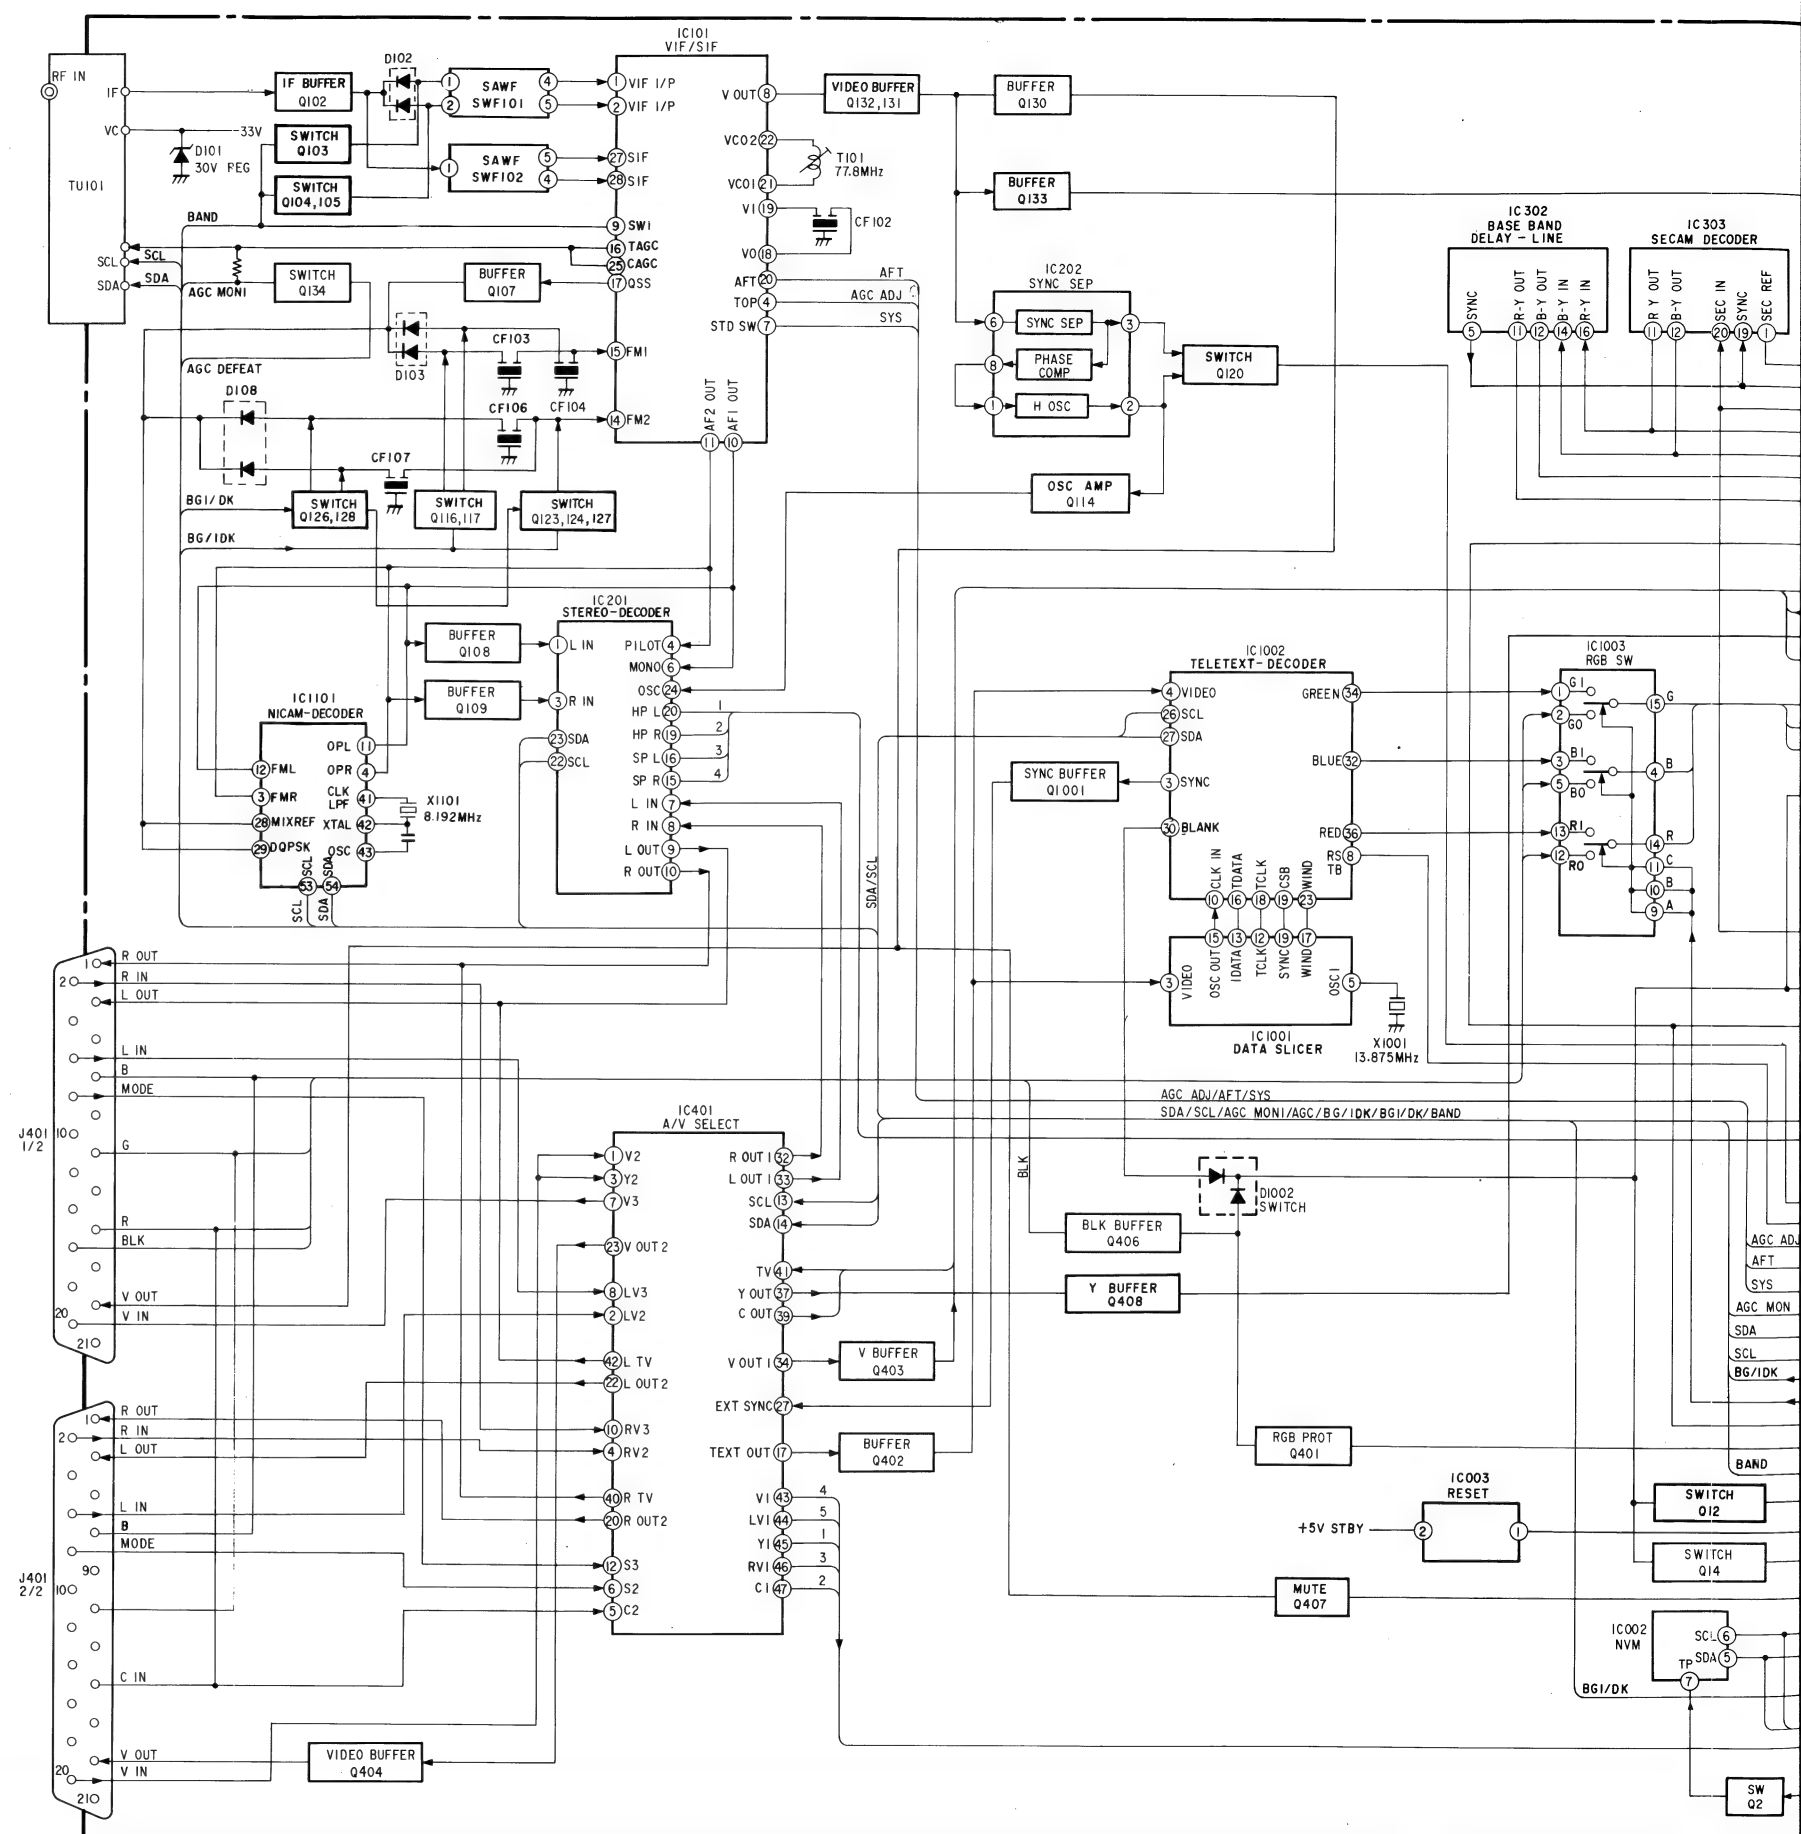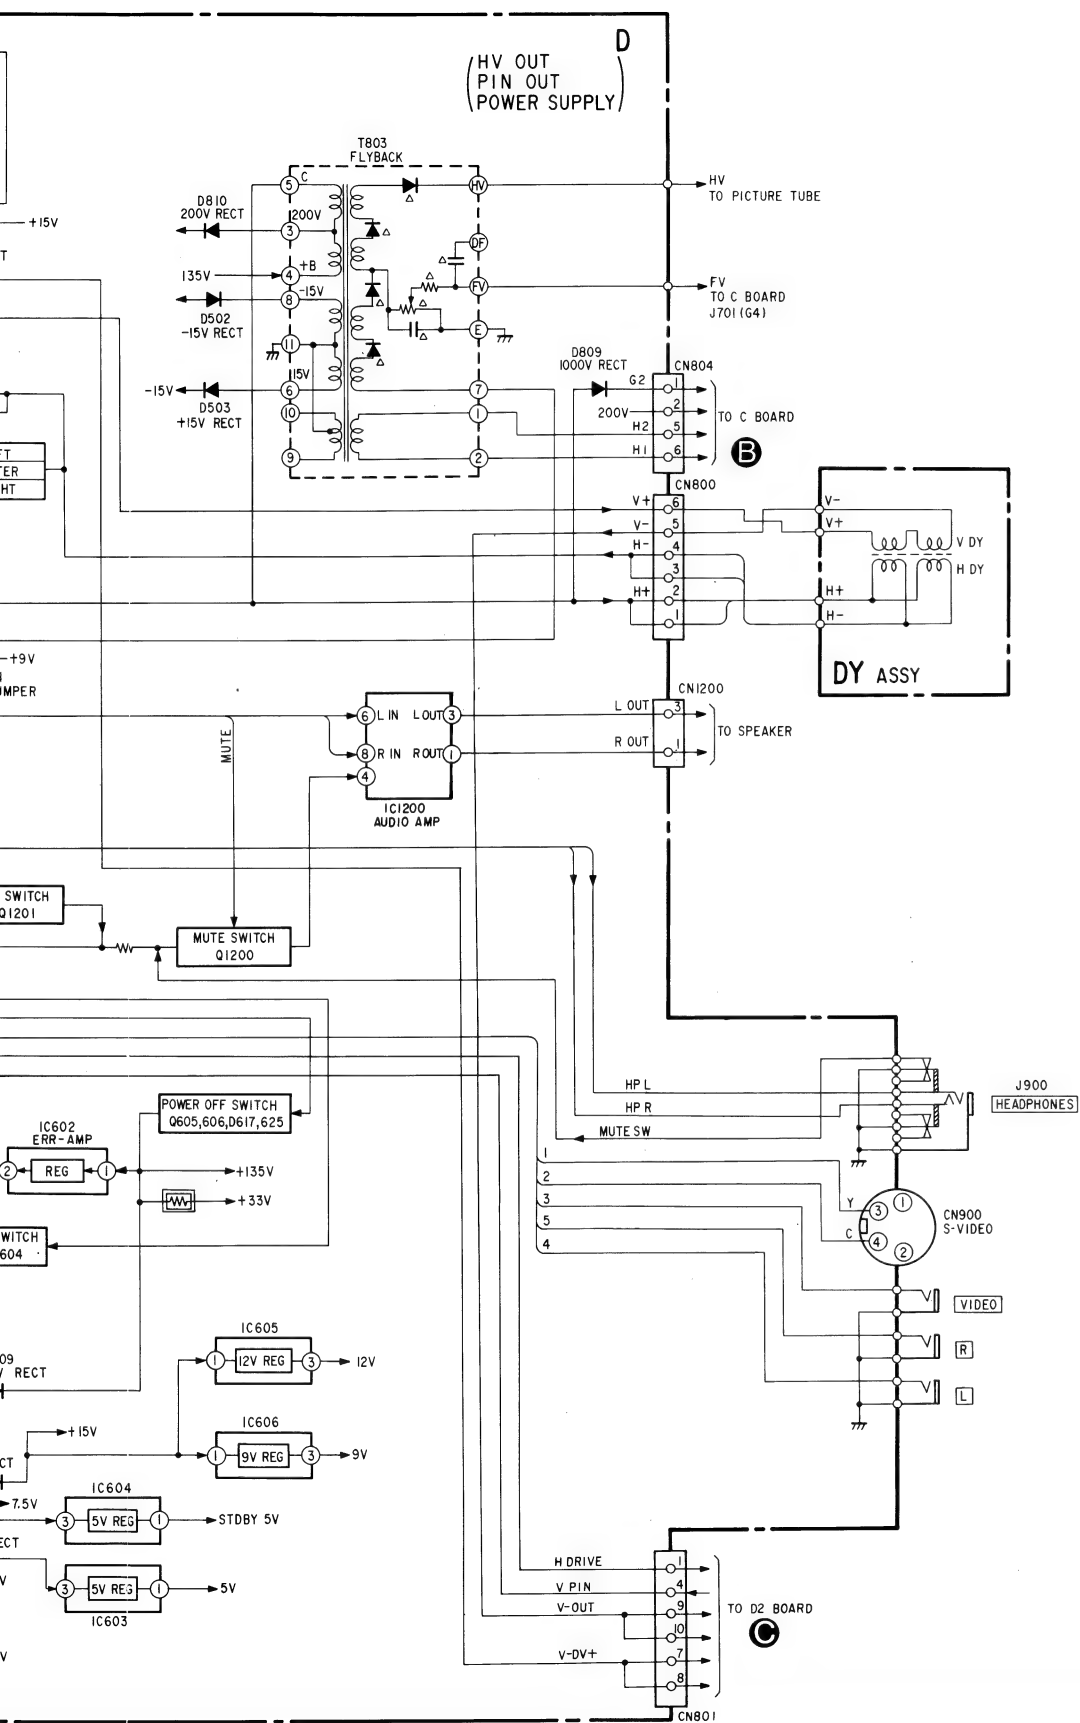

5-2. CIRCUIT BOARDS LOCATION

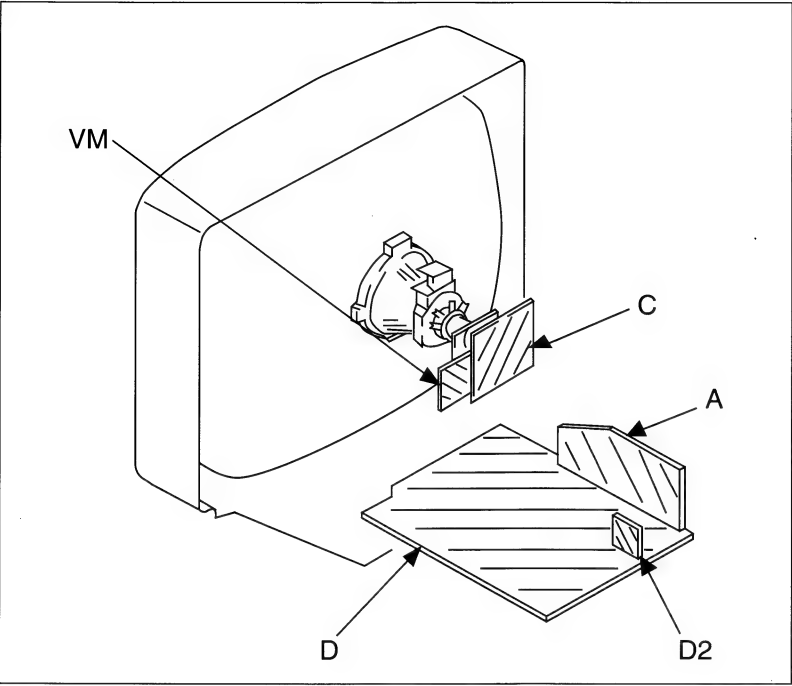

5-3. SCHEMATIC DIAGRAMS AND PRINTED WIRING BOARDS

- Note :**
- All capacitors are in μF unless otherwise noted. pF: μF 50WV or less are not indicated except for electrolytic and tantalums.
 - All resistors are in ohms.
k = 1000 , M = 1000K
 - Indication of resistance, which does not have one for rating electrical power, is as follows.

Pitch : 5 mm
Rating electrical power $\frac{1}{4}$ W

- : nonflammable resistor.
- : internal component.
- : panel designation, or adjustment for repair.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- : earth - ground.
- : earth - chassis.
- : no mounted.

Reference information		
RESISTOR	: RN	METAL FILM
	: RC	SOLID
	: FPRD	NONFLAMMABLE CARBON
	: FUSE	NONFLAMMABLE FUSIBLE
	: RS	NONFLAMMABLE METAL OXIDE
	: RB	NONFLAMMABLE CEMENT
	: RW	NONFLAMMABLE WIREWOUND
	:	ADJUSTABLE RESISTOR
COIL	: LF-8L	MICRO INDUCTOR
CAPACITOR	: TA	TANTALUM
	: PS	STYROL
	: PP	POLYPROPYLENE
	: PT	MYLAR
	: MPS	METALIZED POLYESTER
	: MPP	METALIZED POLYPROPYLENE
	: ALB	BIPOLAR
	: ALT	HIGH TEMPERATURE
	: ALR	HIGH RIPPLE


- Readings are taken with a colour-bar signal input.
- Readings are taken with 10M digital multimeter.
- Voltages are dc with respect to ground unless otherwise noted.
- Voltage variations may be noted due to normal production tolerances.
- All voltages are in V.
- Circled numbers are waveform references.
- : B+ bus.
- : signal path. (RF)

Note : The components identified by shading and marked are critical for safety. Replace only with the part number specified.


Note : Les composants identifiés par une trame et une marque sont critiques pour la securite. Ne les remplacer que par une piece portant le numero specifie.

D HV OUT
PIN OUT
POWER SUPPLY


— D BOARD —

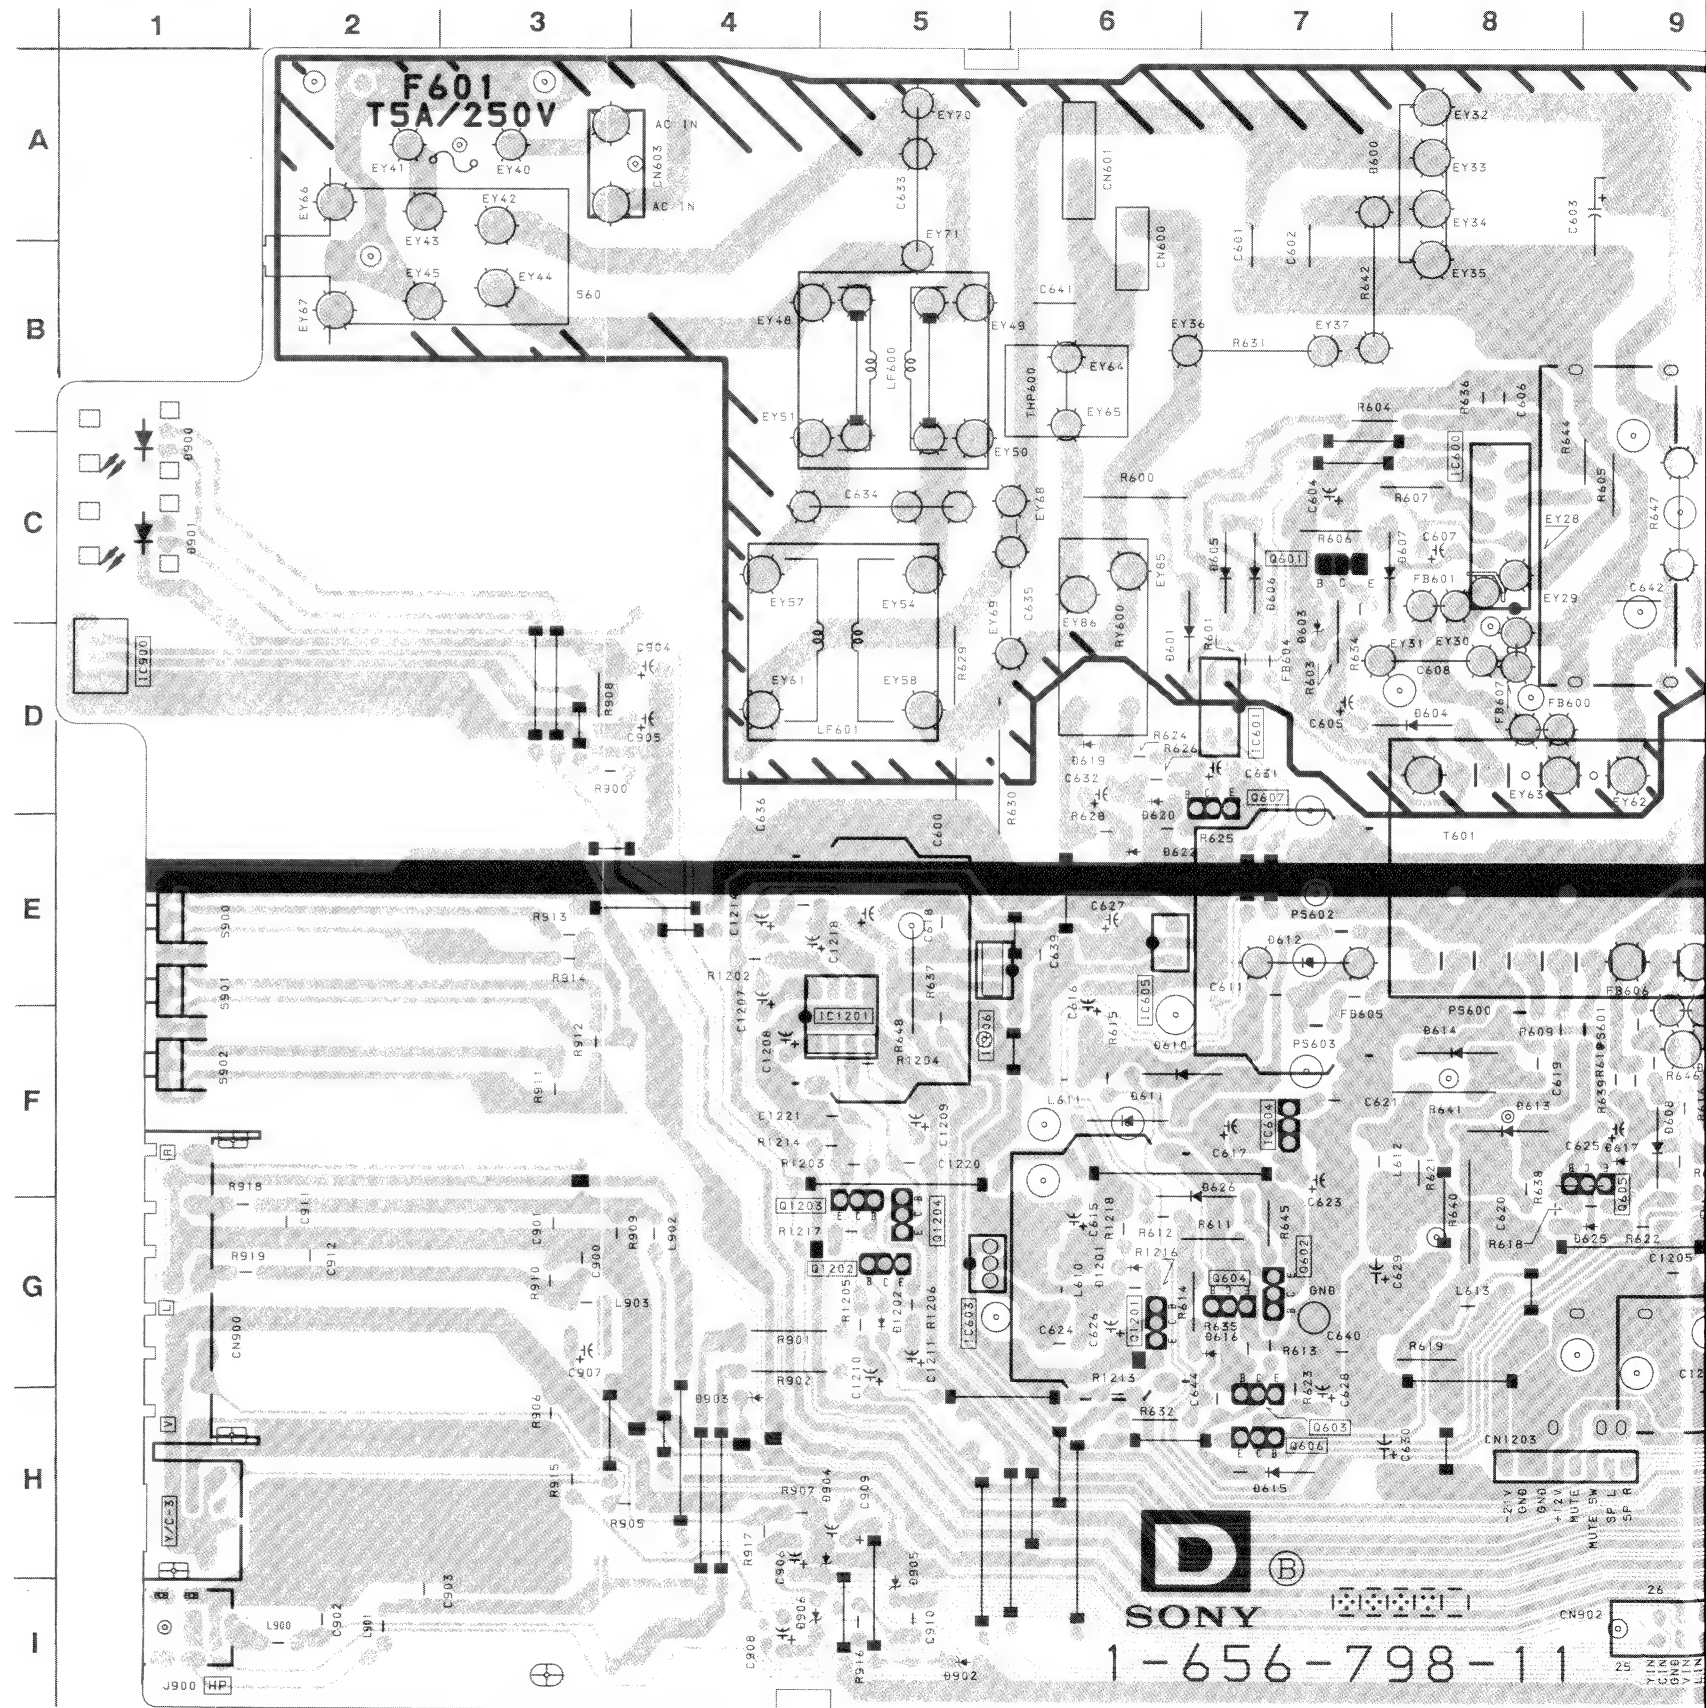


KV-C290

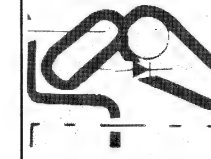



The circuit indicated as left contains high voltage of over 600 Vp-p. Care must be paid to prevent an electric shock in inspection or repairing.

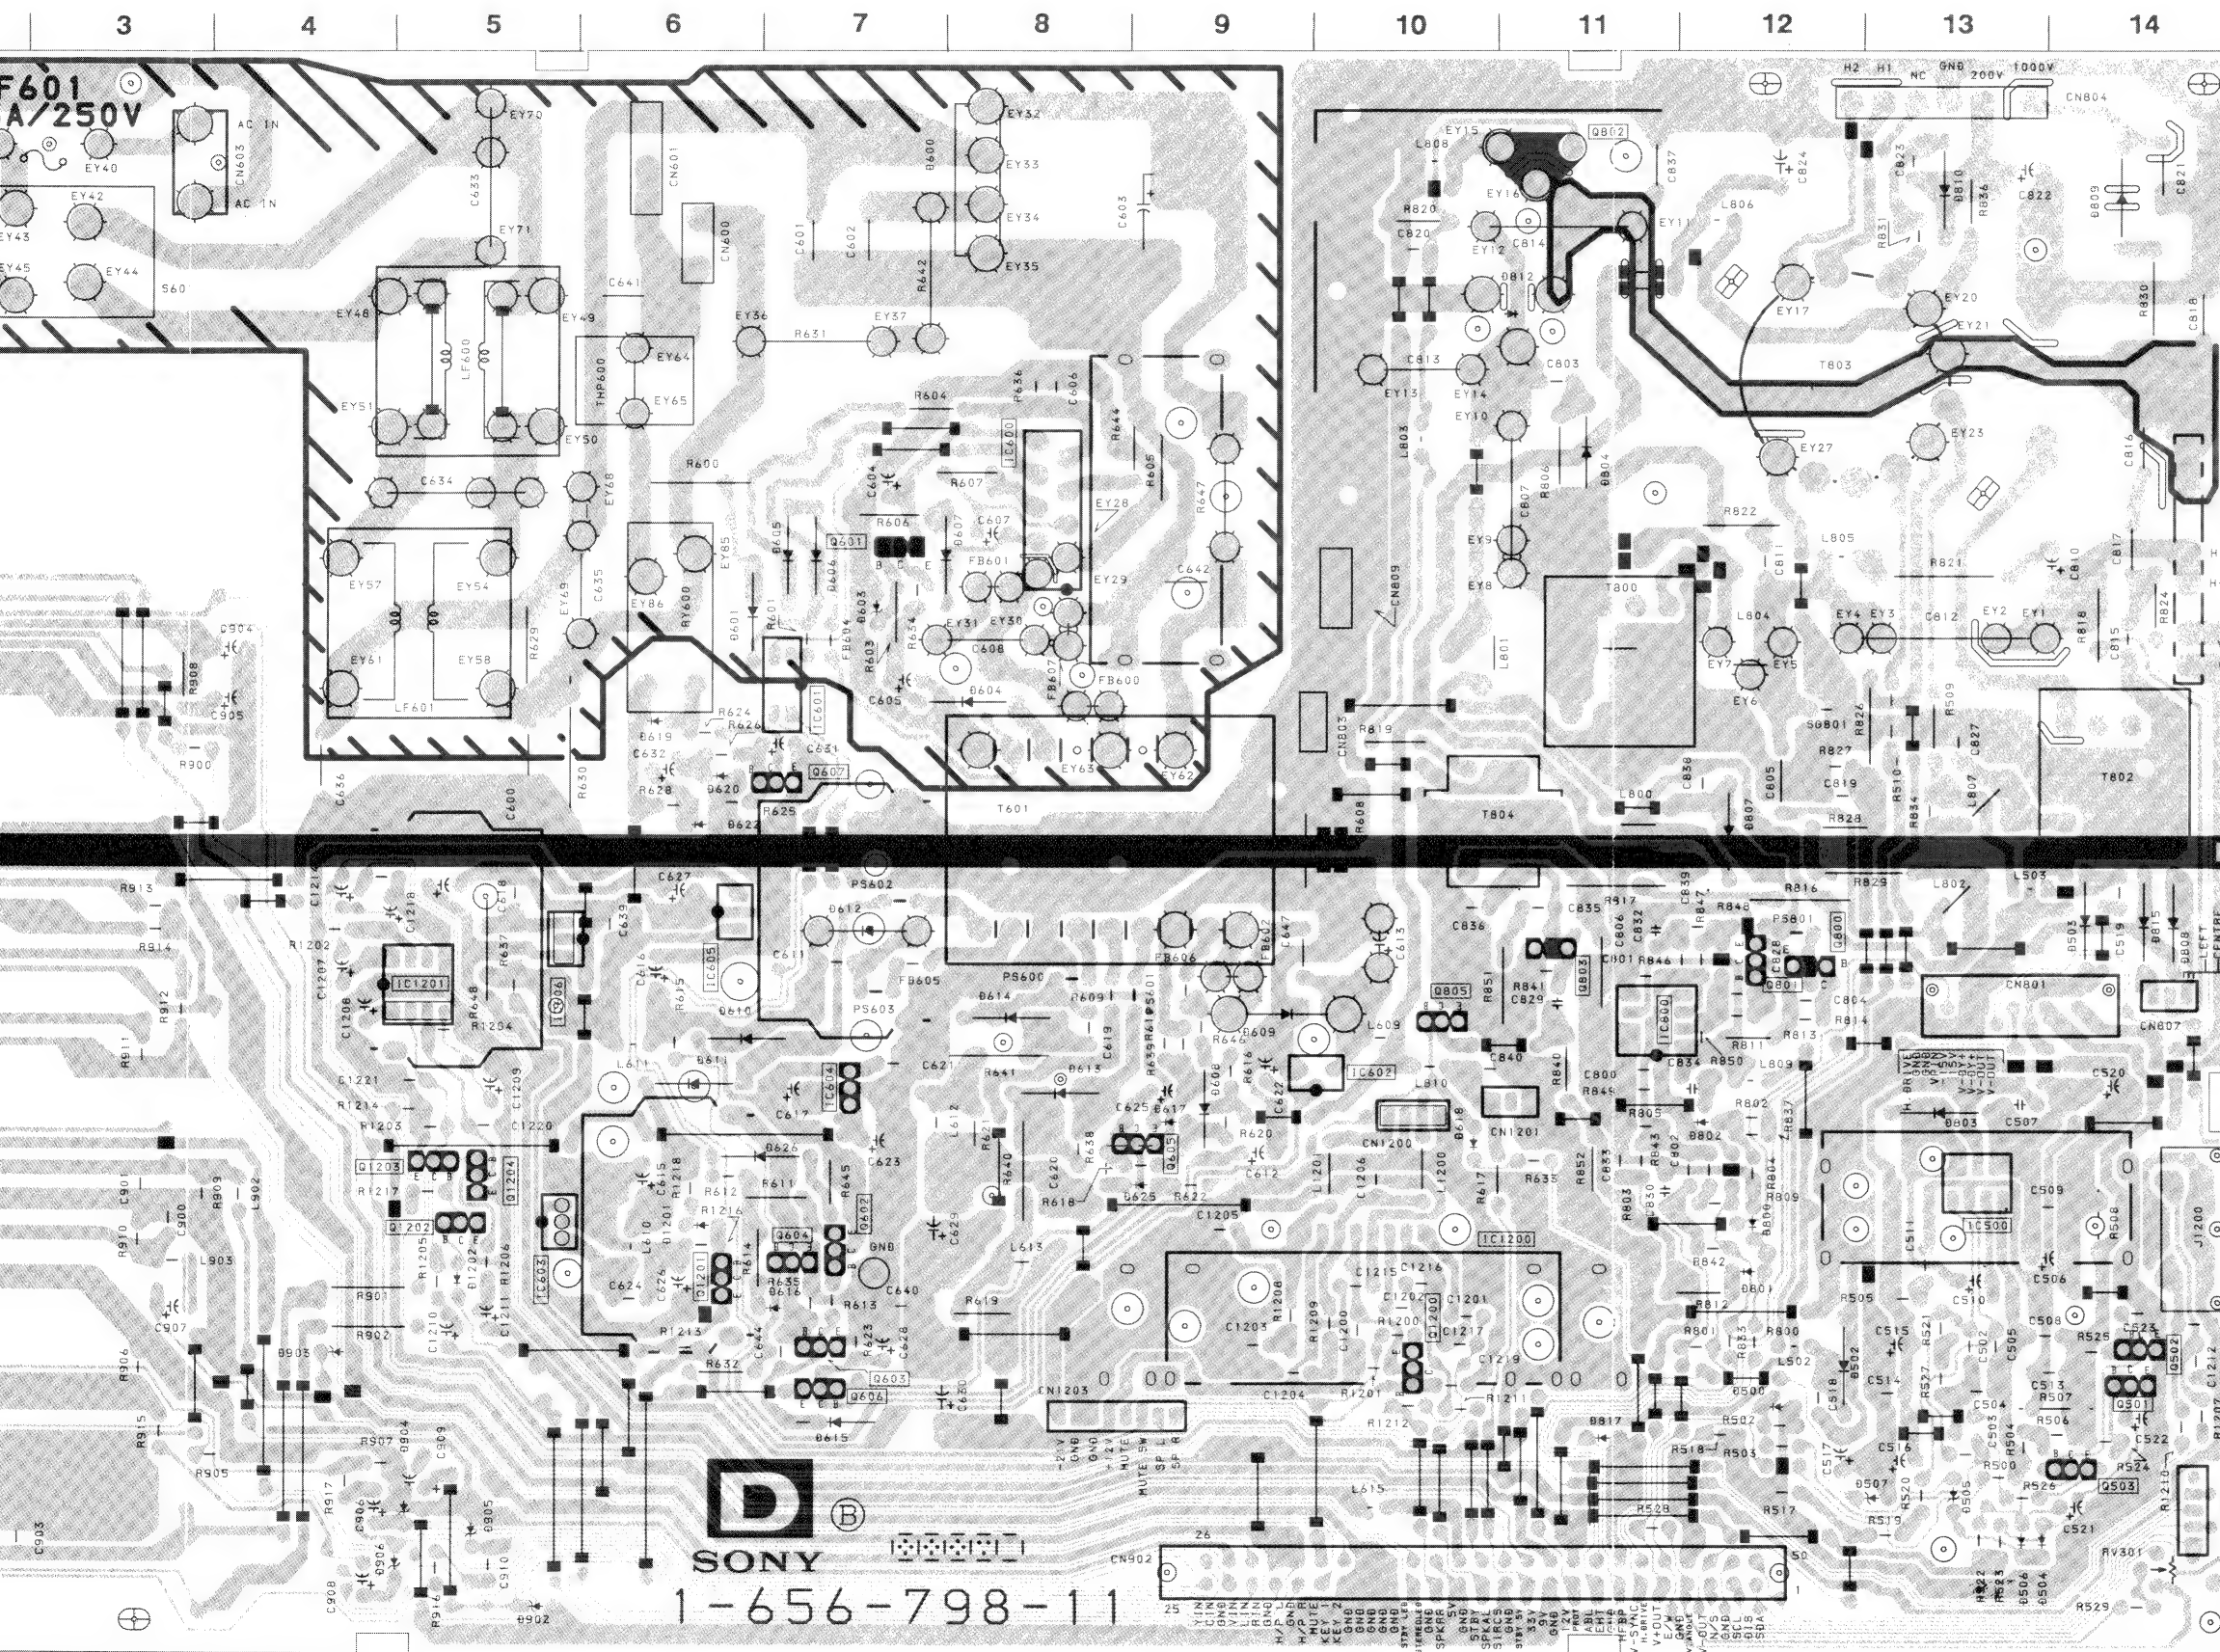


IC		D600	A-8
IC500	G-13	D601	D-6
IC600	C-8	D603	D-7
IC601	D-7	D604	D-8
IC602	F-10	D605	C-7
IC603	G-5	D606	C-7
IC604	F-7	D607	C-8
IC605	E-6	D608	F-9
IC606	F-5	D609	F-9
IC800	F-12	D610	F-6
IC1200	G-11	D611	F-6
IC1201	F-5	D612	E-7
		D613	F-8
TRANSISTOR		D614	F-8
		D615	H-7
Q501	H-14	D616	G-7
Q502	H-14	D617	F-9
Q503	H-14	D618	F-10
Q601	C-7	D619	D-6
Q602	G-7	D620	E-6
Q603	H-7	D622	E-6
Q604	G-7	D625	G-9
Q605	G-9	D626	G-7
Q606	H-7	D800	G-12
Q607	D-7	D801	G-12
Q800	E-12	D802	F-12
Q801	F-12	D803	F-13
Q802	A-11	D807	E-12
Q803	E-11	D808	E-14
Q805	F-10	D809	A-14
Q1200	H-10	D810	A-13
Q1201	G-6	D812	B-11
Q1202	G-5	D815	E-14
Q1203	G-5	D817	H-11
Q1204	G-5	D902	I-5
		D903	H-4
DIODE		D904	H-5
D500	H-12	D905	I-5
D502	H-13	D906	I-5
D503	E-14	D1201	G-6
D504	I-14	VARIABLE RESISTOR	
D505	H-13		
D506	I-14	RV301	I-14
D507	H-13		

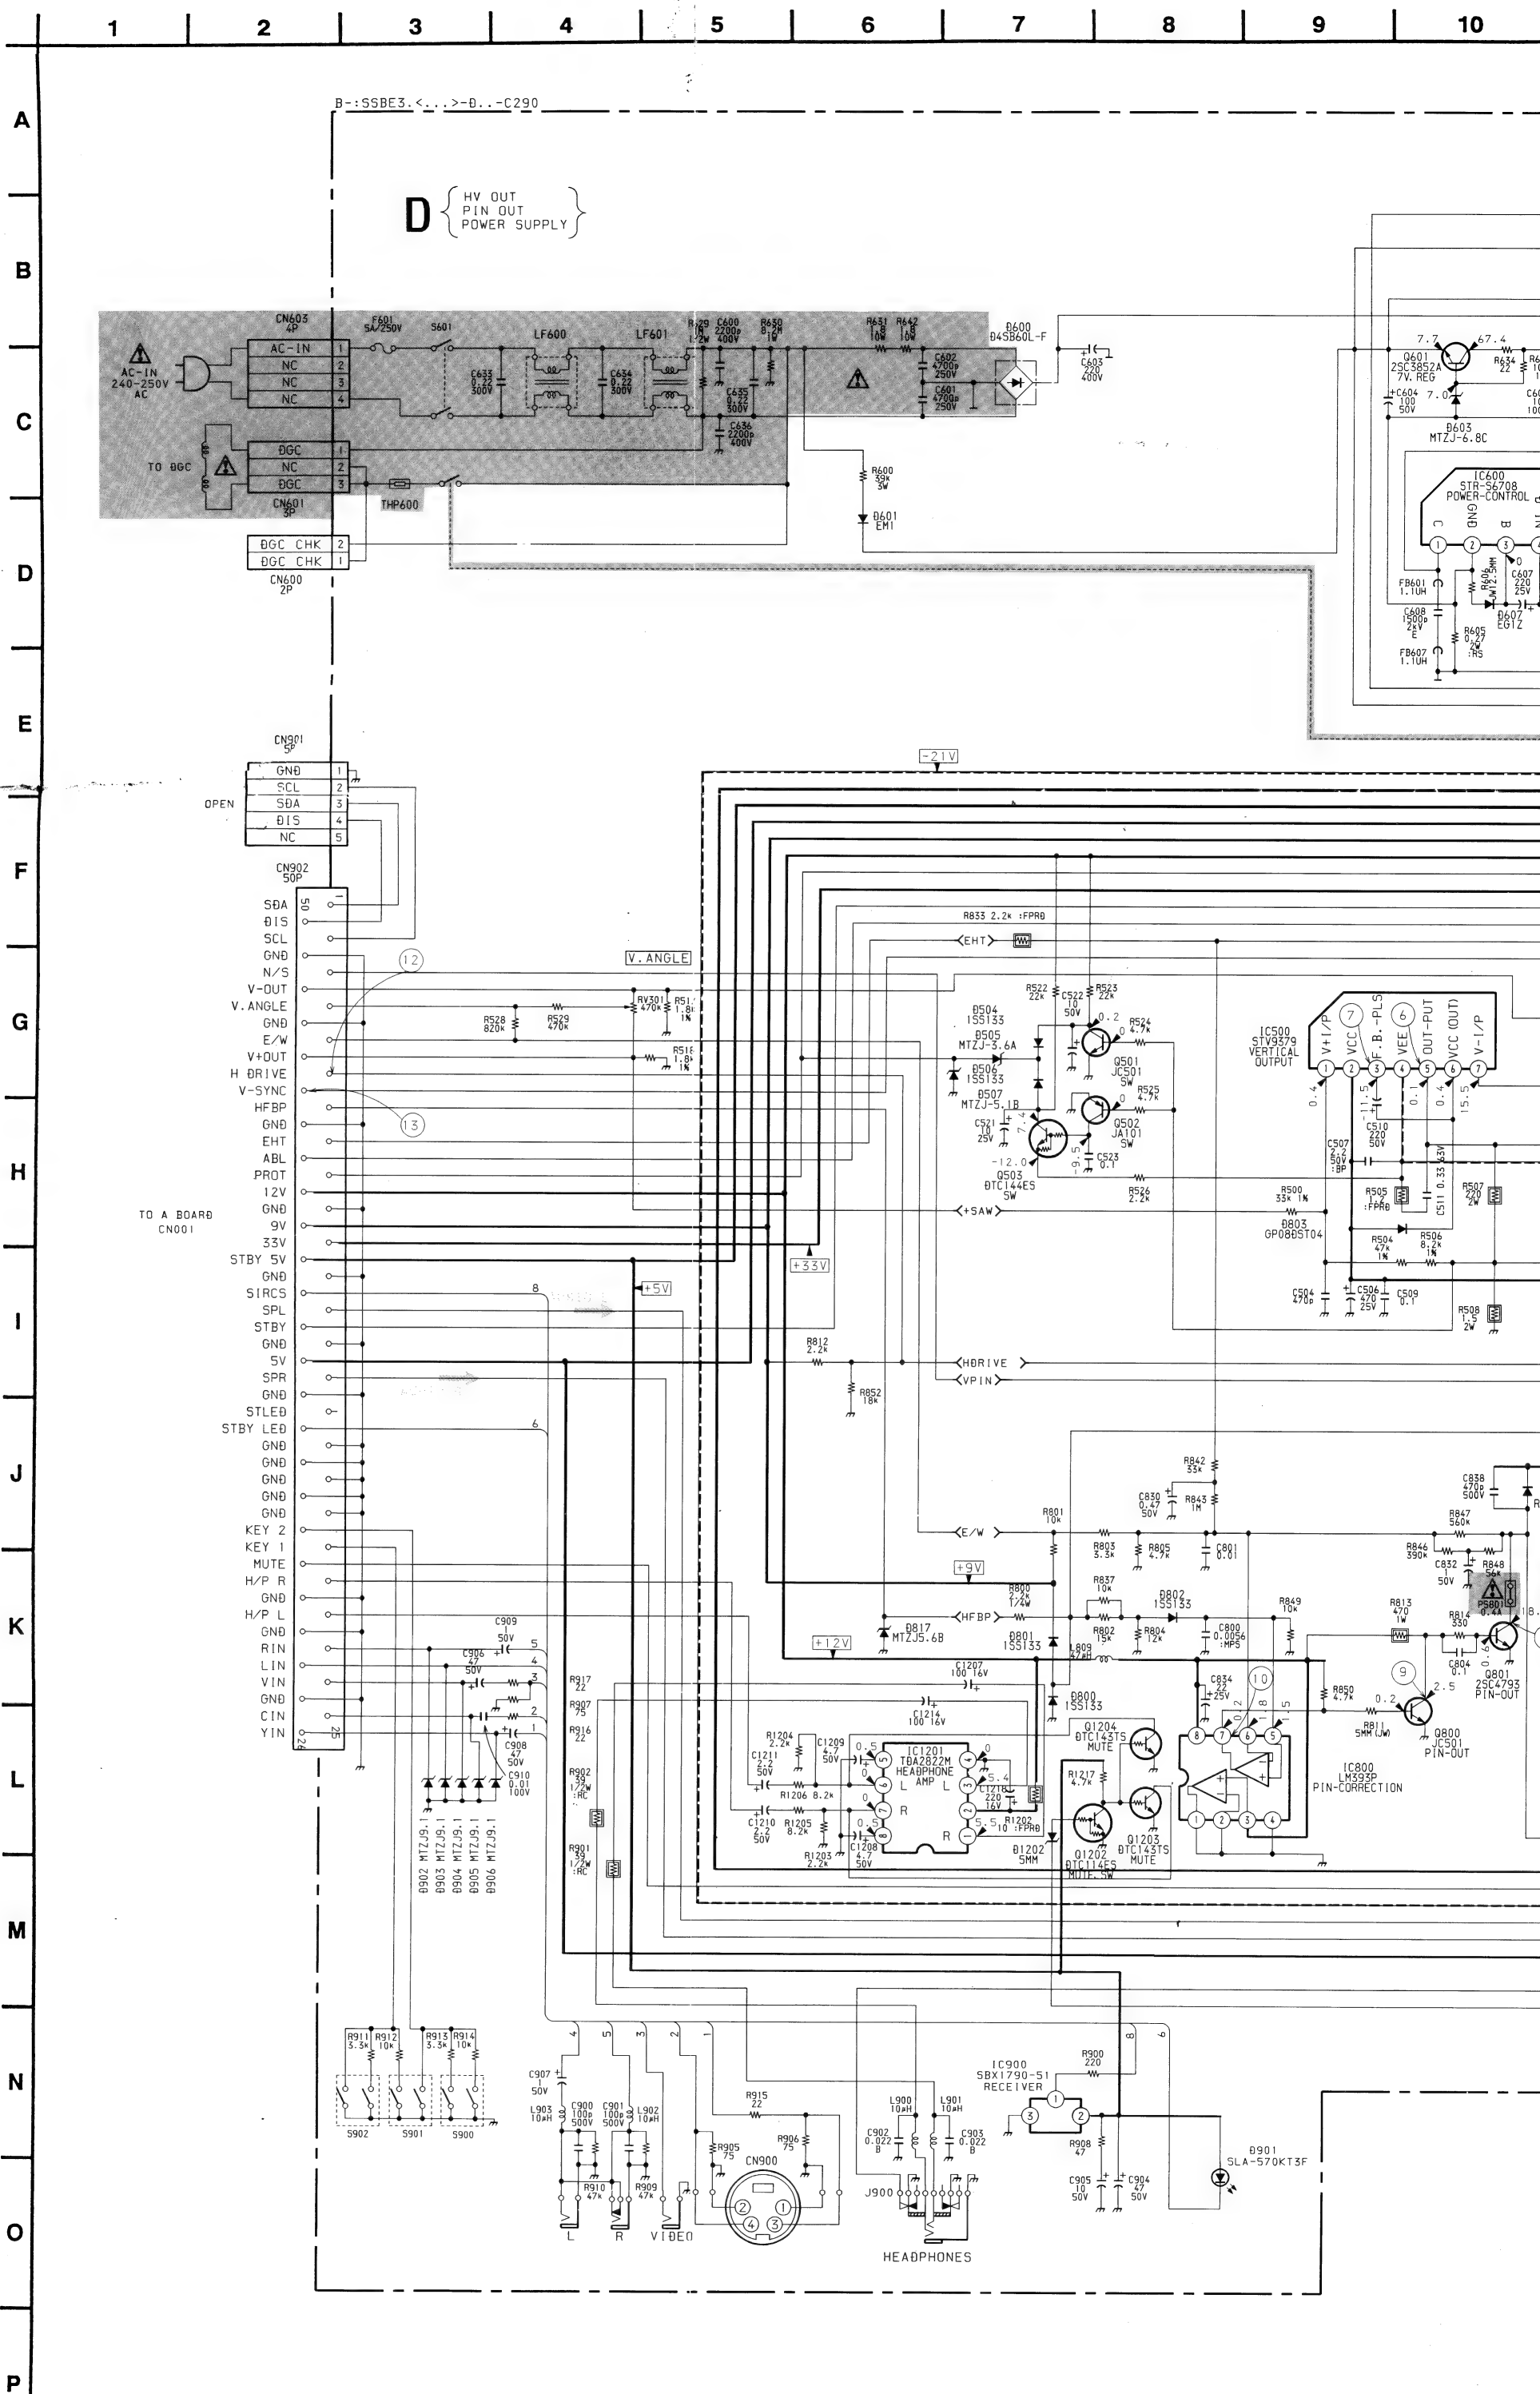

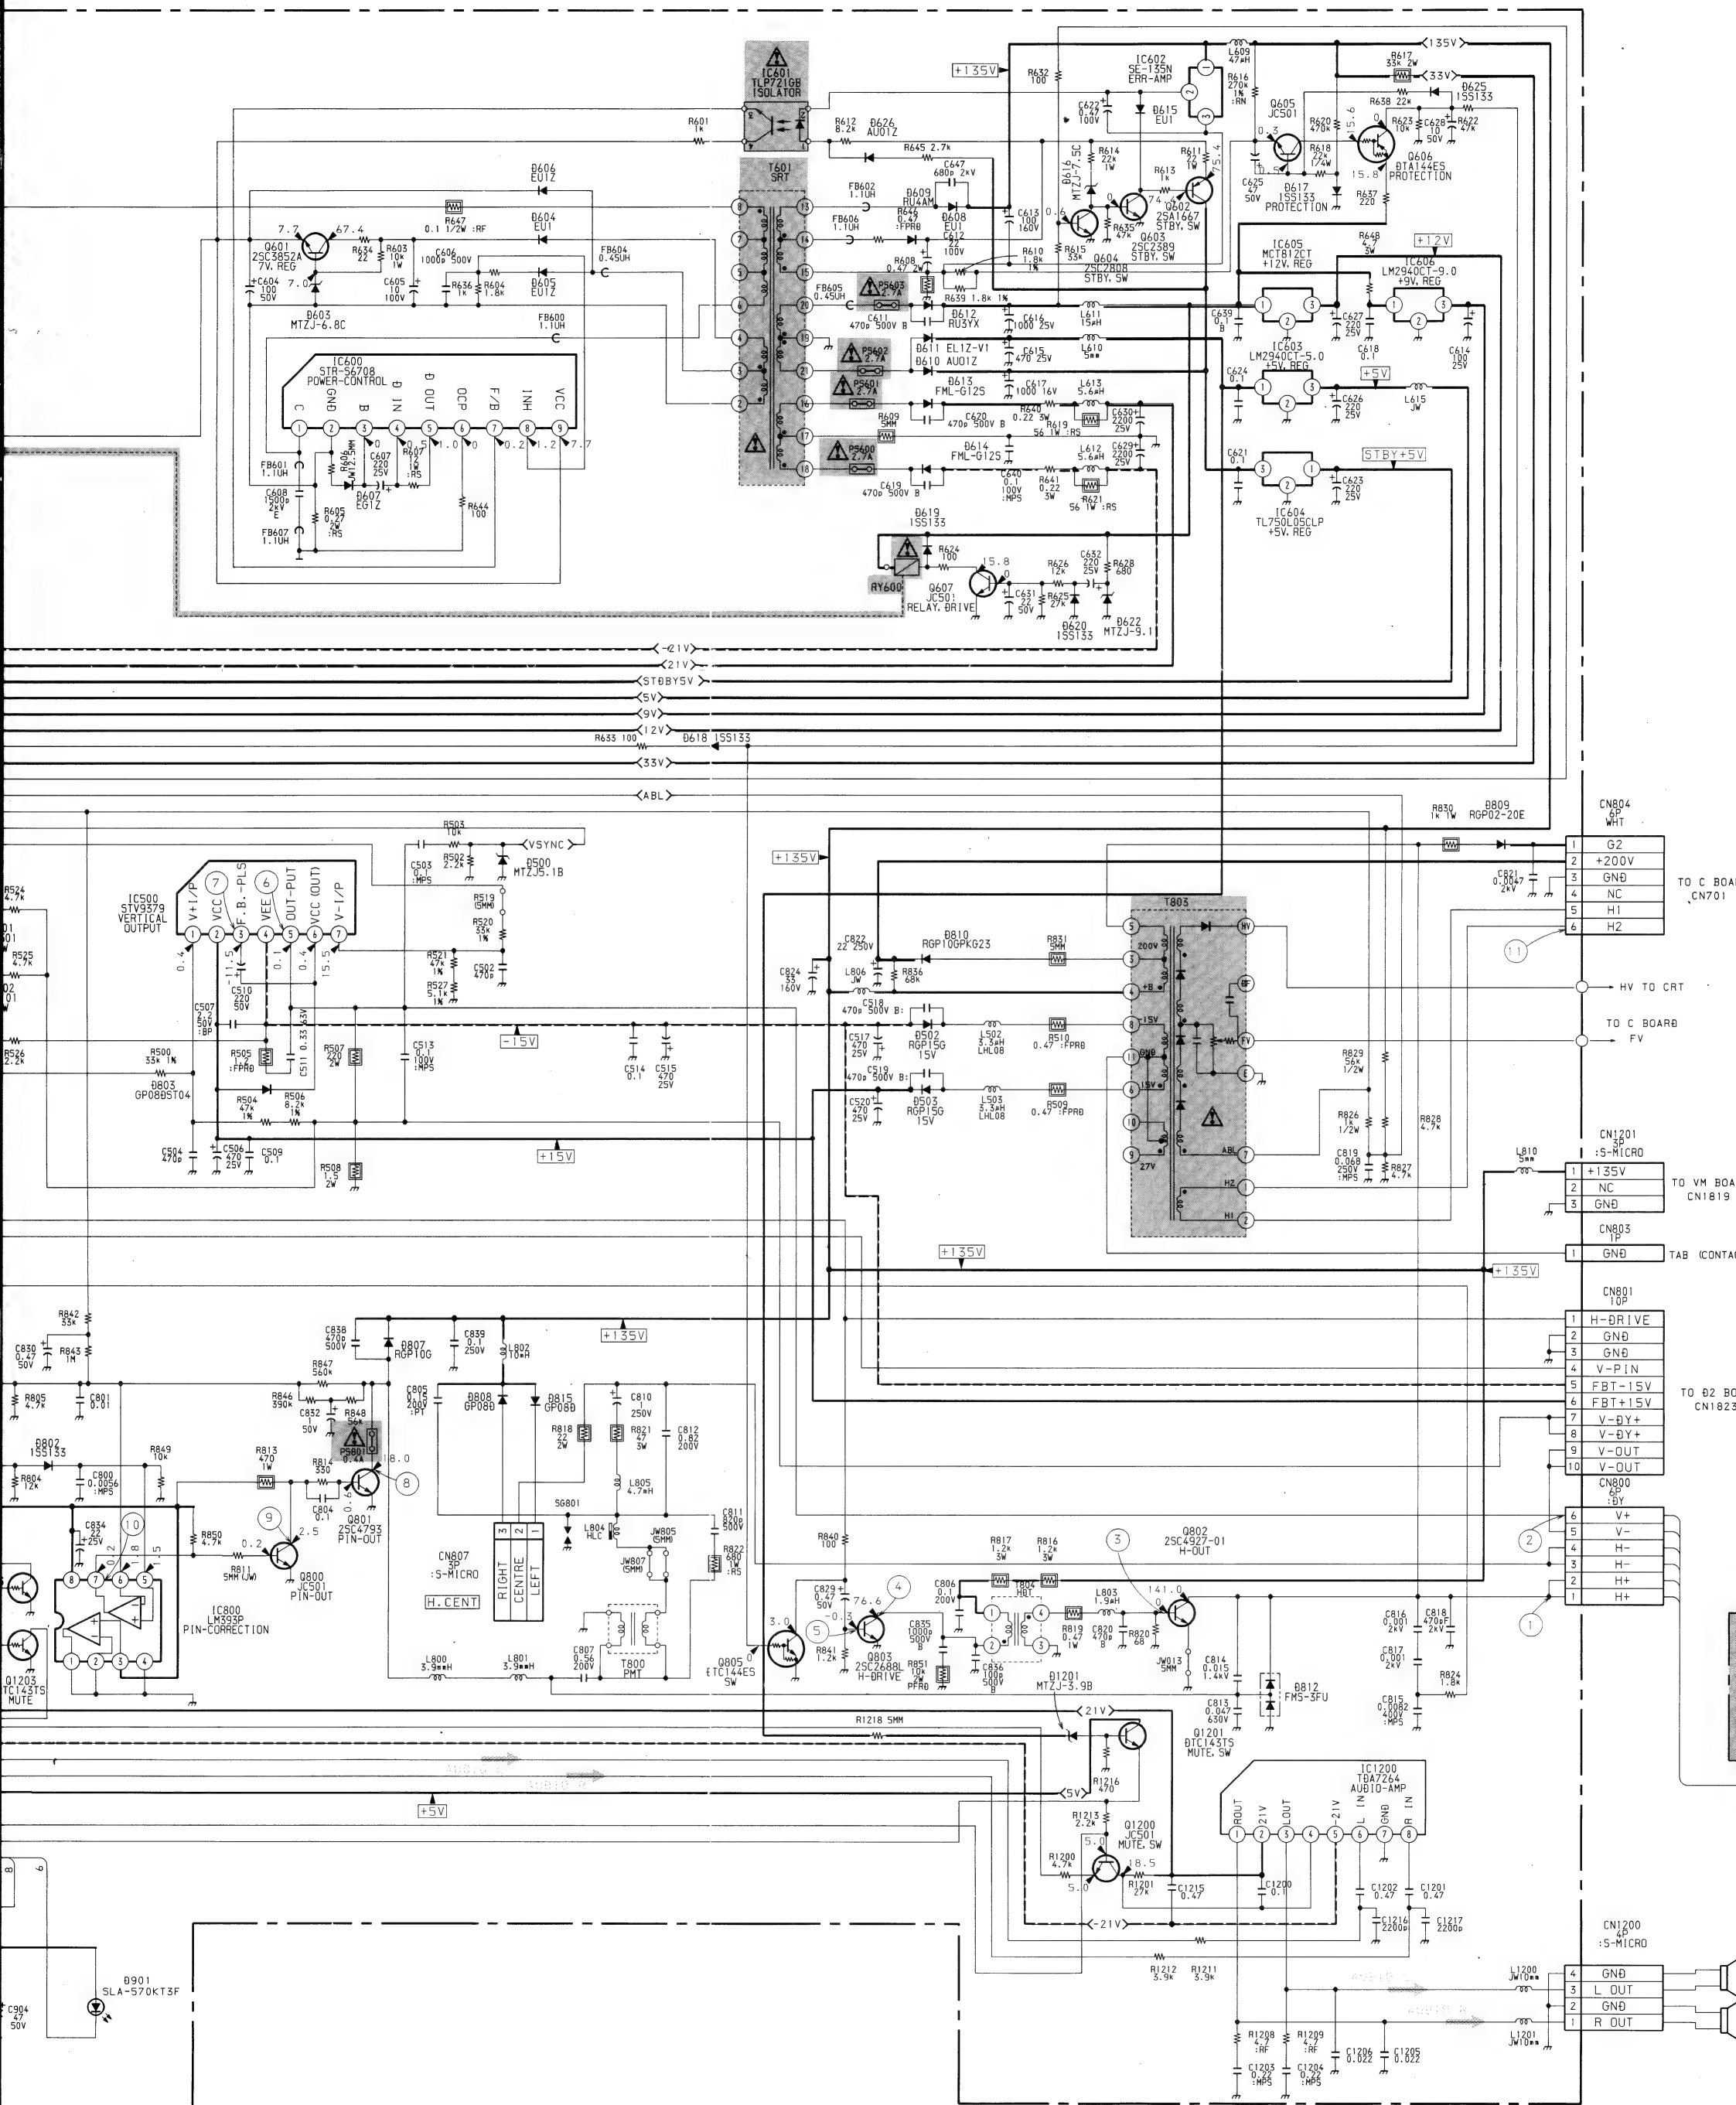


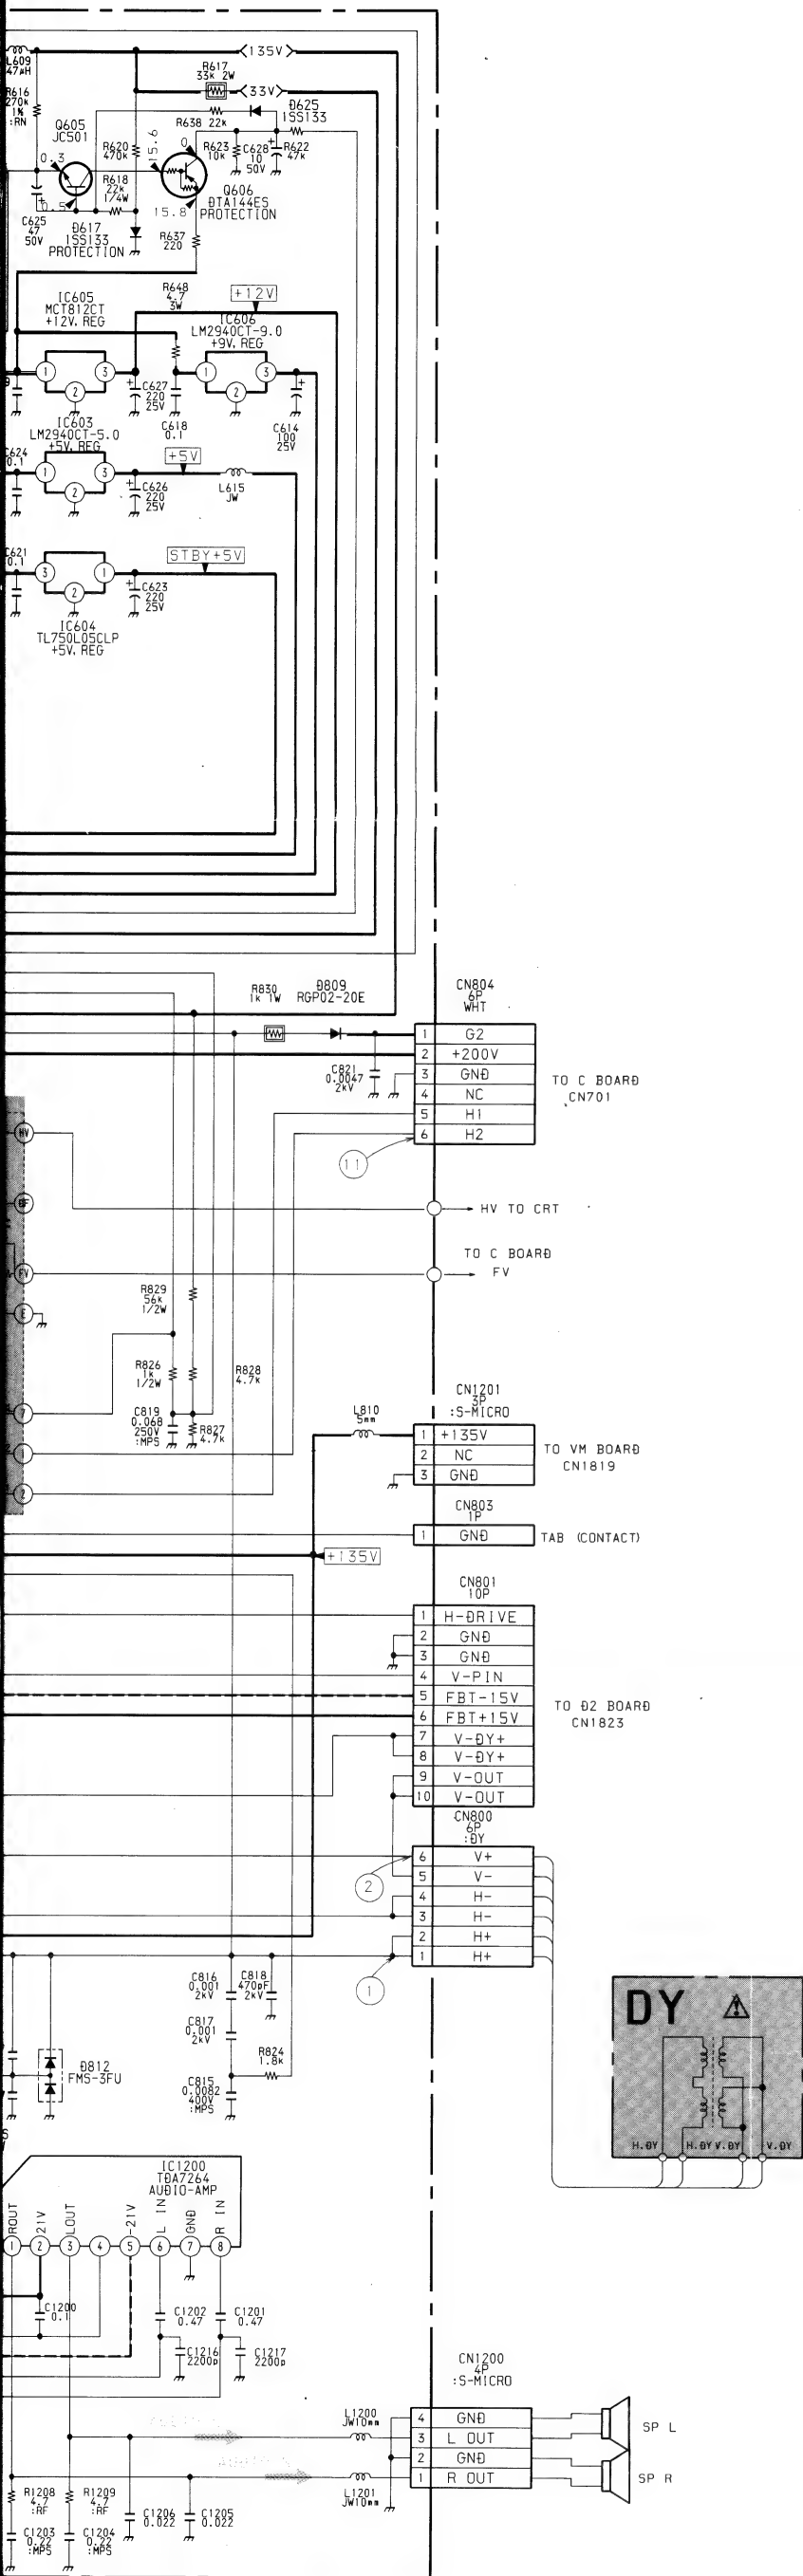


WAVEFORMS D BOARD

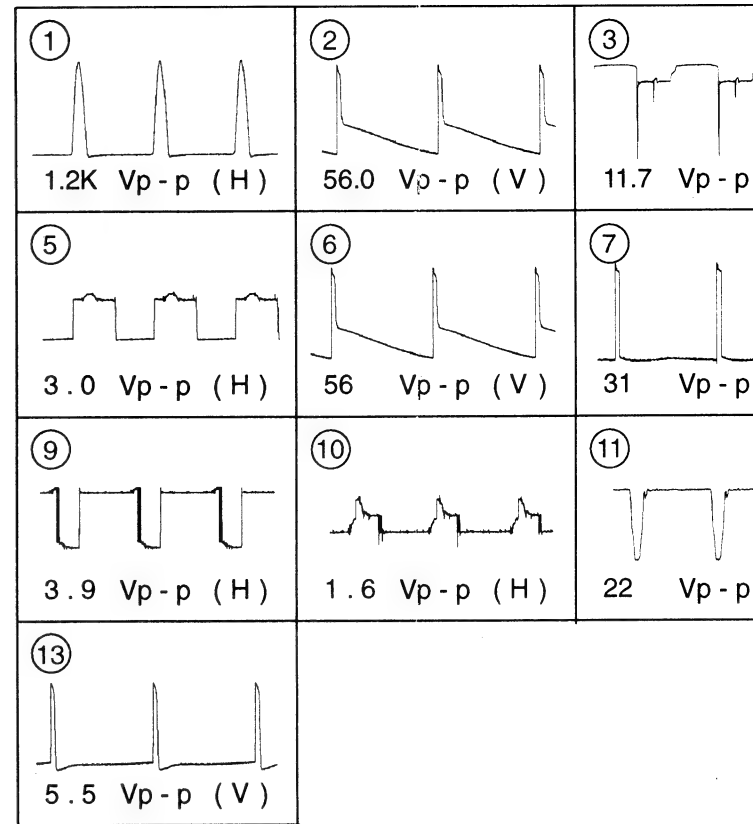


D BOARD IC500 STV9379

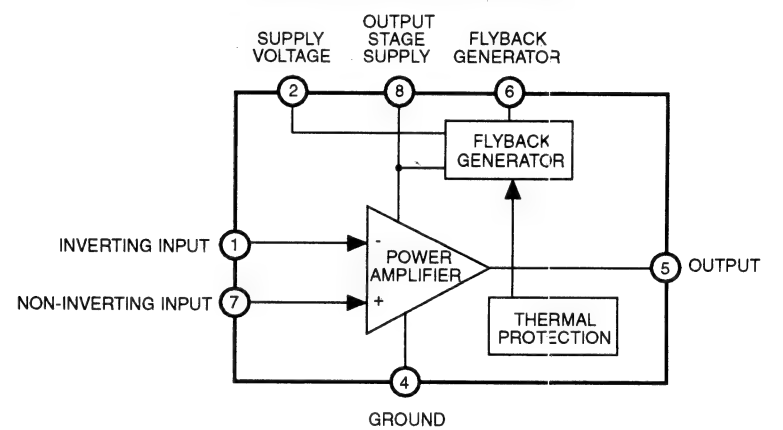


D BOARD IC600 STR-S6708

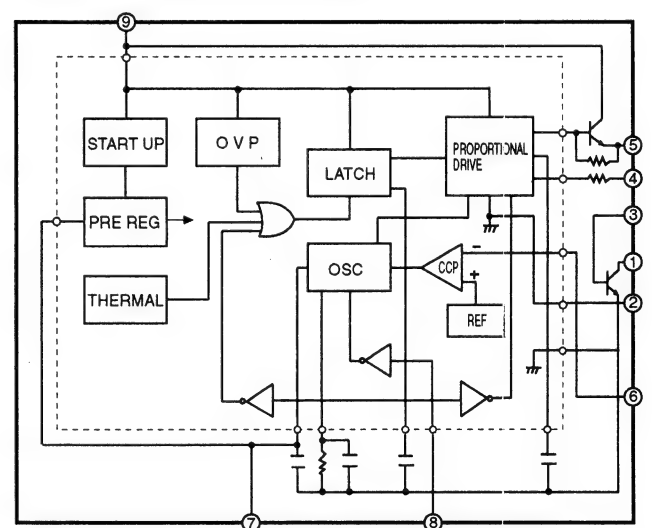


WAVEFORMS D BOARD

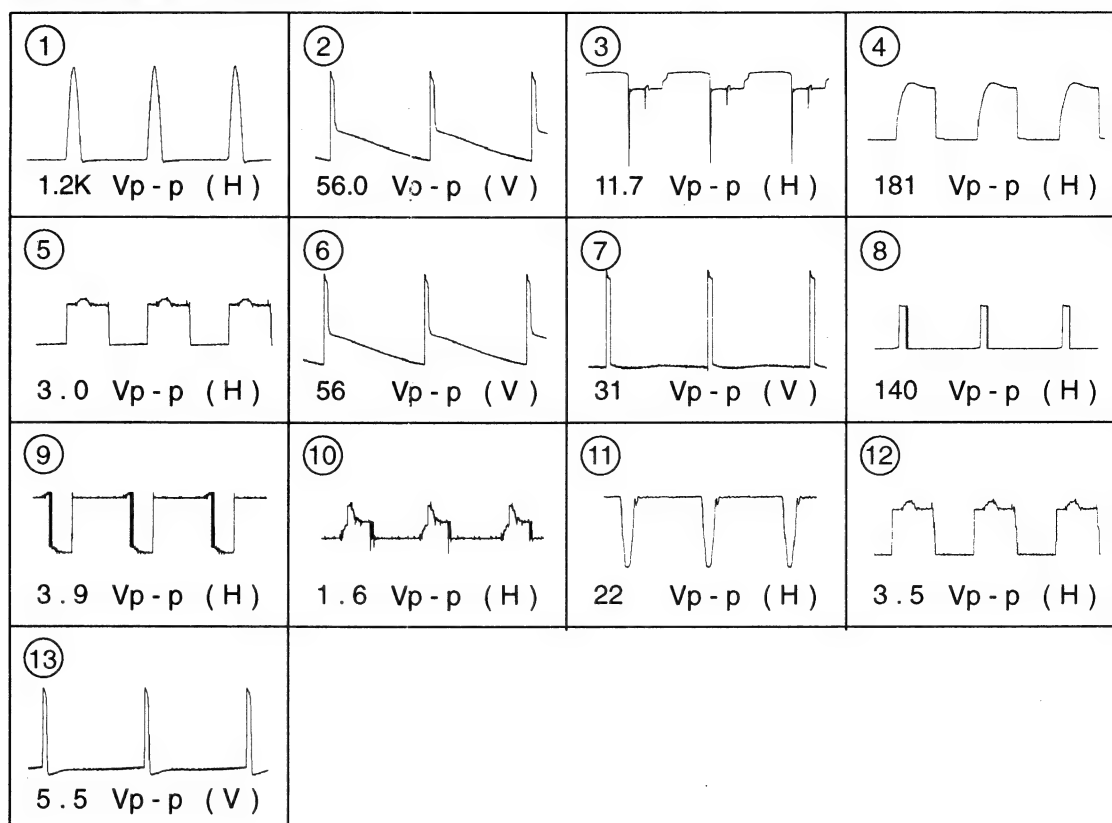


D BOARD IC500 STV9379

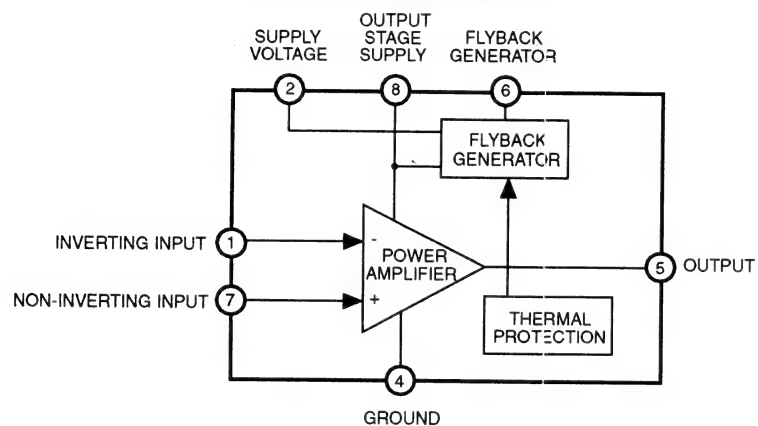


D BOARD IC600 STR-S6708

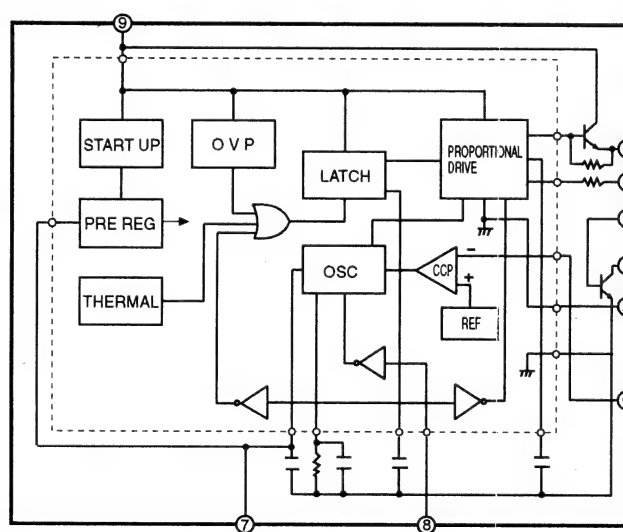

D BOARD IC1200 TDA7264

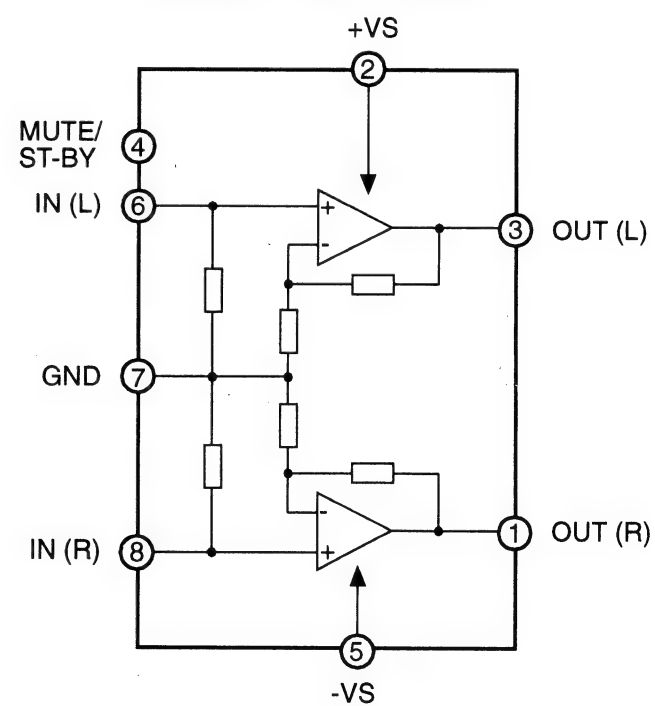


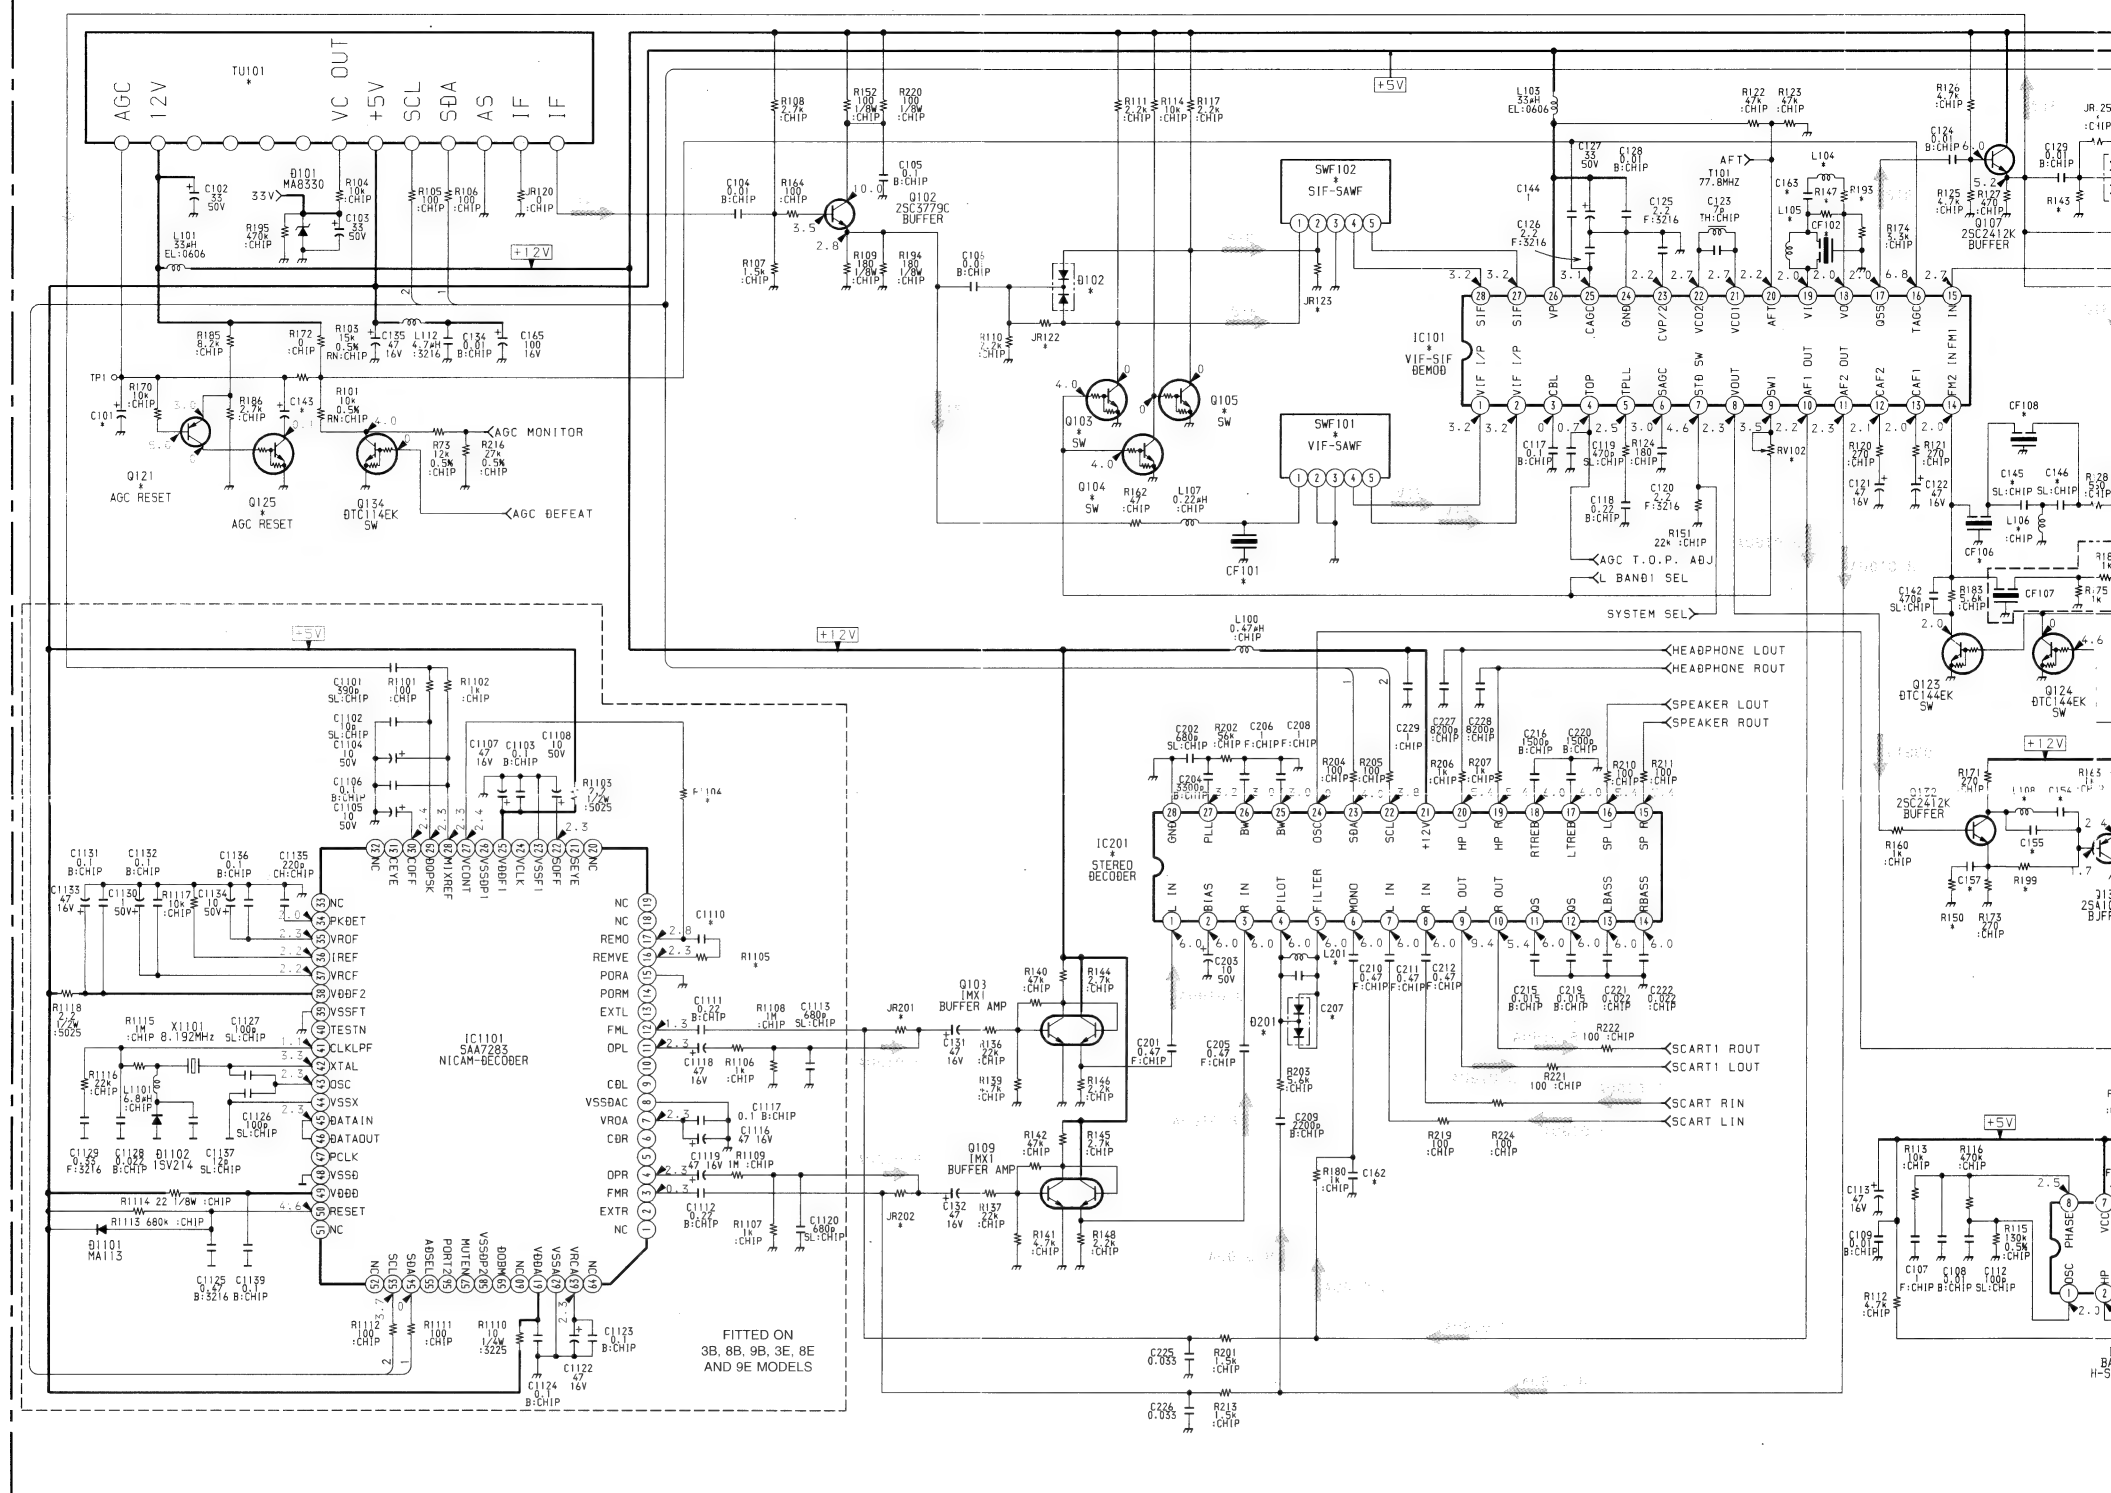


WAVEFORMS A BOARD





IC	Pin	PAL	SECAM	NTSC 3.58	NTSC 4.43
IC301	17	4.0	4.0	4.0	0
	35	3.6	2.5	3.5	3.5
	44	1.5	3.1	1.5	1.5
	45	1.5	3.0	1.5	1.5
	48	1.7	4.4	1.6	1.7
	49	1.4	1.4	2.0	1.4
	50	2.0	2.0	1.4	2.0
	63	3.4	2.5	2.2	2.5
IC303	1	1.7	4.4	1.6	1.7
	11	1.5	3.0	1.5	1.5
	12	1.5	3.1	1.5	1.5

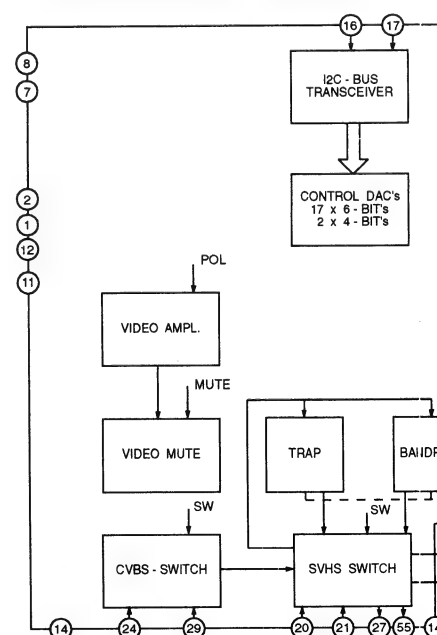

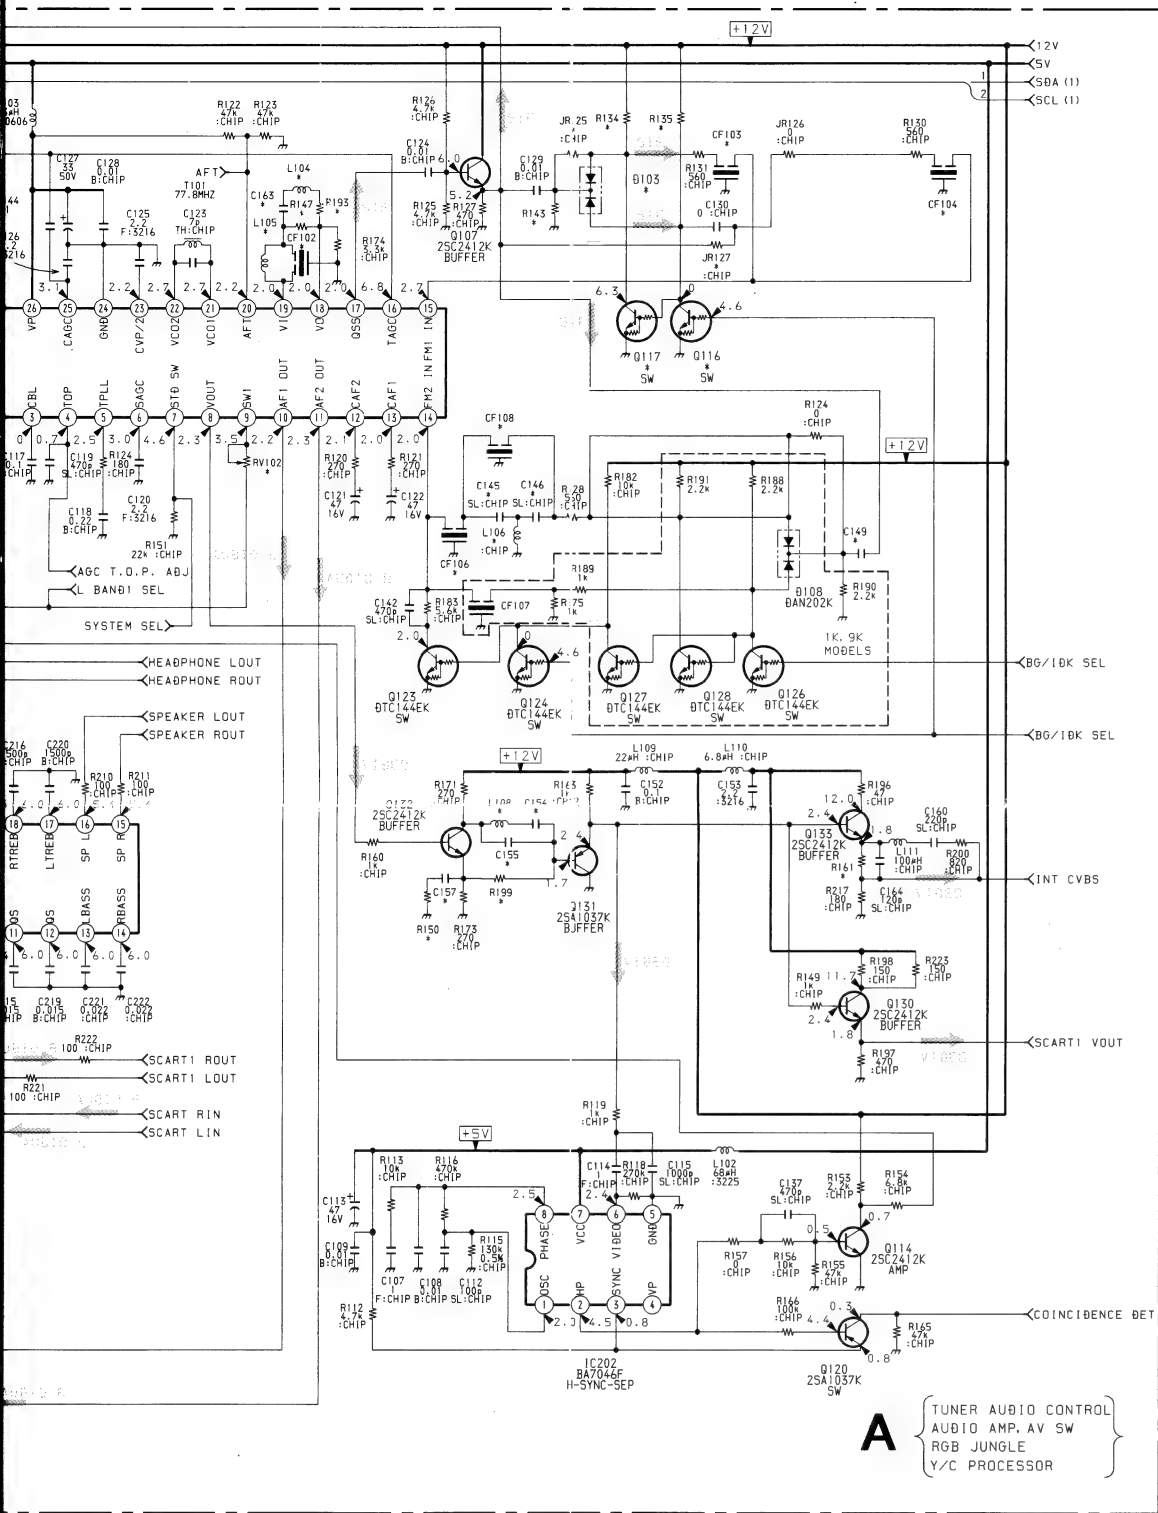

50/C290

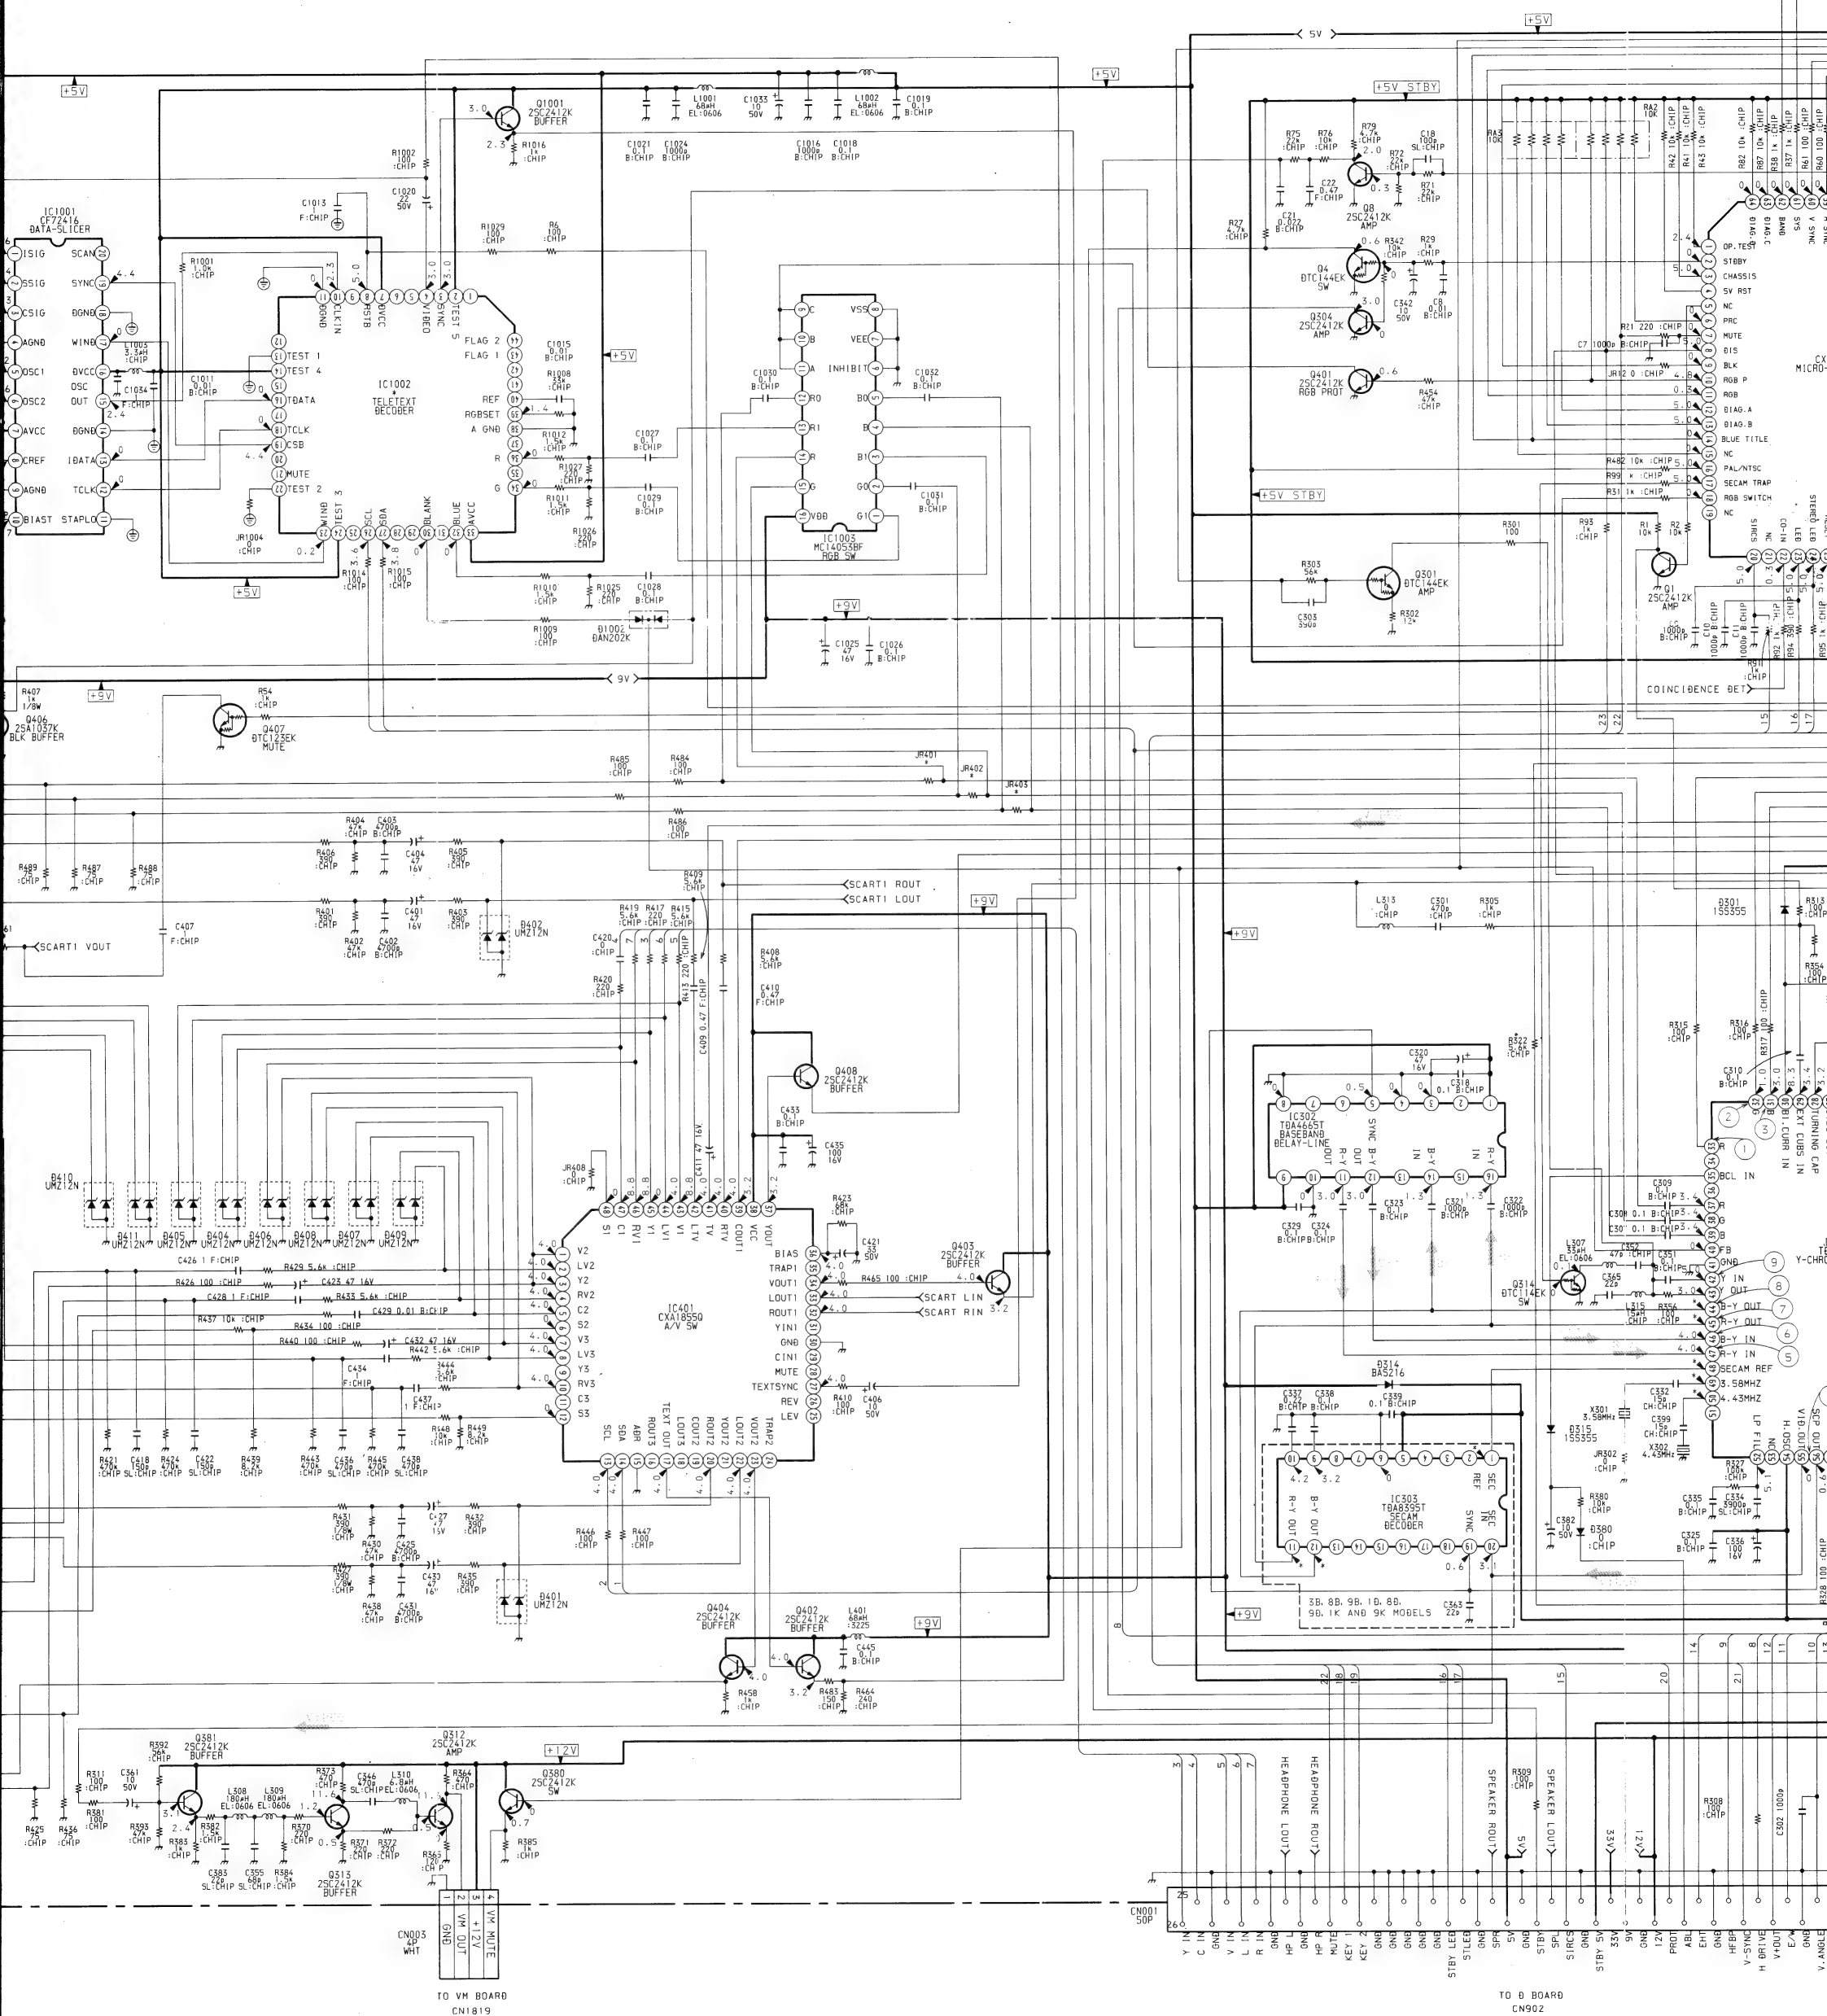

 



A BOARD * MARK

Model Ref	C2901A	C2903B C2908B C2909B	C2901D C2908D C2909D	C2903E C2908E C2909E	C2901K C2909K
C101	22 / 50V	4.7 / 50V	22 / 50V	22 / 50V	22 / 50V
C143	—	100 / 16V	—	—	—
C145	10p	10p	—	10p	10p
C146	10p	10p	—	10p	10p
C149	0	0	0	0	0.01
C154	68p	33p	68p	68p	68p
C155	10p	—	10p	10p	10p
C157	33p	68p	33p	33p	33p
C162	—	0.012	—	—	—
C163	—	1000p	—	—	—
C207	0.018 / 100V	0.018 / 100V	0.018 / 100V	0.018 / 100V	0.018 / 100V
C1110	—	0.047	—	0.047	—
CF101	EFCV4045A4	EFCV4045A4	EFCV4045A4	EFCV4045A4	EFCV4045A4
CF102	5.5MHz	6.5MHz	5.5MHz	5.5MHz	5.5MHz
CF103	5.5MHz	5.5MHz	5.5MHz	5.5MHz	5.5MHz
CF104	—	6.0MHz	6.5MHz	—	6.5MHz
CF106	5.7MHz	5.7MHz	5.7MHz	5.7MHz	5.7MHz
CF108	—	—	5.7MHz	—	—
D102	—	DAN202K	—	—	—
D103	—	DAN202K	DAN202K	—	DAN202K
D201	DA204K	DA204K	DA204K	DA204K	DA204K
IC101	TDA9813T	TDA9814T	TDA9813T	TDA9813T	TDA9813T
IC201	TDA6612	TDA6612	TDA6612	TDA6612	TDA6612
IC1002	CF70200FN	—	CF70203FN	CF70200FN	CF70200FN
JR122	0	—	0	0	0
JR123	0	—	0	0	0
JR125	0	—	—	0	—
JR127	—	—	—	—	—
JR201	0	—	0	—	0
JR202	0	—	0	—	0
JR401	—	0	—	—	—
JR402	—	0	—	—	—
JR403	—	0	—	—	—
L104	—	100UH	—	—	—
L105	12UH	5.6UH	12UH	12UH	12UH
L108	33UH	27UH	33UH	33UH	33UH
L201	4.7mH	4.7mH	4.7mH	4.7mH	4.7mH
Q103	—	DTC114EK	—	—	—
Q104	—	DTC114EK	—	—	—
Q105	—	DTC114EK	—	—	—
Q116	—	DTC144EK	DTC144EK	—	DTC144EK
Q117	—	DTC144EK	DTC144EK	—	DTC144EK
Q121	—	2SA1162-G	—	—	—
Q125	—	DTC114EK	—	—	—
R134	—	2.2K	2.2K	—	2.2K
R135	—	2.2K	2.2K	—	2.2K
R143	—	2.2K	2.2K	—	2.2K
R147	220	180	220	220	220
R150	0	0	0	0	0
R161	180	180	180	180	180
R193	—	1K	—	—	—
R199	1K	1.2K	1K	1K	1K
R461	75	75	75	75	75
R1104	—	33K	—	33K	—
R1105	—	1.8K	—	1.8K	—
RV102	—	22K	—	—	—
SWF101	K3953M	K3953M	K3953M	K3953M	K3953M
SWF102	K9350M	K9453M	K9350M	K9350M	K9350M
TU101	UV916H	UV916H	UV916H	UV916H	UV916H

A TUNER AUDIO CONTROL
AUDIO AMP, AV SW
RGB JUNGLE, Y/C PROCESSOR

— A BOARD —

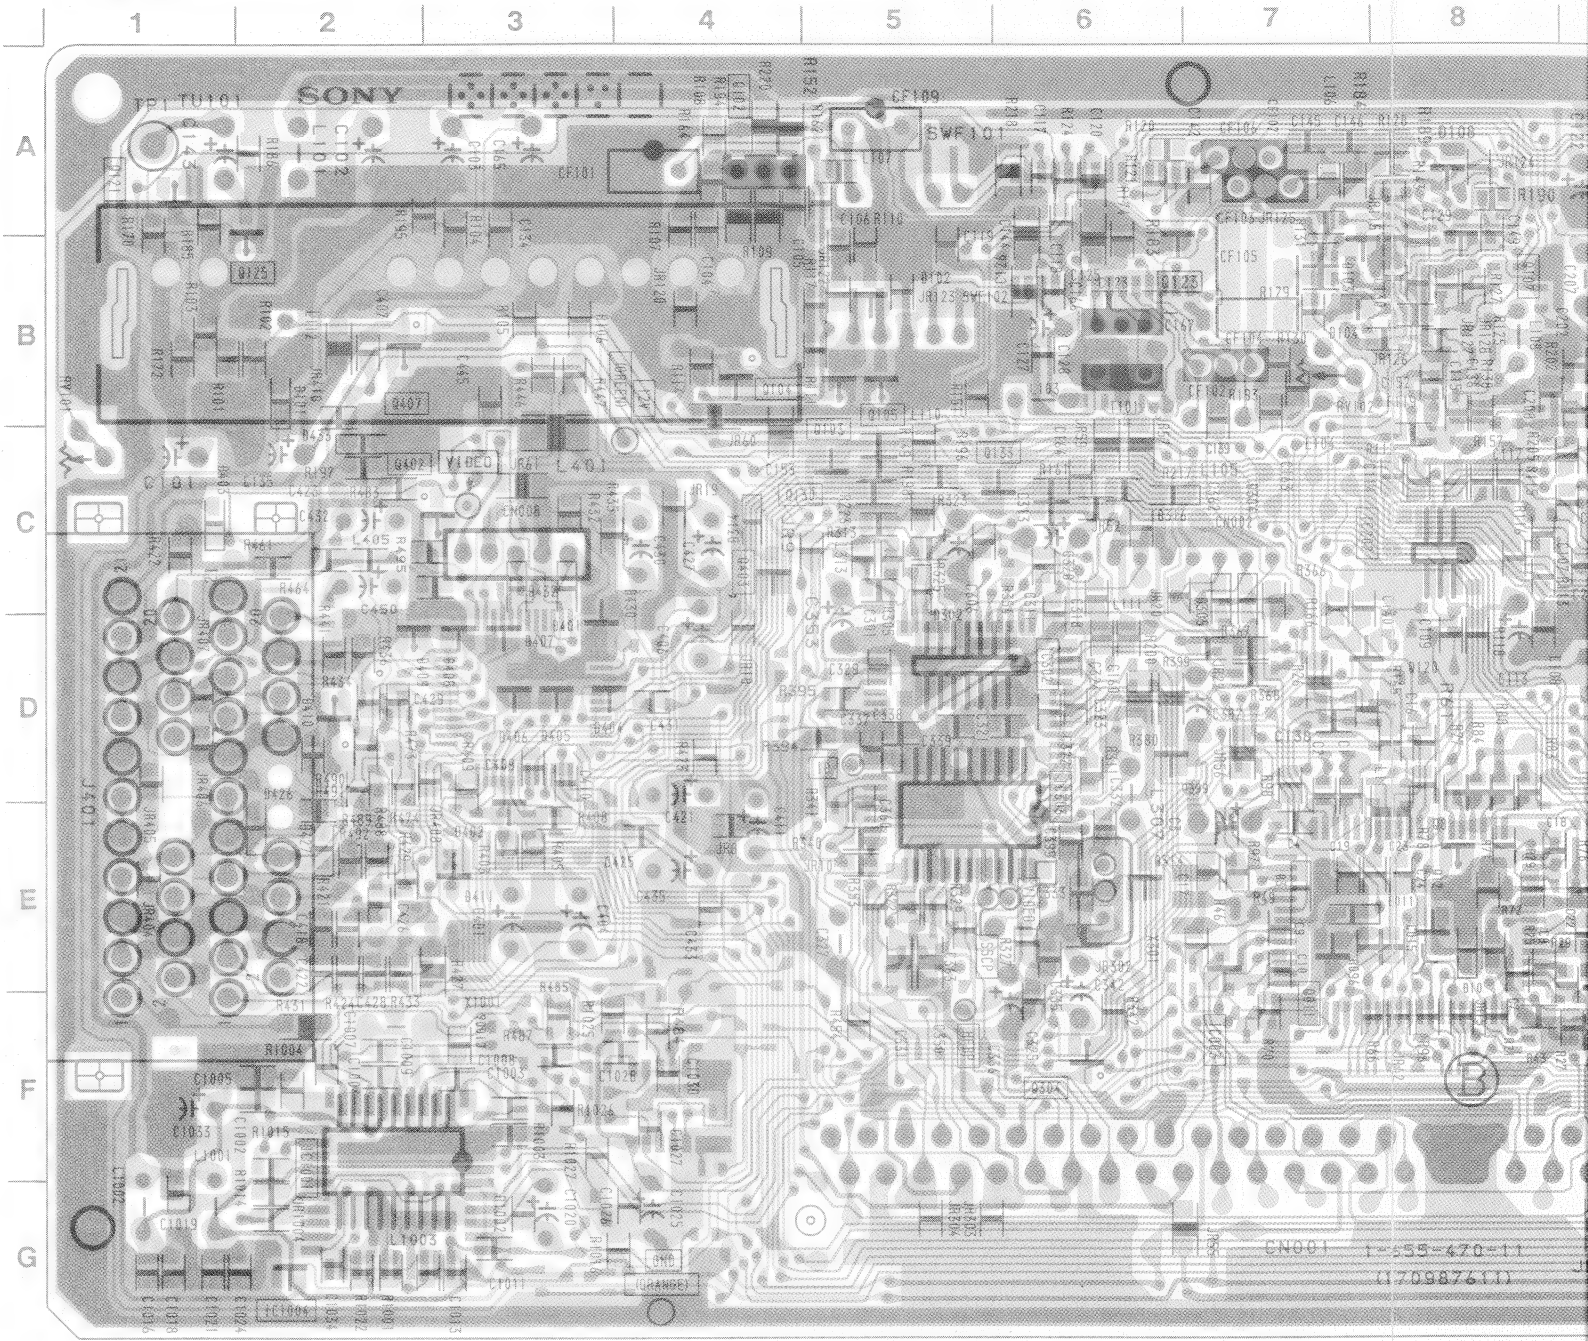

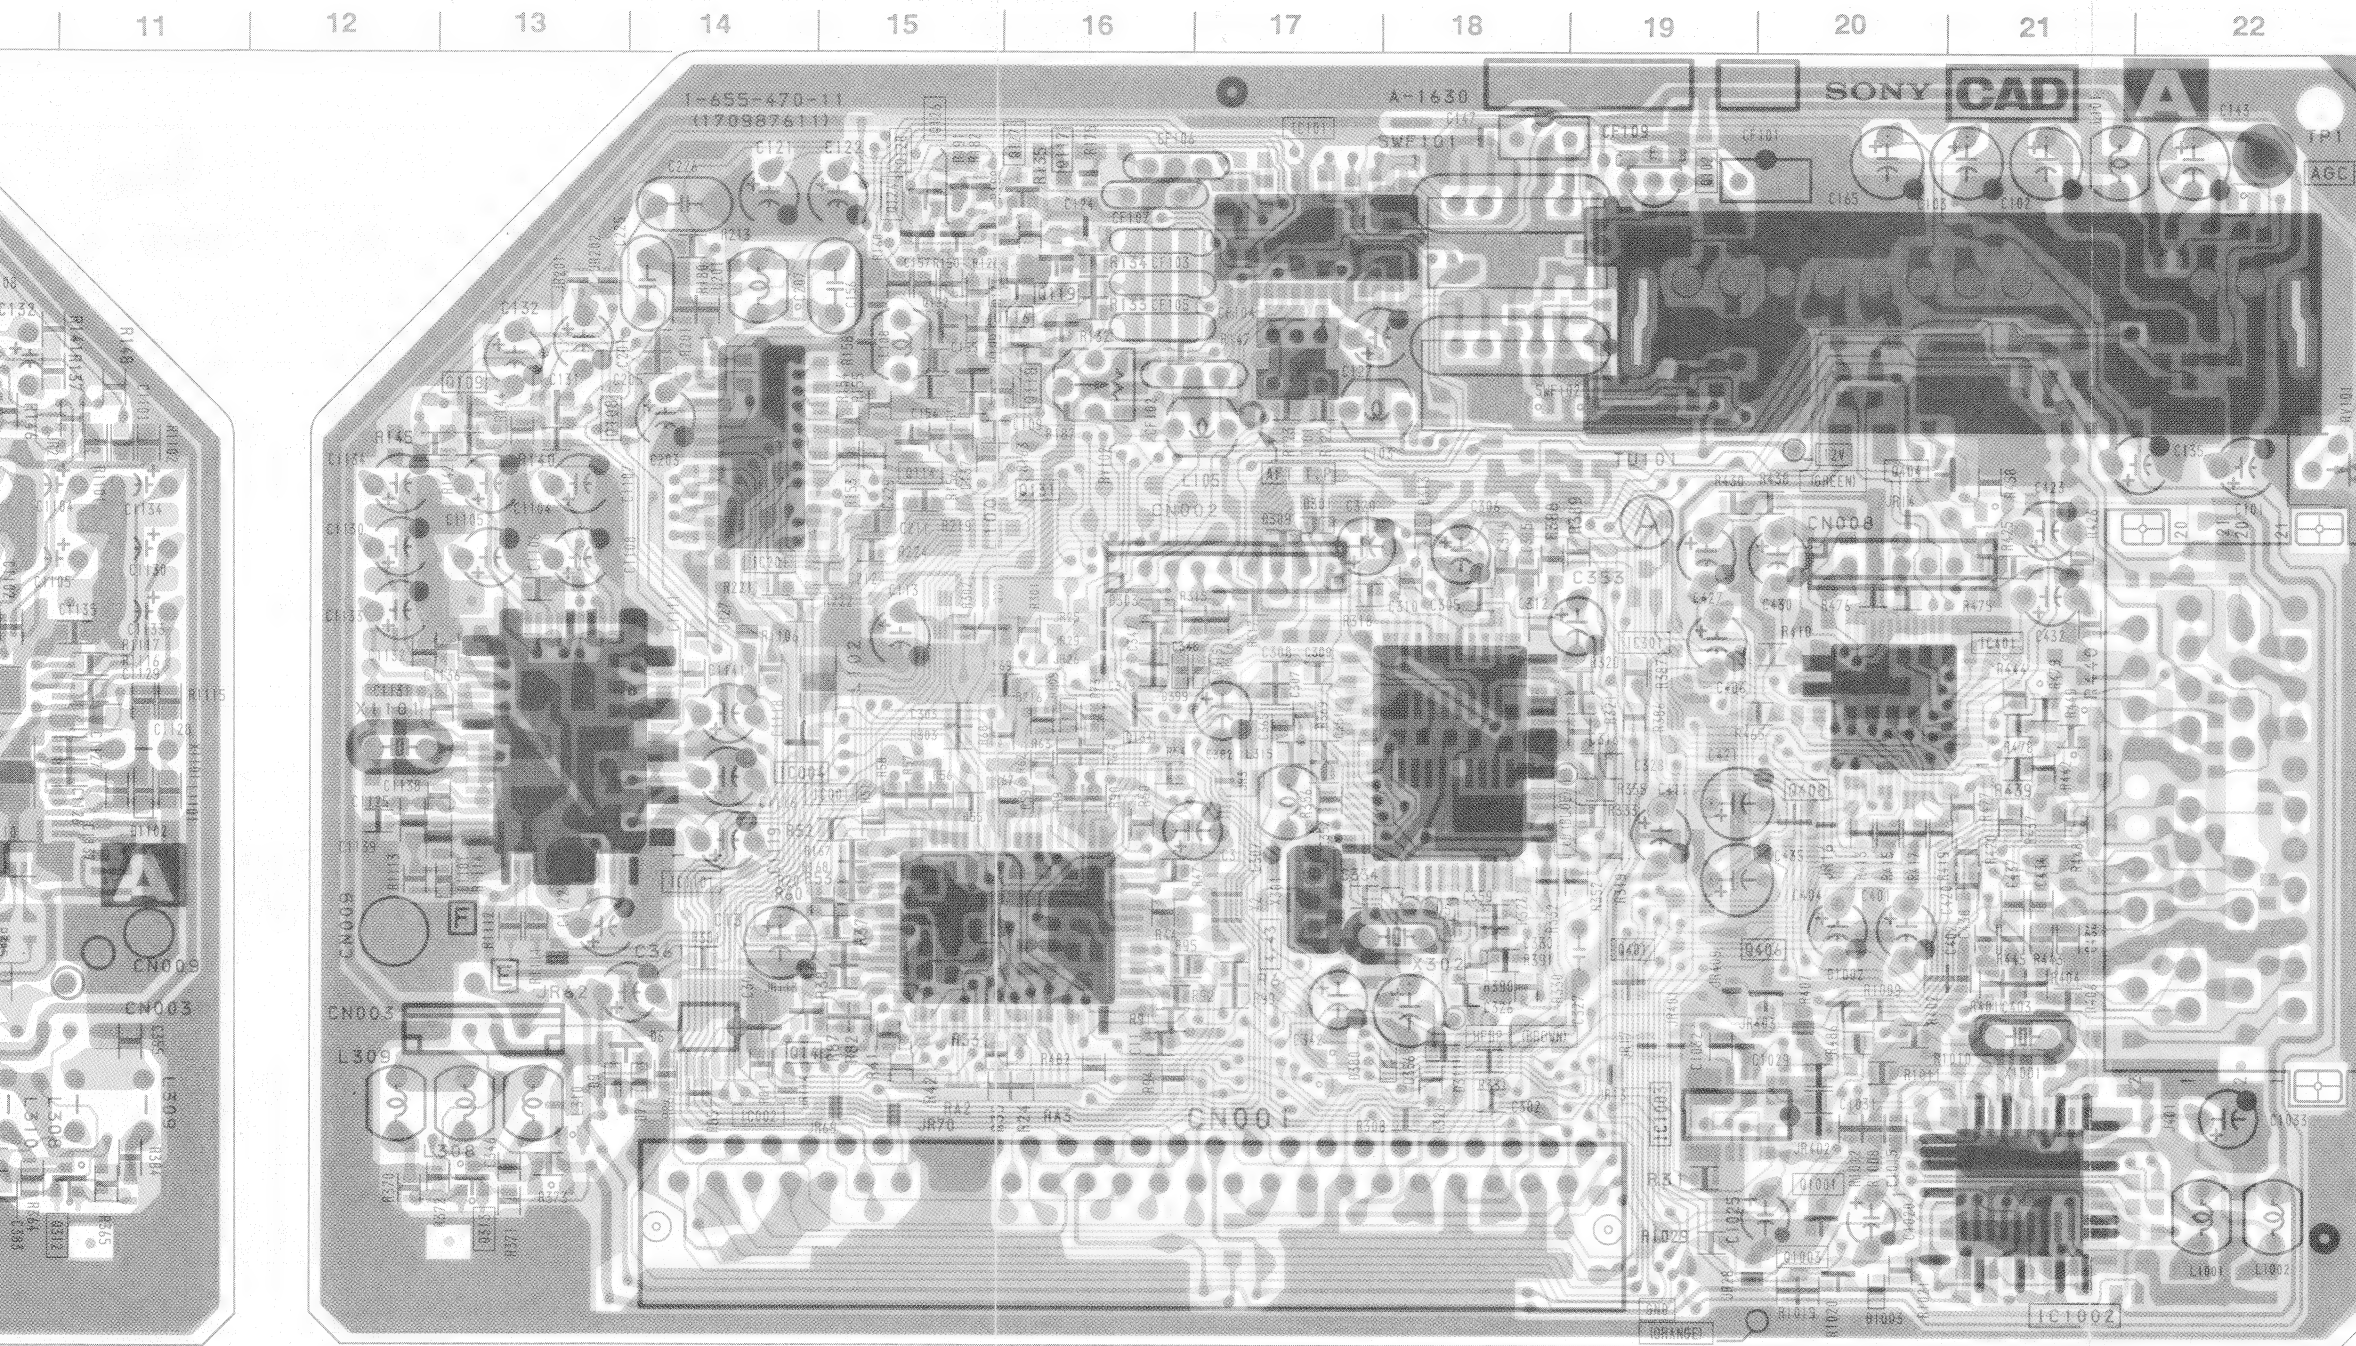




- A BOARD -

IC		Q312	G-11
IC001	E-15	Q313	G-13
IC002	F-14	Q314	E-6
IC003	E-7	Q380	F-10
IC101	A-17	Q381	F-10
IC201	C-14	Q401	E-19
IC202	C-8	Q402	C-3
IC301	D-18	Q403	C-4
IC302	E-5	Q404	C-21
IC303	E-6	Q406	E-20
IC401	D-20	Q407	B-2
IC1001	F-2	Q408	E-20
IC1002	G-21	Q1001	G-20
IC1003	F-19	DIODE	
IC1101	E-14	D6	F-14
TRANSISTOR		D7	F-14
Q4	F-9	D9	F-13
Q8	E-8	D11	E-8
Q11	E-7	D101	B-2
Q12	E-8	D102	B-5
Q14	F-15	D103	B-7
Q102	A-4	D108	A-8
Q103	B-5	D201	B-9
Q104	B-4	D301	C-17
Q105	B-5	D303	C-16
Q107	B-8	D304	C-7
Q108	B-13	D305	C-7
Q109	B-13	D314	C-4
Q114	C-15	D315	D-17
Q116	B-16	D401	D-3
Q117	B-16	D402	E-3
Q120	D-8	D404	D-3
Q121	A-1	D405	D-3
Q123	B-6	D406	D-3
Q124	A-15	D407	D-3
Q125	B-2	D408	D-3
Q126	A-15	D409	D-3
Q127	A-16	D410	D-2
Q128	A-15	D411	E-3
Q130	C-5	D1002	F-20
Q131	B-15	D1101	E-13
Q132	B-15	D1102	E-11
Q133	C-6	VARIABLE RESISTOR	
Q134	D-16	RV102	B-16
Q301	D-16		
Q304	F-6		


Note:



- : Pattern from the side which enables seeing.
- : Pattern of the rear side.

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17

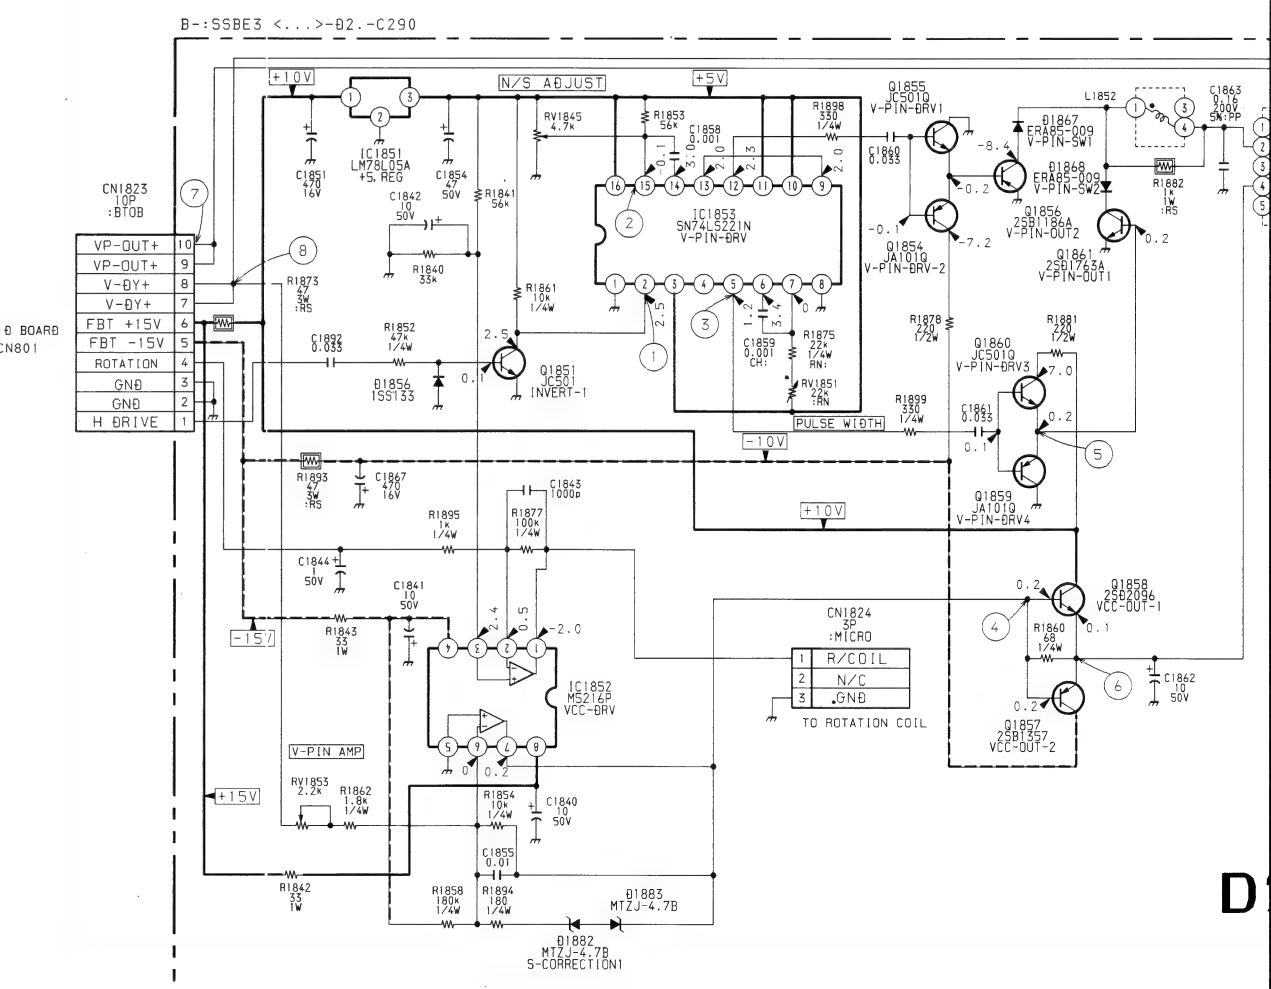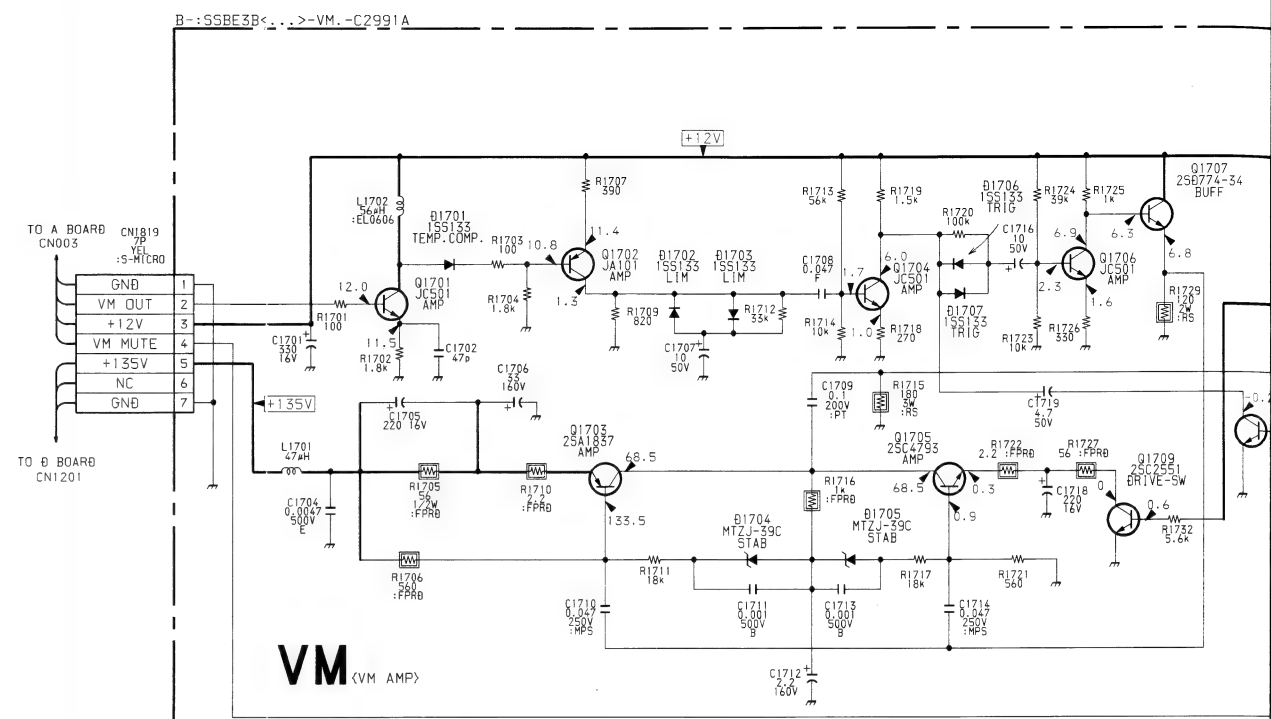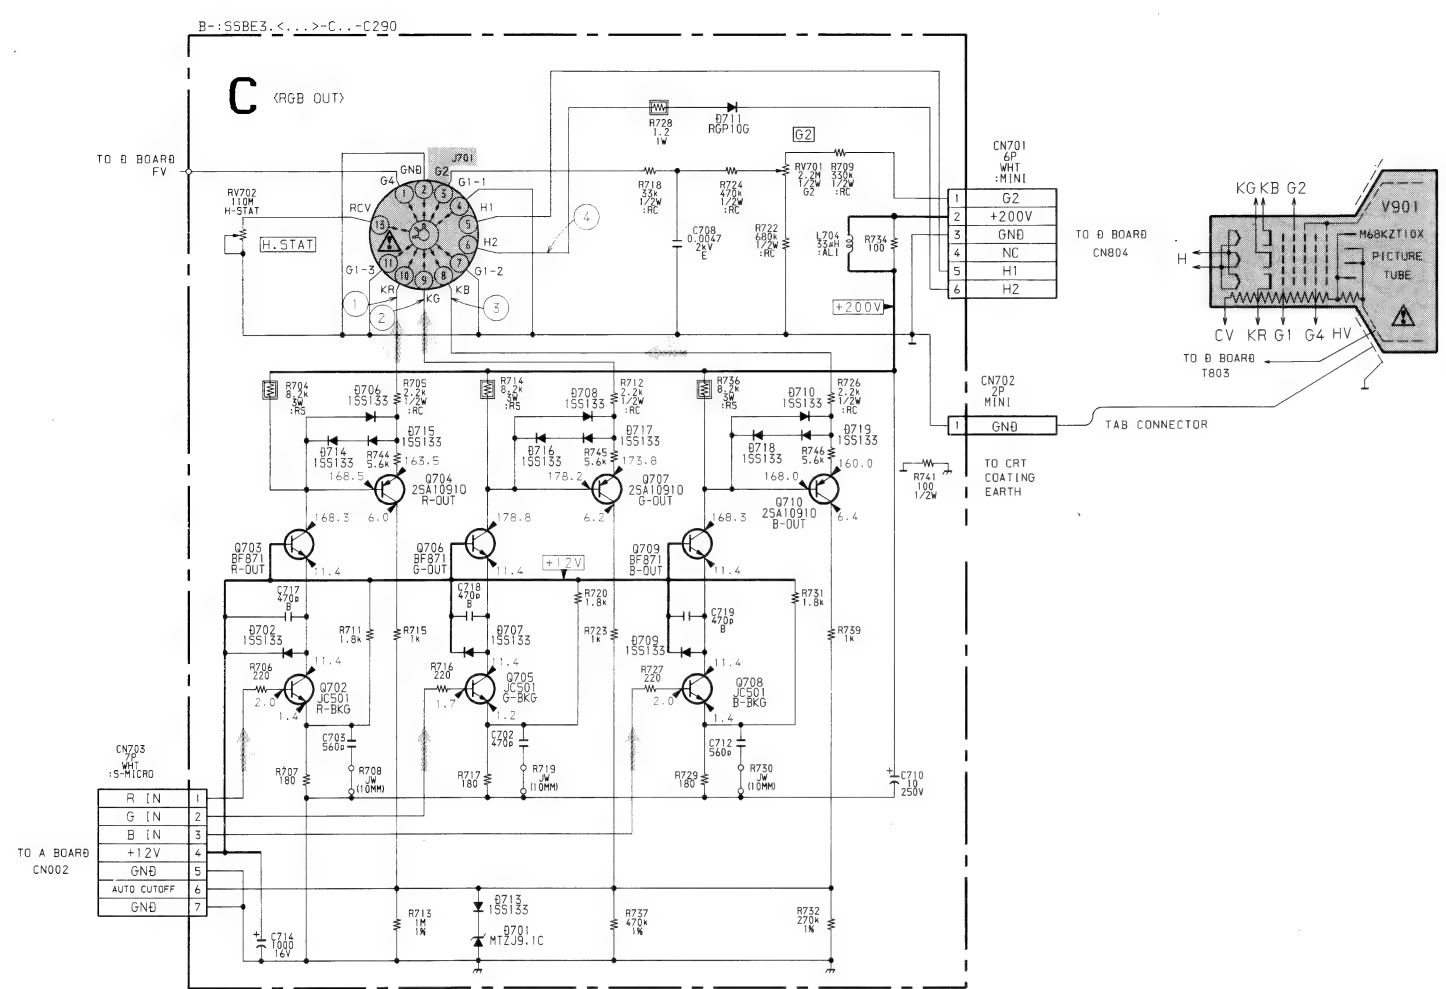


WAVEFORMS C BOARD

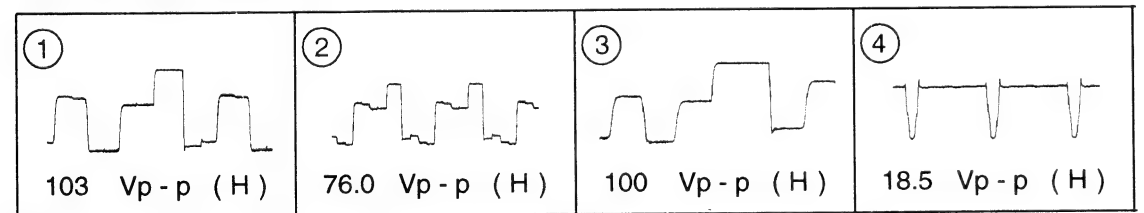

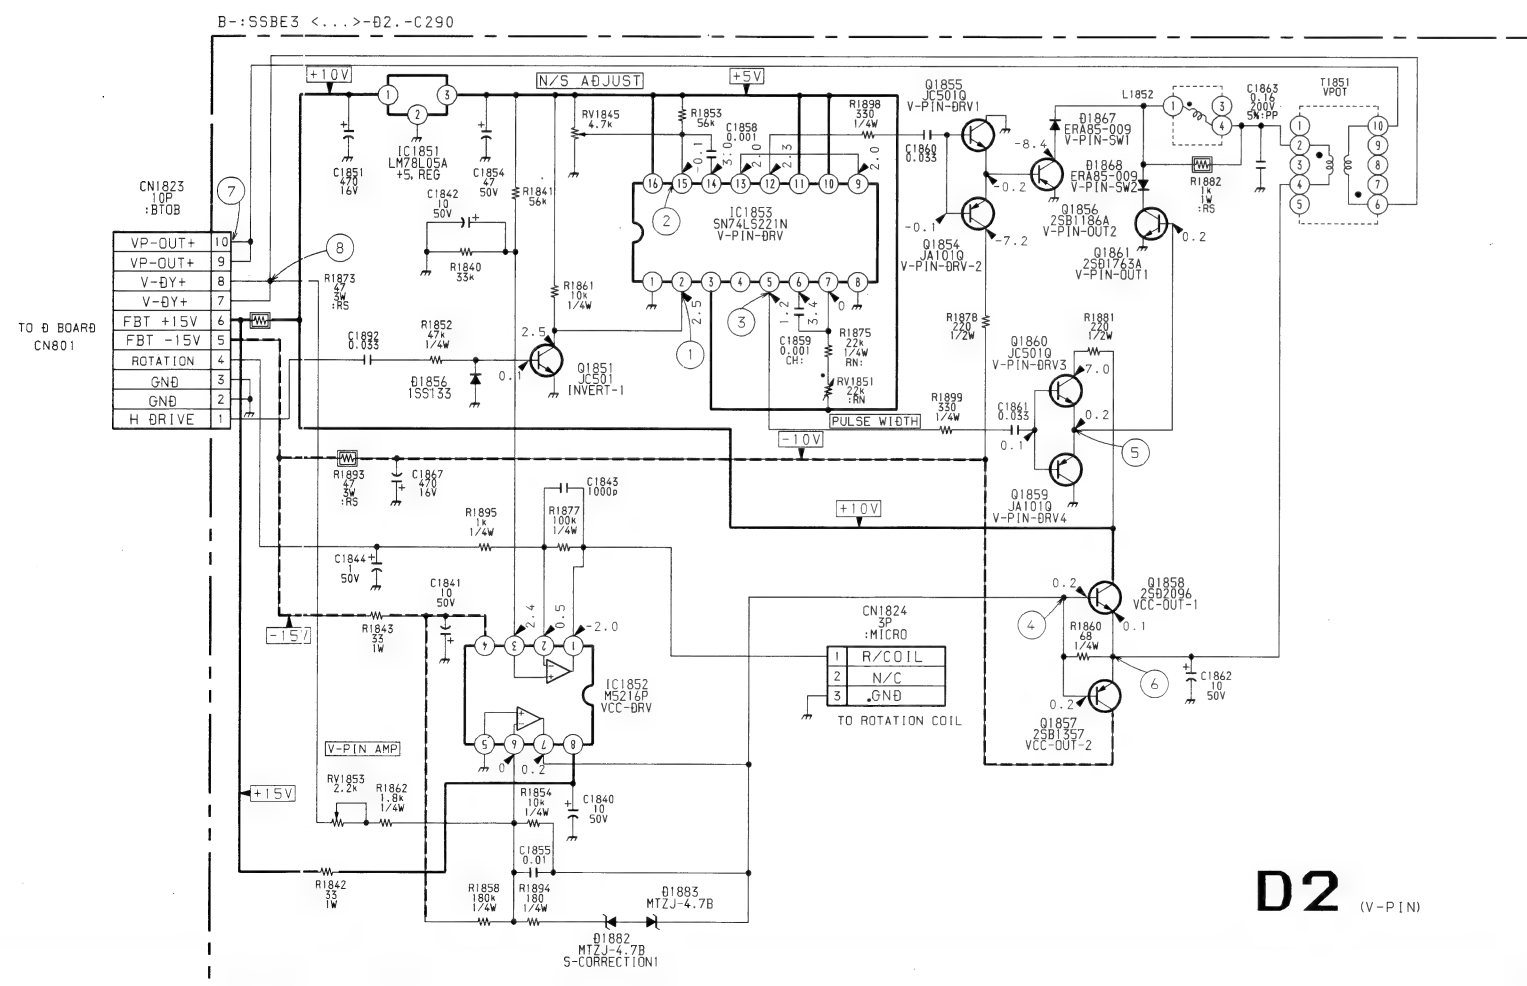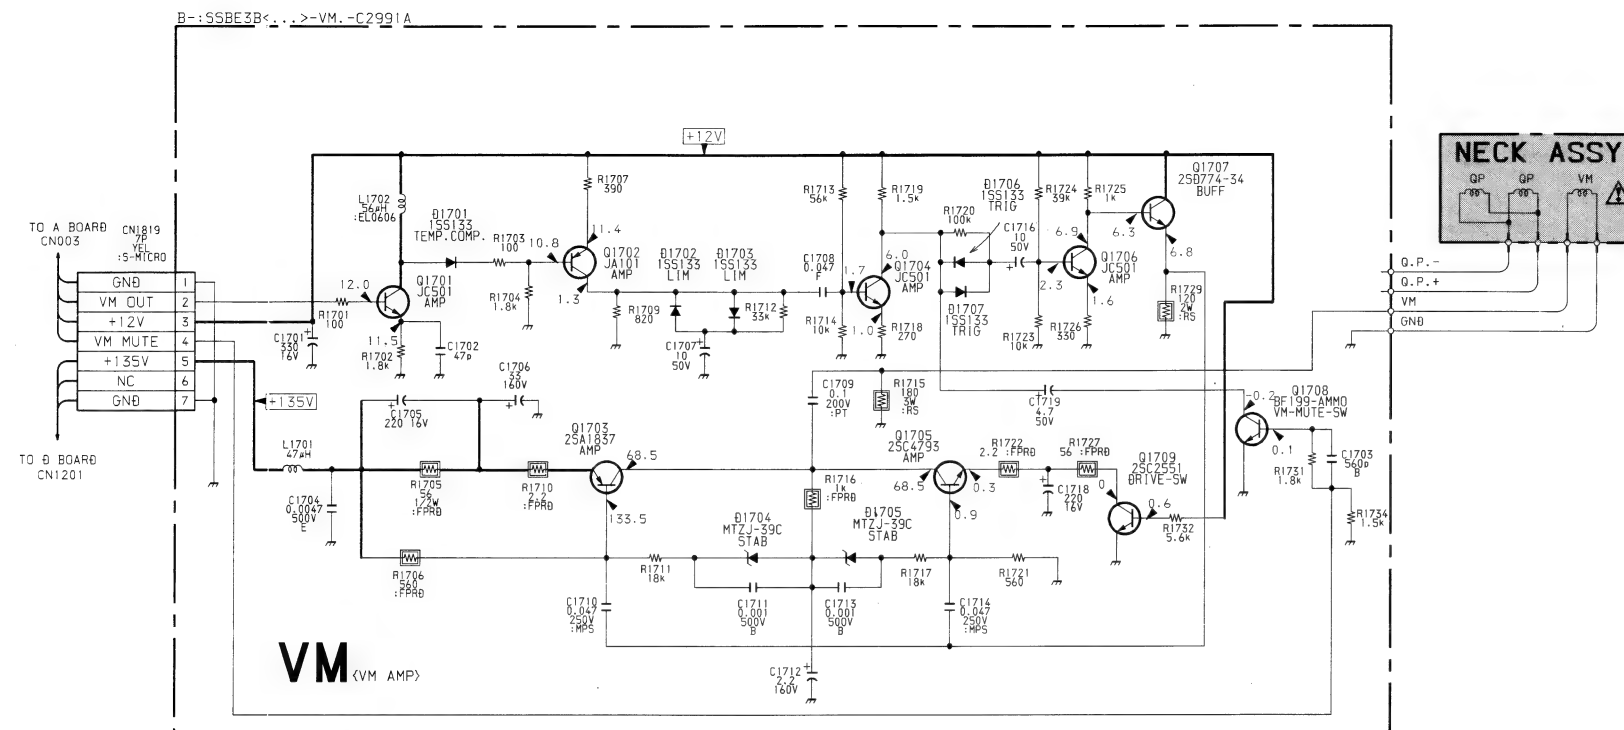


C [RGB OUT] **D2** [V-PIN] **VM** [VM AMP]

— C BOARD —

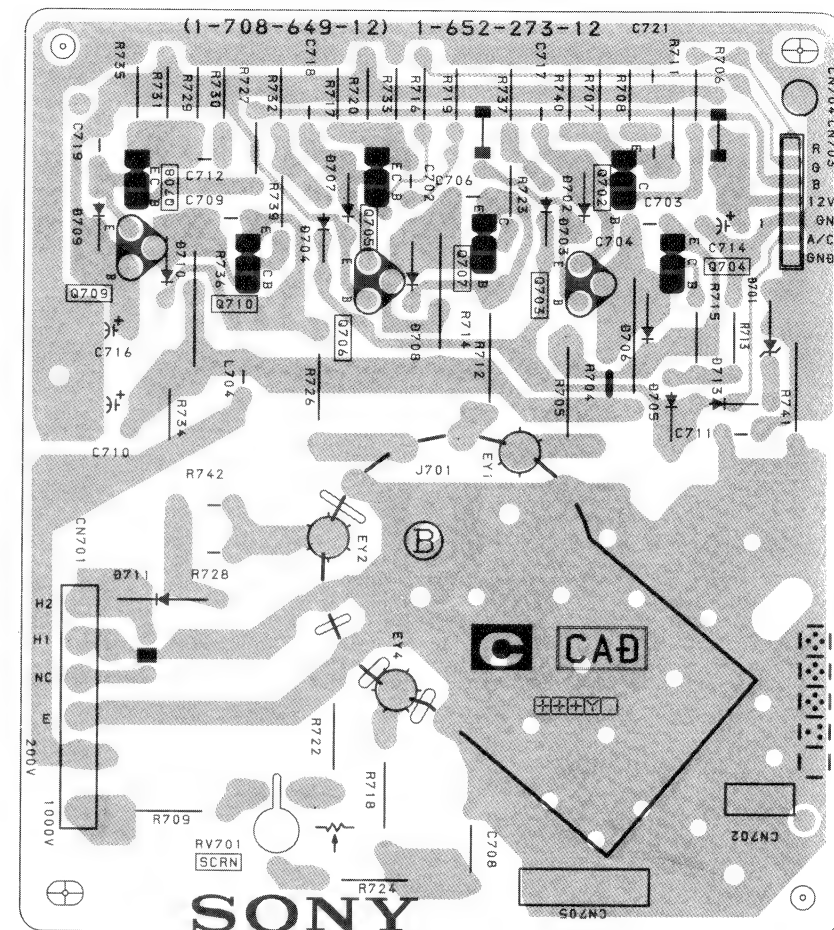

WAVEFORMS D2 BOARD

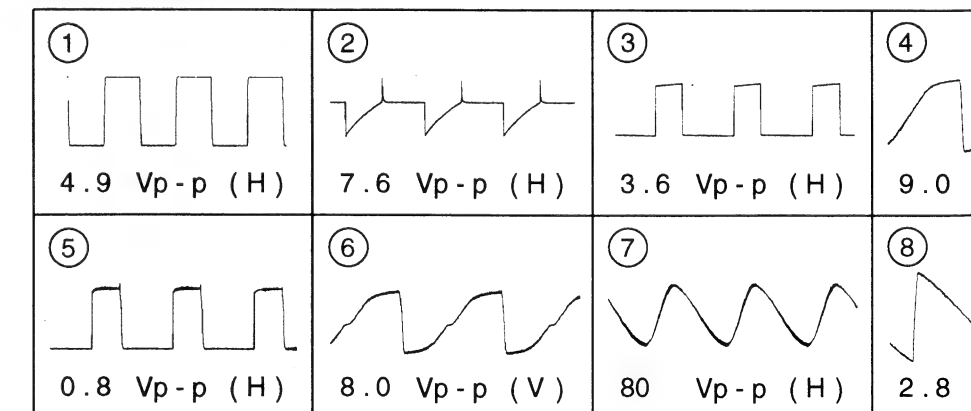

C

[RGB OUT]


D2

[V-PIN]

VM

[VM AMP]


— C BOARD —

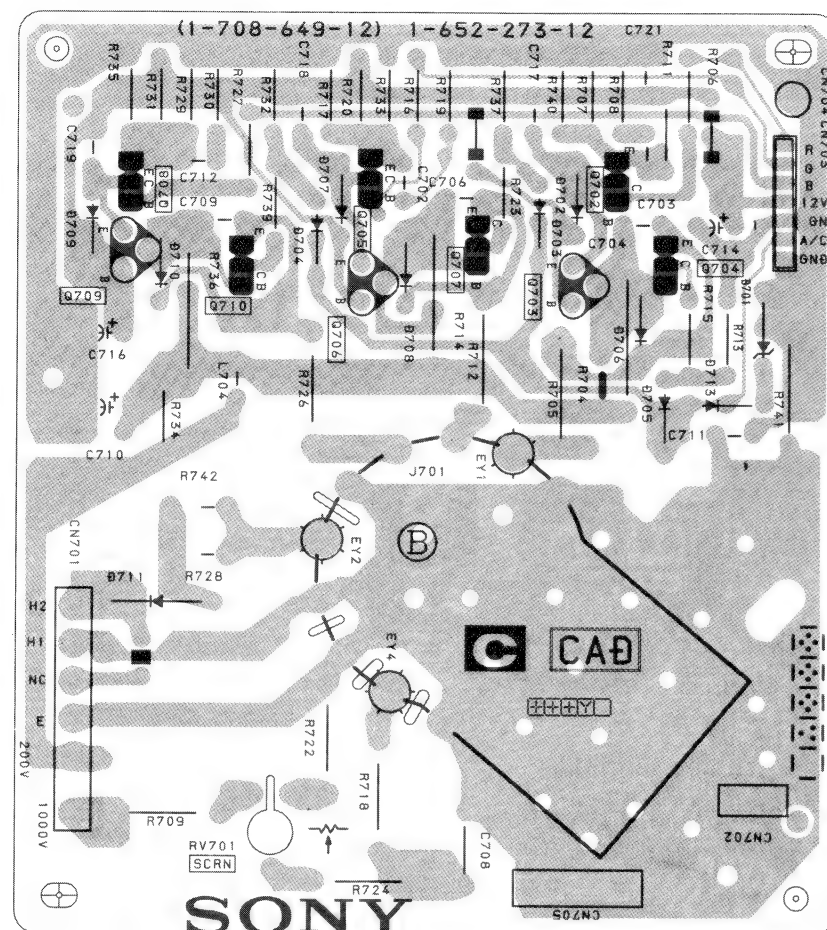


KV-C290

KV-C290


— D2 BOARD —

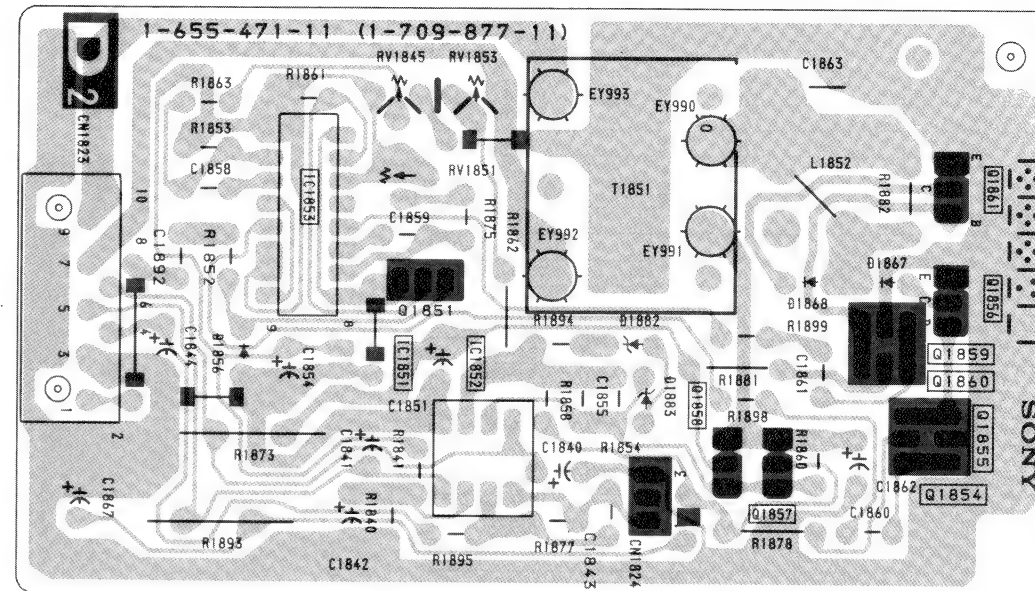

— VM BOARD —

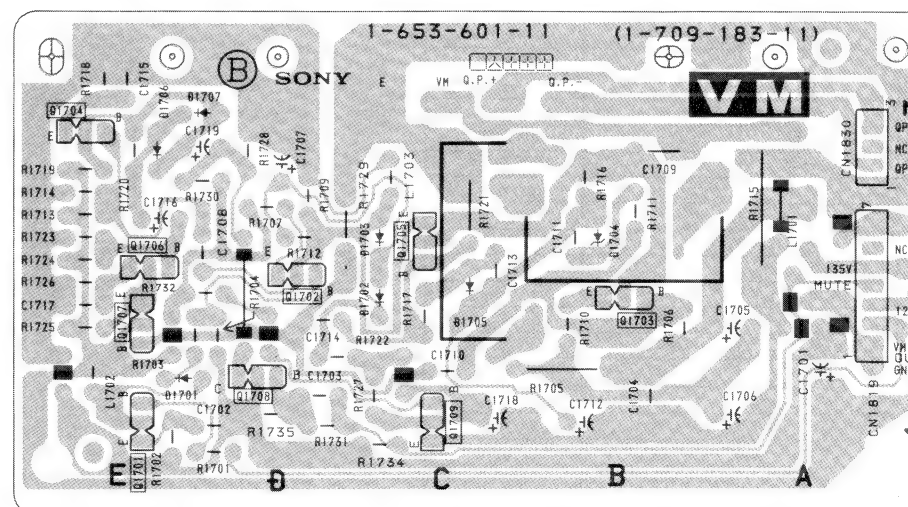


WAVEFORMS D2 BOARD

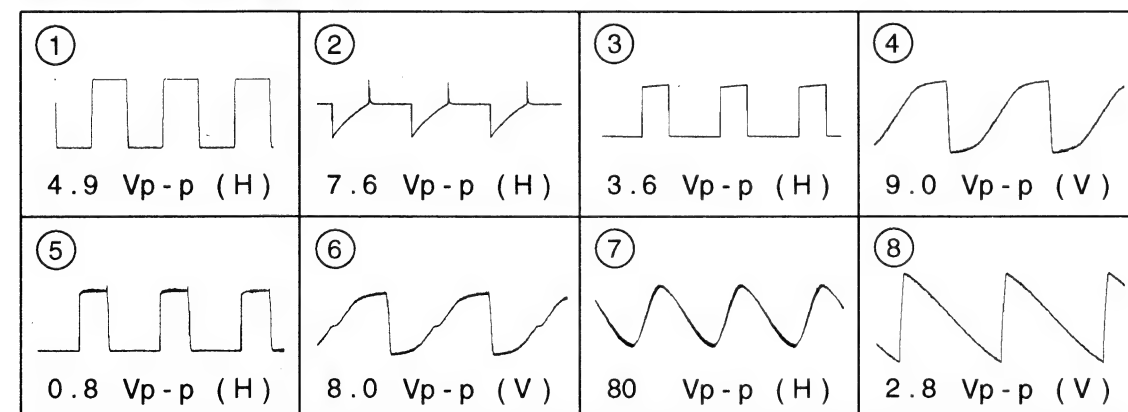


5-4. SEMICONDUCTORS


BA7046F

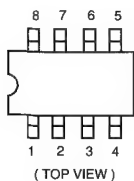


CF70200FN-R
CF70203FN-F
CF70205FN-R

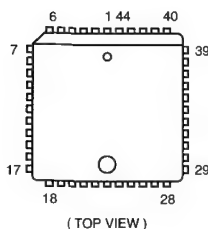


CF72416DW-R
TDA8395T

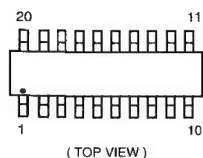


CXA1855Q

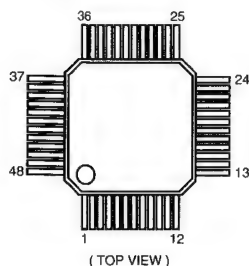


CXP85340A
SAA7283T
TDA8366T

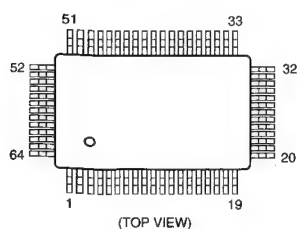


HD14053BFP
MC14053BF

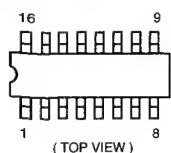

 LM2940CT-5.0
LM2940T-9.0
MCT7812CT
TA7812S
 μ PC2405HF




LM393P
M5216P
TDA2822M
 μ PC393C

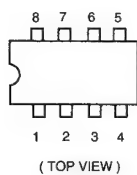


LM78L05ACZ



 
MN1382S




SBX1790-51

 


SE135N-LF12

 


SN74LS221N

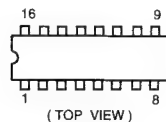


STR-S6708

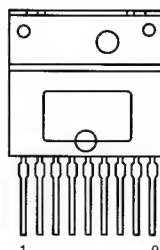


STV9379

 


ST24E32M6TR

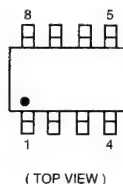


TDA4665T

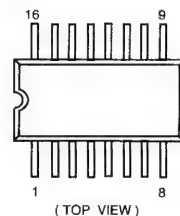


TDA6612-5X-GEG
TDA6622-5X-GEG

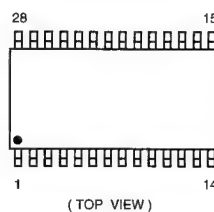


TDA7264

 


TDA9813T
TDA9814T

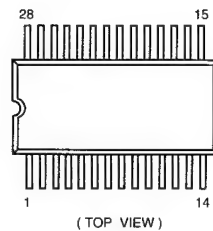

TL750L05CLPR

 


BF871

 


DTA144ES
DTC114ES
DTC143TS
DTC144ES



 DTC114EK
DTC144EK
2SA1037K
2SA1162-G
2SC2412K




IMX1

 


JA101
JC501
2SA1091-O
2SA733-K
2SC2389S-R
2SC2510-O
2SC2808S-R



 
MPA502T
2SC3779C




TLP721-GR

 

2SA1220A-P
2SB1357
2SC2688-LK

 

2SA1667
2SA1837
2SC3852A

 


2SB1186A
2SC4793
2SD1763A



2SC2785-HFE



 
2SC4927-01




2SD2096-EF



 
2SD774



 
AU-01Z-V1 FML-G12S
EG-1Z-V1 GP08D
EGP20G RGP02
EL1Z RGP10GPKG23
EL1Z-V1 RGP15GPKG23
EM1-V1 RU3YX
EU-1-V1 RU4DS
EU-1Z




BAS216
DTZ33B
MA8330
1SS355
1SV214

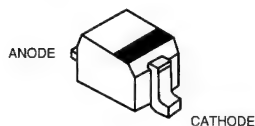


DAN202K
UMZ12N

 


DA204K

 


D4SB60L

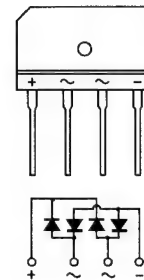

ERA85-009 MTZJ-9.1C
MTZJ-3.6A MTZJ-39C
MTZJ-3.9B RD3.9ESB2
MTZJ-4.7B RD5.1ESB2
MTZJ-5.1B RD5.6ESB2
MTZJ-5.6B RD6.8ESB2
MTZJ-6.8C RD7.5ESB2
MTZJ-7.5C RD9.1ESB3
MTZJ-9.1 UZ-4.7BSC
MTZJ-9.1A 1SS133

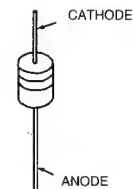

FMS-3FU

 

SECTION 6

EXPLODED VIEWS


NOTE :

- Items with no part number and no description are not stocked because they are seldom required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remarks column.
- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

The components identified by shading and marked Δ are critical for safety.
Replace only with the part number specified.


Les composants identifiés par une trame et une marque Δ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

6-1. CHASSIS

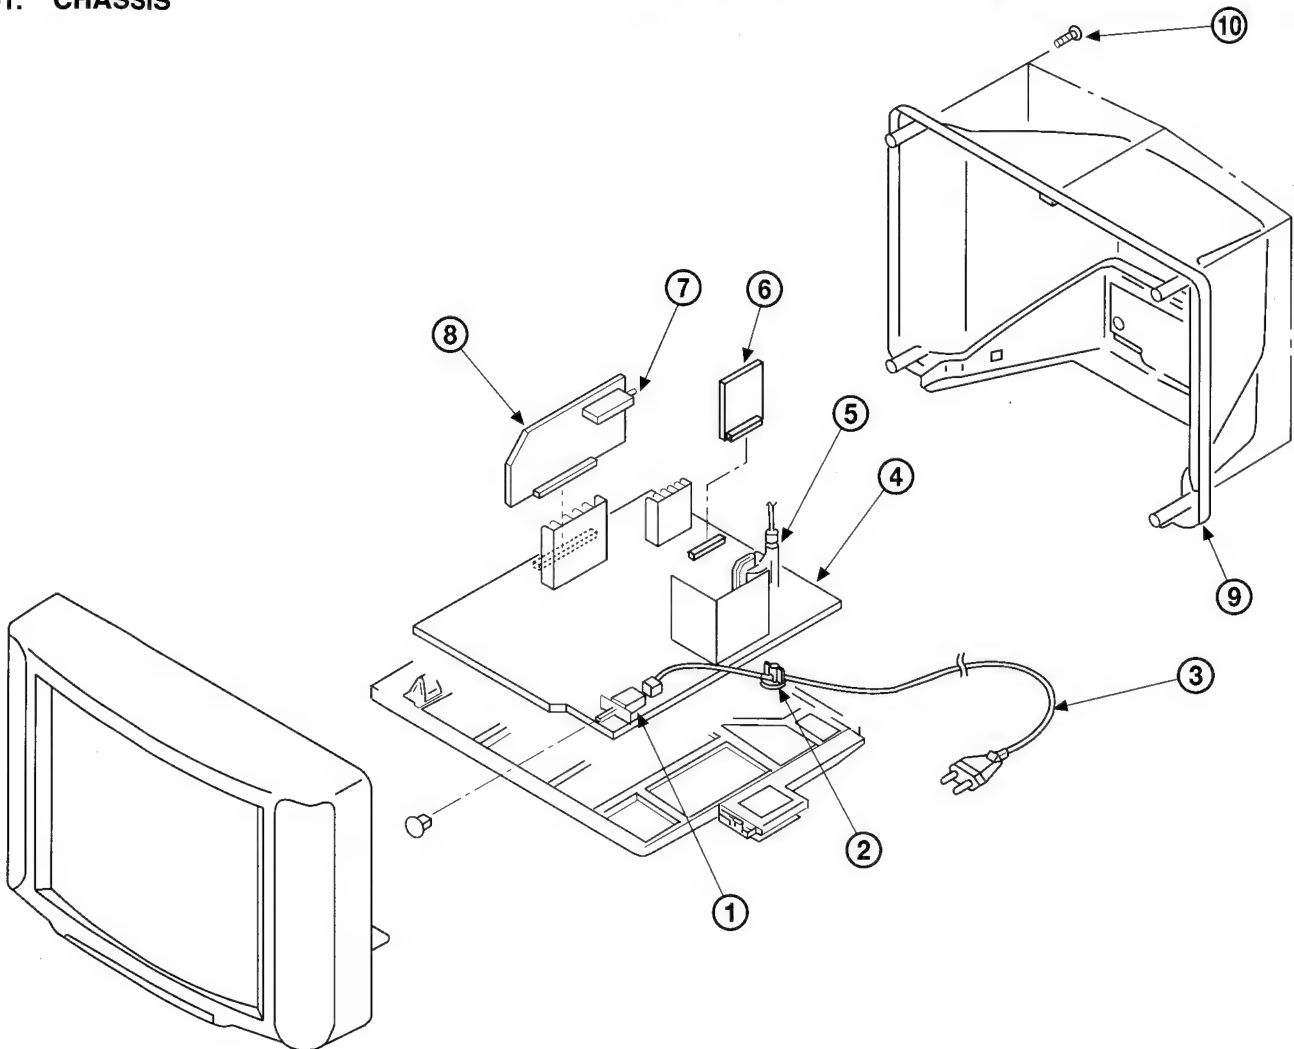

REF NO	PART NO	DESCRIPTION	REMARK	REF NO	PART NO	DESCRIPTION	REMARK
1	Δ 1-571-433-12	SWITCH, PUSH (AC POWER)		8	*A-1632-266-A	A BOARD, COMPLETE (KV-C2901D/C2908D/C2909D)	
2	*4-202-531-01	AC CORD LOCK (SC)			*A-1632-276-A	A BOARD, COMPLETE (KV-C2903B/C2908B/C2909B)	
3	Δ 1-751-680-11	CORD, POWER (WITH NOISE FILTER) 2.5A/250V			*A-1632-277-A	A BOARD, COMPLETE (KV-C2903E/C2908E/C2909E)	
4	*A-1642-147-A	D BOARD, COMPLETE			*A-1632-278-A	A BOARD, COMPLETE (KV-C2901A)	
5	Δ 1-453-169-11	TRANSFORMER ASSY, FLYBACK (UX-1604A2)			*A-1632-279-A	A BOARD, COMPLETE (KV-C2901K/C2909K)	
6	*A-1640-173-A	D2 BOARD, COMPLETE		9	4-202-993-01	COVER, REAR	
7	1-693-185-11	TUNER (UV916H)		10	4-039-358-01	SCREW (4x16), (+) BV TAPPING	

6-2. PICTURE TUBE

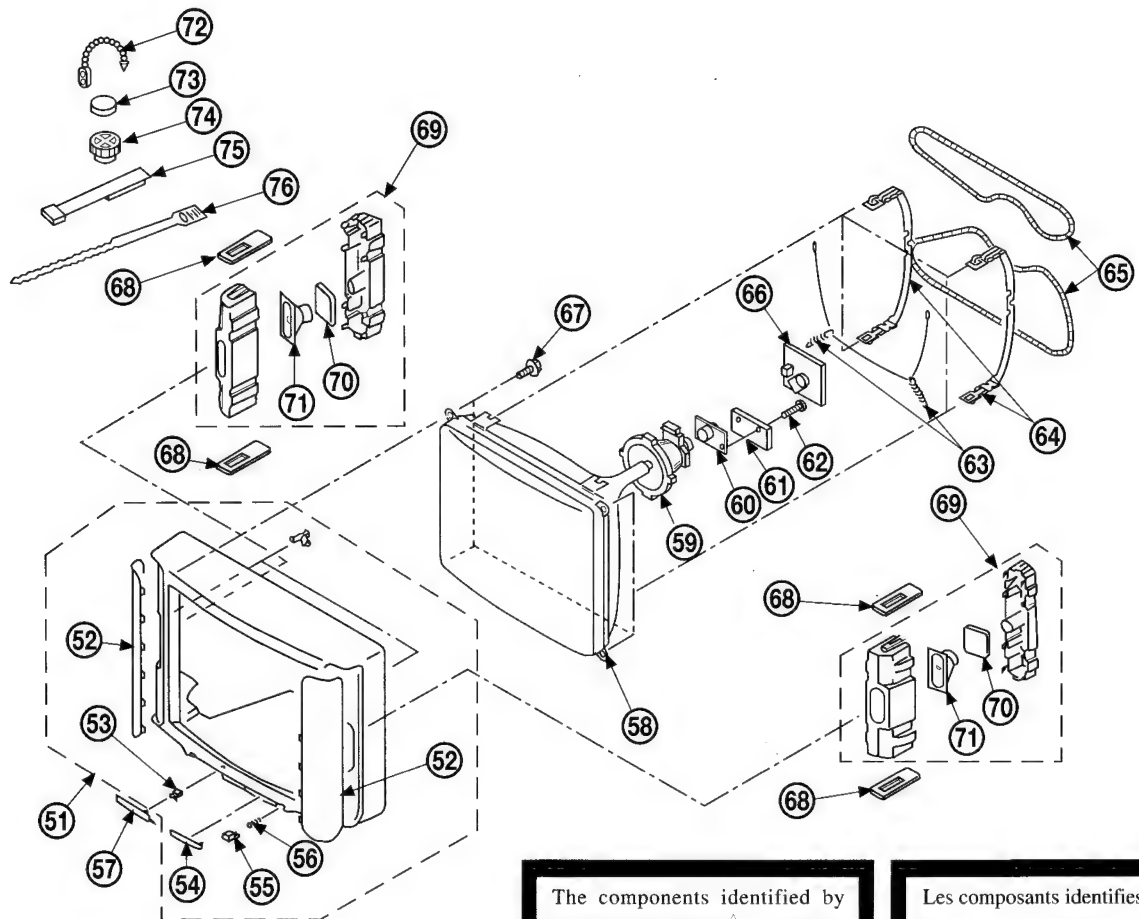

The components identified by shading and marked Δ are critical for safety.
Replace only with the part number specified.

Les composants identifiés par une trame et une marque Δ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

REF NO	PART NO	DESCRIPTION	REMARK	REF NO	PART NO	DESCRIPTION	REMARK
51	X-4200-196-1	BEZNET ASSY (S) (KV-C2901A/C2901D/C2901K)	52 - 56	57	4-203-013-01	DOOR (PAINTED) (S) (KV-C2901A/C2903B/C2901D/C2903E/C2901K)	
	X-4200-202-1	BEZNET ASSY (W) (KV-C2908D)	52 - 56		4-203-013-11	DOOR (PAINTED) (W) (KV-C2908B/C2908D/C2908E)	
	X-4200-203-1	BEZNET ASSY (B-N) (KV-C2909B/C2909E)	52 - 56		4-203-013-21	DOOR (PAINTED) (B) (KV-C2909B/C2909D/C2909E/C2909K)	
	X-4200-204-1	BEZNET ASSY (S-N) (KV-C2903B/C2903E)	52 - 56	58	Δ 8-733-841-05	PICTURE TUBE (SD-269) (M68KZT10X)	
	X-4200-205-1	BEZNET ASSY (W-N) (KV-C2908B/C2908E)	52 - 56	59	Δ 8-451-422-11	DEFLECTION YOKE (Y29GXA)	
	X-4200-206-1	BEZNET ASSY (B) (KV-C2909D/C2909K)	52 - 56	60	Δ 1-452-509-41	NECK ASSY, PICTURE TUBE (NA-300)	
52	X-4200-195-1	PANEL ASSY (S) (KV-C2901A/C2901D/C2901K)		61	*A-1644-052-A	VM BOARD, COMPLETE	
	X-4200-197-1	PANEL ASSY (W) (KV-C2908D)		62	4-039-356-01	SCREW (3x12), (+) BV TAPPING	
	X-4200-198-1	PANEL ASSY (B) (KV-C2909D/C2909K)		63	4-369-318-51	SPRING, TENSION	
	X-4200-199-1	PANEL ASSY (S-N) (KV-C2903B/C2903E)		64	4-202-749-01	HOLDER, DGC (29")	
	X-4200-200-1	PANEL ASSY (W-N) (KV-C2908B/C2908E)		65	Δ 1-406-807-11	COIL, DEGAUSSING	
	X-4200-201-1	PANEL ASSY (B-N) (KV-C2909B/C2909E)		66	*A-1638-058-A	C BOARD, COMPLETE	
53	4-392-036-01	CATCHER, PUSH		67	4-036-188-01	SCREW (M), PT	
54	4-202-981-01	WINDOW ORNAMENTAL		68	*4-202-988-01	CUSHION, BOX	
55	4-202-992-01	BUTTON, POWER		69	*A-1678-087-A	BOX ASSY	70 - 71
56	4-202-964-01	SPRING		70	4-200-999-01	STOPPER	
				71	1-504-146-11	SPEAKER (5x11CM)	
				72	4-308-870-00	CLIP, LEAD WIRE	
				73	1-452-032-00	MAGNET, DISK; 10MM \emptyset	
				74	1-452-094-00	MAGNET, ROTATABLE DISK; 15MM \emptyset	
				75	X-4387-214-1	PERMALLOY ASSY, CORRECTION	
				76	3-701-007-00	BAND, BINDING	

SECTION 7

ELECTRICAL PARTS LIST

The components identified by shading and marked **A** are critical for safety. Replace only with the part number specified.

Les composants identifiés par une trame et une marque **A** sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.

RESISTORS

- All resistors are in ohms
- F : nonflammable

When indicating parts by reference number, please include the board name.

CAPACITORS

MF : mF, PF : mmF

COILS

MMH : mH, μ H : mH

A

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
	*A-1632-266-A	A BOARD, COMPLETE (KV-C2901D/C2908D/ ***** C2909D)		C114	1-164-346-11	CERAMIC CHIP 1MF	16V
	*A-1632-276-A	A BOARD, COMPLETE (KV-C2903B/C2908B/ ***** C2909B)		C115	1-163-141-00	CERAMIC CHIP 0.001MF	5% 50V
	*A-1632-277-A	A BOARD, COMPLETE (KV-C2903E/C2908E/ ***** C2909E)		C117	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V
	*A-1632-278-A	A BOARD, COMPLETE (KV-C2901A)		C118	1-164-489-11	CERAMIC CHIP 0.22MF	10% 16V
	*A-1632-279-A	A BOARD, COMPLETE (KV-C2901K/C2909K) *****		C119	1-163-133-00	CERAMIC CHIP 470PF	5% 50V
< CAPACITOR >				C120	1-164-337-11	CERAMIC CHIP 2.2MF	16V
C1	1-163-009-11	CERAMIC CHIP 0.001MF	10% 50V	C121	1-124-126-00	ELECT 47MF	20% 16V
C2	1-163-009-11	CERAMIC CHIP 0.001MF	10% 50V	C122	1-124-126-00	ELECT 47MF	20% 16V
C3	1-126-964-11	ELECT 10MF	20% 50V	C123	1-163-090-00	CERAMIC CHIP 7PF	0.25PF 50V
C4	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	C124	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
C7	1-163-009-11	CERAMIC CHIP 0.001MF	10% 50V	C125	1-164-337-11	CERAMIC CHIP 2.2MF	16V
C8	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V	C126	1-164-337-11	CERAMIC CHIP 2.2MF	16V
C9	1-163-009-11	CERAMIC CHIP 0.001MF	10% 50V	C127	1-126-966-11	ELECT 33MF	20% 50V
C10	1-163-009-11	CERAMIC CHIP 0.001MF	10% 50V	C128	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
C11	1-163-009-11	CERAMIC CHIP 0.001MF	10% 50V	C129	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
C12	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	C130	1-216-295-91	METAL GLAZE 0 5% 1/10W	
C13	1-126-933-11	ELECT 100MF	20% 16V	C131	1-124-126-00	ELECT 47MF	20% 16V
C15	1-163-105-00	CERAMIC CHIP 33PF	5% 50V	C132	1-124-126-00	ELECT 47MF	20% 16V
C16	1-163-809-11	CERAMIC CHIP 0.047MF	10% 25V	C134	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
C17	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	C135	1-124-126-00	ELECT 47MF	20% 16V
C18	1-163-117-00	CERAMIC CHIP 100PF	5% 50V	C137	1-163-133-00	CERAMIC CHIP 470PF	5% 50V
C19	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V	C139	1-163-017-00	CERAMIC CHIP 0.0047MF	10% 50V
C21	1-163-037-11	CERAMIC CHIP 0.022MF	10% 25V	C142	1-163-133-00	CERAMIC CHIP 470PF	5% 50V
C22	1-164-005-11	CERAMIC CHIP 0.47MF	25V	C143	1-126-101-11	ELECT 100MF	20% 16V
C23	1-163-251-11	CERAMIC CHIP 100PF	5% 50V			(KV-C2903B/C2908B/C2909B)	
C24	1-163-243-11	CERAMIC CHIP 47PF	5% 50V	C144	1-162-638-00	CERAMIC CHIP 1MF	16V
C30	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	C145	1-162-093-00	CERAMIC CHIP 10PF	5% 50V
C101	1-124-927-11	ELECT 4.7MF	20% 50V			(EXCEPT KV-C2901D/C2908D/C2909D)	
		(KV-C2903B/C2908B/C2909B)		C146	1-163-093-00	CERAMIC CHIP 10PF	5% 50V
	1-126-233-11	ELECT 22MF	20% 50V			(EXCEPT KV-C2901D/C2908D/C2909D)	
		(EXCEPT KV-C2903B/C2908B/C2909B)		C149	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
C102	1-126-966-11	ELECT 33MF	20% 50V			(KV-C2901K/C2909K)	
C103	1-126-966-11	ELECT 33MF	20% 50V		1-216-295-91	METAL GLAZE 0 5% 1/10W	
C104	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V			(EXCEPT KV-C2901K/C2909K)	
C105	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	C152	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V
C106	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V	C153	1-164-337-11	CERAMIC CHIP 2.2MF	16V
C107	1-164-346-11	CERAMIC CHIP 1MF	16V	C154	1-163-105-00	CERAMIC CHIP 33PF	5% 50V
C108	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V			(KV-C2903B/C2908B/C2909B)	
C109	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V		1-163-113-00	CERAMIC CHIP 68PF	5% 50V
C112	1-163-117-00	CERAMIC CHIP 100PF	5% 50V			(EXCEPT KV-C2903B/C2908B/C2909B)	
C113	1-124-126-00	ELECT 47MF	20% 16V	C155	1-163-093-00	CERAMIC CHIP 10PF	5% 50V
						(EXCEPT KV-C2903B/C2908B/C2909B)	
				C157	1-163-105-00	CERAMIC CHIP 33PF	5% 50V
						(EXCEPT KV-C2903B/C2908B/C2909B)	
					1-163-113-00	CERAMIC CHIP 68PF	5% 50V
						(KV-C2903B/C2908B/C2909B)	



REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
C160	1-163-125-00	CERAMIC CHIP 220PF	5% 50V	C335	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V
C162	1-163-022-00	CERAMIC CHIP 0.012MF	10% 50V	C336	1-126-933-11	ELECT 100MF	20% 16V
		(KV-C2903B/C2908B/C2909B)		C337	1-164-489-11	CERAMIC CHIP 0.22MF	10% 16V
C163	1-163-141-00	CERAMIC CHIP 0.001MF	5% 50V	C338	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V
		(KV-C2903B/C2908B/C2909B)		C339	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V
C164	1-163-119-00	CERAMIC CHIP 120PF	5% 50V	C342	1-126-964-11	ELECT 10MF	20% 50V
C165	1-126-933-11	ELECT 100MF	20% 16V	C346	1-163-133-00	CERAMIC CHIP 470PF	5% 50V
C201	1-164-005-11	CERAMIC CHIP 0.47MF	25V	C347	1-163-113-00	CERAMIC CHIP 68PF	5% 50V
C202	1-163-137-00	CERAMIC CHIP 680PF	5% 50V	C348	1-163-113-00	CERAMIC CHIP 68PF	5% 50V
C203	1-126-964-11	ELECT 10MF	20% 50V	C349	1-163-113-00	CERAMIC CHIP 68PF	5% 50V
C204	1-164-182-11	CERAMIC CHIP 0.0033MF	10% 50V	C350	1-165-320-11	CERAMIC CHIP 0.47MF	10% 16V
C205	1-164-005-11	CERAMIC CHIP 0.47MF	25V	C351	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V
C206	1-164-346-11	CERAMIC CHIP 1MF	16V	C352	1-163-109-00	CERAMIC CHIP 47PF	5% 50V
C207	1-137-613-11	FILM 0.0018MF	2% 100V	C353	1-124-126-00	ELECT 47MF	20% 16V
C208	1-164-346-11	CERAMIC CHIP 1MF	16V	C355	1-163-113-00	CERAMIC CHIP 68PF	5% 50V
C209	1-164-161-11	CERAMIC CHIP 0.0022MF	10% 50V	C359	1-164-005-11	CERAMIC CHIP 0.47MF	25V
C210	1-164-005-11	CERAMIC CHIP 0.47MF	25V	C361	1-126-964-11	ELECT 10MF	20% 50V
C211	1-164-005-11	CERAMIC CHIP 0.47MF	25V	C362	1-163-109-00	CERAMIC CHIP 47PF	5% 50V
C212	1-164-005-11	CERAMIC CHIP 0.47MF	25V	C363	1-163-101-00	CERAMIC CHIP 22PF	5% 50V
C215	1-163-023-00	CERAMIC CHIP 0.015MF	10% 50V			(KV-C2903B/C2908B/C2909B/C2901D/ C2908D/C2909D/C2901K/C2909K)	
C216	1-163-011-11	CERAMIC CHIP 0.0015MF	10% 50V	C365	1-163-101-00	CERAMIC CHIP 22PF	5% 50V
C219	1-163-023-00	CERAMIC CHIP 0.015MF	10% 50V	C382	1-126-964-11	ELECT 10MF	20% 50V
C220	1-163-011-11	CERAMIC CHIP 0.0015MF	10% 50V	C383	1-163-101-00	CERAMIC CHIP 22PF	5% 50V
C221	1-163-037-11	CERAMIC CHIP 0.022MF	10% 25V	C399	1-163-097-00	CERAMIC CHIP 15PF	5% 50V
C222	1-163-037-11	CERAMIC CHIP 0.022MF	10% 25V	C401	1-124-126-00	ELECT 47MF	20% 16V
C225	1-130-489-00	FILM 0.033MF	5% 50V	C402	1-163-017-00	CERAMIC CHIP 0.0047MF	10% 50V
C226	1-130-489-00	FILM 0.033MF	5% 50V	C403	1-163-017-00	CERAMIC CHIP 0.0047MF	10% 50V
C227	1-163-020-00	CERAMIC CHIP 0.0082MF	10% 50V	C404	1-124-126-00	ELECT 47MF	20% 16V
C228	1-163-020-00	CERAMIC CHIP 0.0082MF	10% 50V	C406	1-126-964-11	ELECT 10MF	20% 50V
C229	1-164-346-11	CERAMIC CHIP 1MF	16V	C407	1-164-346-11	CERAMIC CHIP 1MF	16V
C301	1-163-133-00	CERAMIC CHIP 470PF	5% 50V	C409	1-164-005-11	CERAMIC CHIP 0.47MF	25V
C302	1-163-009-11	CERAMIC CHIP 0.001MF	10% 50V	C410	1-164-005-11	CERAMIC CHIP 0.47MF	25V
C303	1-163-131-00	CERAMIC CHIP 390PF	5% 50V	C411	1-124-126-00	ELECT 47MF	20% 16V
C305	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	C418	1-163-121-00	CERAMIC CHIP 150PF	5% 50V
C306	1-126-933-11	ELECT 100MF	20% 16V	C420	1-216-295-91	METAL GLAZE 0	5% 1/10W
C307	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	C421	1-126-966-11	ELECT 33MF	20% 50V
C308	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	C422	1-163-121-00	CERAMIC CHIP 150PF	5% 50V
C309	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	C423	1-124-126-00	ELECT 47MF	20% 16V
C310	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	C425	1-163-017-00	CERAMIC CHIP 0.0047MF	10% 50V
C311	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	C426	1-164-346-11	CERAMIC CHIP 1MF	16V
C312	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	C427	1-124-126-00	ELECT 47MF	20% 16V
C313	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	C428	1-164-346-11	CERAMIC CHIP 1MF	16V
C314	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	C429	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
C315	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	C430	1-124-126-00	ELECT 47MF	20% 16V
C316	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	C431	1-163-017-00	CERAMIC CHIP 0.0047MF	10% 50V
C318	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	C432	1-124-126-00	ELECT 47MF	20% 16V
C320	1-124-126-00	ELECT 47MF	20% 16V	C433	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V
C321	1-163-009-11	CERAMIC CHIP 0.001MF	10% 50V	C434	1-164-346-11	CERAMIC CHIP 1MF	16V
C322	1-163-009-11	CERAMIC CHIP 0.001MF	10% 50V	C435	1-126-933-11	ELECT 100MF	20% 16V
C323	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	C436	1-163-133-00	CERAMIC CHIP 470PF	5% 50V
C324	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	C437	1-164-346-11	CERAMIC CHIP 1MF	16V
C325	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	C438	1-163-133-00	CERAMIC CHIP 470PF	5% 50V
C326	1-164-161-11	CERAMIC CHIP 0.0022MF	10% 50V	C445	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V
C327	1-136-165-00	FILM 0.1MF	5% 50V	C1002	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V
C328	1-164-337-11	CERAMIC CHIP 2.2MF	16V	C1003	1-163-037-11	CERAMIC CHIP 0.022MF	10% 50V
C329	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	C1004	1-163-097-00	CERAMIC CHIP 15PF	5% 50V
C330	1-163-017-00	CERAMIC CHIP 0.0047MF	10% 50V	C1005	1-163-009-11	CERAMIC CHIP 0.001MF	10% 50V
C331	1-165-320-11	CERAMIC CHIP 0.47MF	10% 16V	C1006	1-163-037-11	CERAMIC CHIP 0.022MF	10% 50V
C332	1-163-097-00	CERAMIC CHIP 15PF	5% 50V	C1007	1-163-125-00	CERAMIC CHIP 220PF	5% 50V
C334	1-163-016-00	CERAMIC CHIP 0.0039MF	10% 50V				

A

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
C1008	1-163-125-00	CERAMIC CHIP 220PF	5% 50V	< FILTER >			
C1009	1-163-097-00	CERAMIC CHIP 15PF	5% 50V	CF101	1-760-154-11	TRAP, CERAMIC	
C1011	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V	CF102	1-404-134-00	TRAP, CERAMIC (5.5MHZ)	
C1013	1-164-346-11	CERAMIC CHIP 1MF	16V		1-404-430-11	TRAP, CERAMIC (6.5MHZ)	(KV-C2903B/C2908B/C2909B)
C1015	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V				(KV-C2903B/C2908B/C2909B)
C1016	1-163-009-11	CERAMIC CHIP 0.001MF	10% 50V	CF103	1-760-106-11	FILTER, CERAMIC	
C1018	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	CF104	1-567-100-11	FILTER, CERAMIC	(KV-C2903B/C2908B/C2909B)
C1019	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V		1-567-101-00	FILTER, CERAMIC	(KV-C2901D/C2908D/C2909D/C2901K/C2909K)
C1020	1-126-233-11	ELECT 22MF	20% 50V				
C1021	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	CF106	1-760-107-11	FILTER, CERAMIC	
C1024	1-163-009-11	CERAMIC CHIP 0.001MF	10% 50V	CF108	1-760-107-11	FILTER, CERAMIC	(KV-C2901D/C2908D/C2909D)
C1025	1-124-126-00	ELECT 47MF	20% 16V	SWF101	1-579-273-11	FILTER, SURFACE WAVE	
C1026	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	SWF102	1-760-244-11	FILTER, SURFACE WAVE	(KV-C2903B/C2908B/C2909B)
C1027	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V		1-760-329-11	FILTER, SURFACE WAVE	(EXCEPT KV-C2903B/C2908B/C2909B)
C1028	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	< CONNECTOR >			
C1029	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	CN001	1-695-302-11	CONNECTOR, BOARD TO BOARD 50P	
C1030	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	CN002	*1-568-882-51	PIN, CONNECTOR 7P	
C1031	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	CN003	*1-568-879-11	PIN, CONNECTOR 4P	
C1032	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	< DIODE >			
C1033	1-126-964-11	ELECT 10MF	20% 50V	D1	8-719-023-25	DIODE MA704WK	
C1034	1-164-346-11	CERAMIC CHIP 1MF	16V	D6	8-719-047-41	DIODE UMZ12N	
< C1101-C1139 FITTED ON >				D7	8-719-988-62	DIODE 1SS355	
< KV-C2903B/C2908B/C2909B/C2903E/C2908E/C2909E >				D9	8-719-988-62	DIODE 1SS355	
C1101	1-163-131-00	CERAMIC CHIP 390PF	5% 50V	D11	8-719-988-62	DIODE 1SS355	
C1102	1-163-093-00	CERAMIC CHIP 10PF	5% 50V	D101	8-719-977-81	DIODE DTZ33B	
C1103	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	D102	8-719-914-43	DIODE DAN202K (KV-C2903B/C2908B/C2909B)	
C1104	1-126-964-11	ELECT 10MF	20% 50V	D103	8-719-914-43	DIODE DAN202K	(KV-C2903B/C2908B/C2909B/C2901D/C2908D/C2909D/C2901K/C2909K)
C1105	1-126-964-11	ELECT 10MF	20% 50V				
C1106	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	D201	8-719-914-42	DIODE DA204K	
C1107	1-124-126-00	ELECT 47MF	20% 16V	D301	8-719-988-62	DIODE 1SS355	
C1108	1-126-964-11	ELECT 10MF	20% 50V	D303	8-719-988-62	DIODE 1SS355	
C1110	1-163-809-11	CERAMIC CHIP 0.047MF	10% 25V	D304	8-719-988-62	DIODE 1SS355	
C1111	1-164-489-11	CERAMIC CHIP 0.22MF	10% 16V	D305	8-719-988-62	DIODE 1SS355	
C1112	1-164-489-11	CERAMIC CHIP 0.22MF	10% 16V	D314	8-719-047-16	DIODE BAS216	
C1113	1-163-137-00	CERAMIC CHIP 680PF	5% 50V	D315	8-719-988-62	DIODE 1SS355	
C1116	1-124-126-00	ELECT 47MF	20% 16V	D380	1-216-295-91	METAL GLAZE	0 5% 1/10W
C1117	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	D401	8-719-047-41	DIODE UMZ12N	
C1118	1-124-126-00	ELECT 47MF	20% 16V	D402	8-719-047-41	DIODE UMZ12N	
C1119	1-124-126-00	ELECT 47MF	20% 16V	D404	8-719-047-41	DIODE UMZ12N	
C1120	1-163-137-00	CERAMIC CHIP 680PF	5% 50V	D405	8-719-047-41	DIODE UMZ12N	
C1122	1-124-126-00	ELECT 47MF	20% 16V	D406	8-719-047-41	DIODE UMZ12N	
C1123	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	D407	8-719-047-41	DIODE UMZ12N	
C1124	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	D408	8-719-047-41	DIODE UMZ12N	
C1125	1-165-320-11	CERAMIC CHIP 0.47MF	10% 16V	D409	8-719-047-41	DIODE UMZ12N	
C1126	1-163-117-00	CERAMIC CHIP 100PF	5% 50V	D410	8-719-047-41	DIODE UMZ12N	
C1127	1-163-117-00	CERAMIC CHIP 100PF	5% 50V	D411	8-719-047-41	DIODE UMZ12N	
C1128	1-163-037-11	CERAMIC CHIP 0.022MF	10% 25V	D1002	8-719-914-43	DIODE DAN202K	
C1129	1-162-568-11	CERAMIC CHIP 0.33MF	25V	D1101	8-719-988-62	DIODE 1SS355	(KV-C2903B/C2908B/C2909B/C2903E/C2908E/C2909E)
C1130	1-124-903-11	ELECT 1MF	20% 50V				
C1131	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V				
C1132	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V				
C1133	1-124-126-00	ELECT 47MF	20% 16V				
C1134	1-126-964-11	ELECT 10MF	20% 50V				
C1135	1-163-125-00	CERAMIC CHIP 220PF	5% 50V				
C1136	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V				
C1137	1-163-095-00	CERAMIC CHIP 12PF	5% 50V				
C1139	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V				



REF.NO.	PART NO.	DESCRIPTION	REMARK
D1102	8-719-820-71	DIODE 1SV214 (KV-C2903B/C2908B/C2909B/C2903E/ C2908E/C2909E)	
< IC >			
IC001	8-752-863-45	IC CXP85340A-SVS190 (EXCEPT KV-C2903E/C2908E/C2909E)	
	8-752-864-34	IC CXP85340A-SV5190 (KV-C2903E/C2908E/C2909E)	
IC002	8-759-334-20	IC ST24E32M6TR	
IC003	8-759-041-54	IC MN1382S	
IC101	8-759-277-66	IC TDA9814T/V2 (KV-C2903B/C2908B/C2909B)	
	8-759-289-18	IC TDA9813T (EXCEPT KV-C2903B/C2908B/C2909B)	
IC201	8-759-252-14	IC TDA6612-5X-GEG	
IC202	8-759-514-57	IC BA7046F	
IC301	8-759-366-44	IC TDA8366T-N3M	
IC302	8-759-288-85	IC TDA4665T	
IC303	8-759-251-56	IC TDA8395T (KV-C2903B/C2908B/C2909B/C2901D/ C2908D/C2909D/C2901K/C2909K)	
IC401	8-752-069-53	IC CXA1855Q	
IC1001	8-759-295-92	IC CF72416DW-R	
IC1002	8-759-252-10	IC CF70200FN-R (KV-C2901A/C2903E/C2908E/C2909E/ C2903B/C2908B/C2909B/C2901K/C2909K)	
	8-759-336-09	IC CF70203FN-F (KV-C2901D/C2908D/C2909D)	
IC1003	8-759-300-71	IC HD14053BFP	
IC1101	8-759-251-58	IC SAA7283T (KV-C2903B/C2908B/C2909B/C2903E/ C2908E/C2909E)	
< SOCKET >			
J401	1-766-296-11	CONNECTOR, DUAL SCART	
< COIL >			
L1	1-410-385-11	INDUCTOR CHIP 22UH	
L100	1-410-989-11	INDUCTOR CHIP 0.47UH	
L101	1-408-609-41	INDUCTOR 33UH	
L102	1-410-214-31	INDUCTOR CHIP 68UH	
L103	1-408-609-41	INDUCTOR 33UH	
L104	1-414-170-11	INDUCTOR CHIP 100UH (KV-C2903B/C2908B/C2909B)	
L105	1-408-406-00	INDUCTOR 5.6UH (KV-C2903B/C2908B/C2909B)	
	1-408-410-00	INDUCTOR 12UH (EXCEPT KV-C2903B/C2908B/C2909B)	
L106	1-412-011-31	INDUCTOR CHIP 27UH	
L107	1-410-985-11	INDUCTOR CHIP 0.22UH	
L108	1-408-414-00	INDUCTOR 27UH (KV-C2903B/C2908B/C2909B)	
	1-408-609-41	INDUCTOR 33UH (EXCEPT KV-C2903B/C2908B/C2909B)	
L109	1-412-010-41	INDUCTOR CHIP 22UH	
L110	1-412-004-31	INDUCTOR CHIP 6.8UH	
L111	1-414-170-11	INDUCTOR CHIP 100UH	
L112	1-410-200-31	INDUCTOR CHIP 4.7UH	

REF.NO.	PART NO.	DESCRIPTION	REMARK
L201	1-410-067-21	INDUCTOR 4.7MMH	
L307	1-408-609-41	INDUCTOR 33UH	
L308	1-408-424-00	INDUCTOR 180UH	
L309	1-408-424-00	INDUCTOR 180UH	
L310	1-408-407-00	INDUCTOR 6.8UH	
L313	1-216-295-91	METAL GLAZE 0 5% 1/10W	
L315	1-412-008-11	INDUCTOR CHIP 15UH	
L401	1-410-214-31	INDUCTOR CHIP 68UH	
L1001	1-408-419-00	INDUCTOR 68UH	
L1002	1-408-419-00	INDUCTOR 68UH	
L1003	1-410-999-11	INDUCTOR CHIP 3.3UH	
L1101	1-412-004-31	INDUCTOR CHIP 6.8UH (KV-C2903B/C2908B/C2909B/C2903E/ C2908E/C2909E)	
< TRANSISTOR >			
Q1	8-729-920-74	TRANSISTOR 2SC2412K-QR	
Q2	8-729-920-74	TRANSISTOR 2SC2412K-QR	
Q4	8-729-901-01	TRANSISTOR DTC144EK	
Q8	8-729-920-74	TRANSISTOR 2SC2412K-QR	
Q11	8-729-920-74	TRANSISTOR 2SC2412K-QR	
Q12	8-729-920-74	TRANSISTOR 2SC2412K-QR	
Q14	8-729-920-74	TRANSISTOR 2SC2412K-QR	
Q102	8-729-144-93	TRANSISTOR MPA502T	
Q103	8-729-900-53	TRANSISTOR DTC114EK (KV-C2903B/C2908B/C2909B)	
Q104	8-729-900-53	TRANSISTOR DTC114EK (KV-C2903B/C2908B/C2909B)	
Q105	8-729-900-53	TRANSISTOR DTC114EK (KV-C2903B/C2908B/C2909B)	
Q107	8-729-920-74	TRANSISTOR 2SC2412K-QR	
Q108	8-729-907-26	TRANSISTOR IMX1	
Q109	8-729-907-26	TRANSISTOR IMX1	
Q114	8-729-920-74	TRANSISTOR 2SC2412K-QR	
Q116	8-729-901-01	TRANSISTOR DTC114EK (KV-C2903B/C2908B/C2909B/C2901D/ C2908D/C2909D/C2901K/C2909K)	
Q117	8-729-901-01	TRANSISTOR DTC144EK (KV-C2903B/C2908B/C2909B/C2901D/ C2908D/C2909D/C2901K/C2909K)	
Q120	8-729-216-22	TRANSISTOR 2SA1162-G	
Q121	8-729-216-22	TRANSISTOR 2SA1162-G (KV-C2903B/C2908B/C2909B)	
Q123	8-729-901-01	TRANSISTOR DTC144EK	
Q124	8-729-901-01	TRANSISTOR DTC144EK	
Q125	8-729-900-53	TRANSISTOR DTC114EK (KV-C2903B/C2908B/C2909B)	
Q130	8-729-920-74	TRANSISTOR 2SC2412K-QR	
Q131	8-729-216-22	TRANSISTOR 2SA1162-G	
Q132	8-729-920-74	TRANSISTOR 2SC2412K-QR	
Q133	8-729-920-74	TRANSISTOR 2SC2412K-QR	
Q134	8-729-900-53	TRANSISTOR DTC114EK	
Q301	8-729-901-01	TRANSISTOR DTC144EK	
Q304	8-729-920-74	TRANSISTOR 2SC2412K-QR	
Q312	8-729-920-74	TRANSISTOR 2SC2412K-QR	
Q313	8-729-920-74	TRANSISTOR 2SC2412K-QR	
Q314	8-729-900-53	TRANSISTOR DTC114EK	
Q380	8-729-920-74	TRANSISTOR 2SC2412K-QR	
Q381	8-729-920-74	TRANSISTOR 2SC2412K-QR	
Q401	8-729-920-74	TRANSISTOR 2SC2412K-QR	
Q402	8-729-920-74	TRANSISTOR 2SC2412K-QR	


A

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
Q403	8-729-920-74	TRANSISTOR 2SC2412K-QR		R1	1-216-222-00	METAL GLAZE 10K 5%	1/8W
Q404	8-729-920-74	TRANSISTOR 2SC2412K-QR		R2	1-216-073-00	METAL GLAZE 10K 5%	1/10W
Q406	8-729-216-22	TRANSISTOR 2SA1162-G		R6	1-216-025-00	METAL GLAZE 100 5%	1/10W
Q407	8-729-920-65	TRANSISTOR DTC123EK		R20	1-216-073-00	METAL GLAZE 10K 5%	1/10W
Q408	8-729-920-74	TRANSISTOR 2SC2412K-QR		R21	1-216-033-00	METAL GLAZE 220 5%	1/10W
Q1001	8-729-920-74	TRANSISTOR 2SC2412K-QR		R24	1-216-049-00	METAL GLAZE 1K 5%	1/10W
< RESISTOR >				R25	1-216-073-00	METAL GLAZE 10K 5%	1/10W
JR3	1-216-295-91	METAL GLAZE 0 5%	1/10W	R26	1-216-174-00	METAL GLAZE 100 5%	1/8W
JR8	1-216-295-91	METAL GLAZE 0 5%	1/10W	R27	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
JR9	1-216-295-91	METAL GLAZE 0 5%	1/10W	R29	1-216-049-00	METAL GLAZE 1K 5%	1/10W
JR10	1-216-295-91	METAL GLAZE 0 5%	1/10W	R31	1-216-049-00	METAL GLAZE 1K 5%	1/10W
JR12	1-216-295-91	METAL GLAZE 0 5%	1/10W	R33	1-216-063-00	METAL GLAZE 3.9K 5%	1/10W
JR13	1-216-295-91	METAL GLAZE 0 5%	1/10W	R35	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
JR14	1-216-295-91	METAL GLAZE 0 5%	1/10W	R37	1-216-049-00	METAL GLAZE 1K 5%	1/10W
JR15	1-216-295-91	METAL GLAZE 0 5%	1/10W	R38	1-216-049-00	METAL GLAZE 1K 5%	1/10W
JR16	1-216-295-91	METAL GLAZE 0 5%	1/10W	R41	1-216-073-00	METAL GLAZE 10K 5%	1/10W
JR17	1-216-295-91	METAL GLAZE 0 5%	1/10W	R42	1-216-073-00	METAL GLAZE 10K 5%	1/10W
JR18	1-216-295-91	METAL GLAZE 0 5%	1/10W	R43	1-216-073-00	METAL GLAZE 10K 5%	1/10W
JR19	1-216-295-91	METAL GLAZE 0 5%	1/10W	R44	1-216-121-00	METAL GLAZE 1M 5%	1/10W
JR22	1-216-295-91	METAL GLAZE 0 5%	1/10W	R46	1-216-049-00	METAL GLAZE 1K 5%	1/10W
JR25	1-412-006-31	INDUCTOR CHIP 10UH		R47	1-216-073-00	METAL GLAZE 10K 5%	1/10W
JR26	1-412-006-31	INDUCTOR CHIP 10UH		R49	1-216-025-00	METAL GLAZE 100 5%	1/10W
JR28	1-216-296-00	METAL GLAZE 0 5%	1/8W	R50	1-216-049-00	METAL GLAZE 1K 5%	1/10W
JR29	1-412-006-31	INDUCTOR CHIP 10UH		R51	1-216-049-00	METAL GLAZE 1K 5%	1/10W
JR51	1-216-296-00	METAL GLAZE 0 5%	1/8W	R52	1-216-049-00	METAL GLAZE 1K 5%	1/10W
JR52	1-216-295-91	METAL GLAZE 0 5%	1/10W	R53	1-216-073-00	METAL GLAZE 10K 5%	1/10W
JR55	1-216-296-00	METAL GLAZE 0 5%	1/8W	R54	1-216-049-00	METAL GLAZE 1K 5%	1/10W
JR56	1-216-296-00	METAL GLAZE 0 5%	1/8W	R55	1-216-025-00	METAL GLAZE 100 5%	1/10W
JR59	1-216-296-00	METAL GLAZE 0 5%	1/8W	R56	1-216-025-00	METAL GLAZE 100 5%	1/10W
JR60	1-216-296-00	METAL GLAZE 0 5%	1/8W	R57	1-216-025-00	METAL GLAZE 100 5%	1/10W
JR61	1-216-296-00	METAL GLAZE 0 5%	1/8W	R58	1-216-025-00	METAL GLAZE 100 5%	1/10W
JR62	1-216-296-00	METAL GLAZE 0 5%	1/8W	R59	1-216-121-00	METAL GLAZE 1M 5%	1/10W
JR65	1-216-296-00	METAL GLAZE 0 5%	1/8W	R60	1-216-025-00	METAL GLAZE 100 5%	1/10W
JR69	1-216-295-91	METAL GLAZE 0 5%	1/10W	R61	1-216-025-00	METAL GLAZE 100 5%	1/10W
JR71	1-216-296-00	METAL GLAZE 0 5%	1/8W	R62	1-216-073-00	METAL GLAZE 10K 5%	1/10W
JR120	1-216-295-91	METAL GLAZE 0 5%	1/10W	R63	1-216-073-00	METAL GLAZE 10K 5%	1/10W
JR122	1-216-295-91	METAL GLAZE 0 5%	1/10W	R64	1-216-073-00	METAL GLAZE 10K 5%	1/10W
(EXCEPT KV-C2903B/C2908B/C2909B)				R66	1-216-033-00	METAL GLAZE 220 5%	1/10W
JR123	1-216-295-91	METAL GLAZE 0 5%	1/10W	R67	1-216-025-00	METAL GLAZE 100 5%	1/10W
(EXCEPT KV-C2903B/C2908B/C2909B)				R68	1-216-025-00	METAL GLAZE 100 5%	1/10W
JR124	1-216-295-91	METAL GLAZE 0 5%	1/10W	R69	1-216-025-00	METAL GLAZE 100 5%	1/10W
JR125	1-216-295-91	METAL GLAZE 0 5%	1/10W	R70	1-216-049-00	METAL GLAZE 1K 5%	1/10W
(KV-C2901A/C2903E/C2908E/C2909E)				R71	1-216-081-00	METAL GLAZE 22K 5%	1/10W
JR126	1-216-295-91	METAL GLAZE 0 5%	1/10W	R72	1-216-081-00	METAL GLAZE 22K 5%	1/10W
JR201	1-216-295-91	METAL GLAZE 0 5%	1/10W	R73	1-216-677-11	METAL CHIP 12K 0.50%	1/10W
(KV-C2901A/C2901D/C2908D/C2909D/C2901K/C2909K)				R75	1-216-081-00	METAL GLAZE 22K 5%	1/10W
JR202	1-216-295-91	METAL GLAZE 0 5%	1/10W	R76	1-216-073-00	METAL GLAZE 10K 5%	1/10W
(KV-C2901A/C2901D/C2908D/C2909D/C2901K/C2909K)				R77	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
JR302	1-216-295-91	METAL GLAZE 0 5%	1/10W	R78	1-216-037-00	METAL GLAZE 330 5%	1/10W
JR401	1-216-295-91	METAL GLAZE 0 5%	1/10W	R79	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
(KV-C2903B/C2908B/C2909B)				R82	1-216-073-00	METAL GLAZE 10K 5%	1/10W
JR402	1-216-295-91	METAL GLAZE 0 5%	1/10W	R83	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
(KV-C2903B/C2908B/C2909B)				R84	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
JR403	1-216-295-91	METAL GLAZE 0 5%	1/10W	R85	1-216-025-00	METAL GLAZE 100 5%	1/10W
(KV-C2903B/C2908B/C2909B)				R86	1-216-025-00	METAL GLAZE 100 5%	1/10W
JR408	1-216-295-91	METAL GLAZE 0 5%	1/10W	R87	1-216-073-00	METAL GLAZE 10K 5%	1/10W
JR1004	1-216-295-91	METAL GLAZE 0 5%	1/10W	R88	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
				R89	1-216-073-00	METAL GLAZE 10K 5%	1/10W
				R90	1-216-073-00	METAL GLAZE 10K 5%	1/10W
				R91	1-216-049-00	METAL GLAZE 1K 5%	1/10W

A


REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
R302	1-216-075-00	METAL GLAZE 12K	5% 1/10W	R415	1-216-067-00	METAL GLAZE 5.6K	5% 1/10W
R303	1-216-091-00	METAL GLAZE 56K	5% 1/10W	R417	1-216-033-00	METAL GLAZE 220	5% 1/10W
R305	1-216-049-00	METAL GLAZE 1K	5% 1/10W	R419	1-216-067-00	METAL GLAZE 5.6K	5% 1/10W
R308	1-216-025-00	METAL GLAZE 100	5% 1/10W	R420	1-216-033-00	METAL GLAZE 220	5% 1/10W
R309	1-216-025-00	METAL GLAZE 100	5% 1/10W	R421	1-216-113-00	METAL GLAZE 470K	5% 1/10W
R311	1-216-025-00	METAL GLAZE 100	5% 1/10W	R422	1-216-022-00	METAL GLAZE 75	5% 1/10W
R313	1-216-025-00	METAL GLAZE 100	5% 1/10W	R423	1-216-093-00	METAL GLAZE 68K	5% 1/10W
R315	1-216-025-00	METAL GLAZE 100	5% 1/10W	R424	1-216-113-00	METAL GLAZE 470K	5% 1/10W
R316	1-216-025-00	METAL GLAZE 100	5% 1/10W	R425	1-216-022-00	METAL GLAZE 75	5% 1/10W
R317	1-216-025-00	METAL GLAZE 100	5% 1/10W	R426	1-216-025-00	METAL GLAZE 100	5% 1/10W
R318	1-216-049-00	METAL GLAZE 1K	5% 1/10W	R427	1-216-188-00	METAL GLAZE 390	5% 1/8W
R319	1-216-025-00	METAL GLAZE 100	5% 1/10W	R429	1-216-067-00	METAL GLAZE 5.6K	5% 1/10W
R320	1-216-025-00	METAL GLAZE 100	5% 1/10W	R430	1-216-089-00	METAL GLAZE 47K	5% 1/10W
R321	1-216-025-00	METAL GLAZE 100	5% 1/10W	R431	1-216-188-00	METAL GLAZE 390	5% 1/8W
R322	1-216-067-00	METAL GLAZE 5.6K	5% 1/10W	R432	1-216-039-00	METAL GLAZE 390	5% 1/10W
R326	1-216-077-00	METAL GLAZE 15K	5% 1/10W	R433	1-216-067-00	METAL GLAZE 5.6K	5% 1/10W
R327	1-216-097-00	METAL GLAZE 100K	5% 1/10W	R434	1-216-025-00	METAL GLAZE 100	5% 1/10W
R328	1-216-025-00	METAL GLAZE 100	5% 1/10W	R435	1-216-039-00	METAL GLAZE 390	5% 1/10W
R329	1-216-067-00	METAL GLAZE 5.6K	5% 1/10W	R436	1-216-022-00	METAL GLAZE 75	5% 1/10W
R330	1-216-033-00	METAL GLAZE 220	5% 1/10W	R437	1-216-073-00	METAL GLAZE 10K	5% 1/10W
R331	1-216-033-00	METAL GLAZE 220	5% 1/10W	R438	1-216-089-00	METAL GLAZE 47K	5% 1/10W
R332	1-216-033-00	METAL GLAZE 220	5% 1/10W	R439	1-216-071-00	METAL GLAZE 8.2K	5% 1/10W
R333	1-216-689-11	METAL CHIP 39K	0.50% 1/10W	R440	1-216-025-00	METAL GLAZE 100	5% 1/10W
R340	1-216-097-00	METAL GLAZE 100K	5% 1/10W	R441	1-216-022-00	METAL GLAZE 75	5% 1/10W
R341	1-216-083-00	METAL GLAZE 27K	5% 1/10W	R442	1-216-067-00	METAL GLAZE 5.6K	5% 1/10W
R342	1-216-073-00	METAL GLAZE 10K	5% 1/10W	R443	1-216-113-00	METAL GLAZE 470K	5% 1/10W
R352	1-216-123-11	METAL GLAZE 1.2M	5% 1/10W	R444	1-216-067-00	METAL GLAZE 5.6K	5% 1/10W
R354	1-216-025-00	METAL GLAZE 100	5% 1/10W	R445	1-216-113-00	METAL GLAZE 470K	5% 1/10W
R355	1-216-065-00	METAL GLAZE 4.7K	5% 1/10W	R446	1-216-025-00	METAL GLAZE 100	5% 1/10W
R356	1-216-025-00	METAL GLAZE 100	5% 1/10W	R447	1-216-025-00	METAL GLAZE 100	5% 1/10W
R364	1-216-041-00	METAL GLAZE 470	5% 1/10W	R448	1-216-073-00	METAL GLAZE 10K	5% 1/10W
R365	1-216-027-00	METAL GLAZE 120	5% 1/10W	R449	1-216-071-00	METAL GLAZE 8.2K	5% 1/10W
R370	1-216-033-00	METAL GLAZE 220	5% 1/10W	R454	1-216-089-00	METAL GLAZE 47K	5% 1/10W
R371	1-216-033-00	METAL GLAZE 220	5% 1/10W	R458	1-216-049-00	METAL GLAZE 1K	5% 1/10W
R372	1-216-033-00	METAL GLAZE 220	5% 1/10W	R461	1-216-022-00	METAL GLAZE 75	5% 1/10W
R373	1-216-041-00	METAL GLAZE 470	5% 1/10W	R464	1-216-034-00	METAL GLAZE 240	5% 1/10W
R380	1-216-222-00	METAL GLAZE 10K	5% 1/8W	R465	1-216-025-00	METAL GLAZE 100	5% 1/10W
R381	1-216-025-00	METAL GLAZE 100	5% 1/10W	R473	1-216-022-00	METAL GLAZE 75	5% 1/10W
R382	1-216-053-00	METAL GLAZE 1.5K	5% 1/10W	R474	1-216-049-00	METAL GLAZE 1K	5% 1/10W
R383	1-216-049-00	METAL GLAZE 1K	5% 1/10W	R482	1-216-073-00	METAL GLAZE 10K	5% 1/10W
R384	1-216-053-00	METAL GLAZE 1.5K	5% 1/10W	R483	1-216-029-00	METAL GLAZE 150	5% 1/10W
R385	1-216-049-00	METAL GLAZE 1K	5% 1/10W	R484	1-216-025-00	METAL GLAZE 100	5% 1/10W
R386	1-216-041-00	METAL GLAZE 470	5% 1/10W	R485	1-216-025-00	METAL GLAZE 100	5% 1/10W
R387	1-216-041-00	METAL GLAZE 470	5% 1/10W	R486	1-216-025-00	METAL GLAZE 100	5% 1/10W
R388	1-216-041-00	METAL GLAZE 470	5% 1/10W	R487	1-216-022-00	METAL GLAZE 75	5% 1/10W
R389	1-216-041-00	METAL GLAZE 470	5% 1/10W	R488	1-216-022-00	METAL GLAZE 75	5% 1/10W
R390	1-216-089-00	METAL GLAZE 47K	5% 1/10W	R489	1-216-022-00	METAL GLAZE 75	5% 1/10W
R392	1-216-091-00	METAL GLAZE 56K	5% 1/10W	R490	1-216-295-91	METAL GLAZE 0	5% 1/10W
R393	1-216-089-00	METAL GLAZE 47K	5% 1/10W	R491	1-216-295-91	METAL GLAZE 0	5% 1/10W
R401	1-216-039-00	METAL GLAZE 390	5% 1/10W	R492	1-216-295-91	METAL GLAZE 0	5% 1/10W
R402	1-216-089-00	METAL GLAZE 47K	5% 1/10W	R1001	1-216-049-00	METAL GLAZE 1K	5% 1/10W
R403	1-216-039-00	METAL GLAZE 390	5% 1/10W	R1002	1-216-025-00	METAL GLAZE 100	5% 1/10W
R404	1-216-089-00	METAL GLAZE 47K	5% 1/10W	R1004	1-216-049-00	METAL GLAZE 1K	5% 1/10W
R405	1-216-039-00	METAL GLAZE 390	5% 1/10W	R1008	1-216-085-00	METAL GLAZE 33K	5% 1/10W
R406	1-216-039-00	METAL GLAZE 390	5% 1/10W	R1009	1-216-025-00	METAL GLAZE 100	5% 1/10W
R407	1-216-198-91	METAL GLAZE 1K	5% 1/8W	R1010	1-216-053-00	METAL GLAZE 1.5K	5% 1/10W
R408	1-216-067-00	METAL GLAZE 5.6K	5% 1/10W	R1011	1-216-053-00	METAL GLAZE 1.5K	5% 1/10W
R409	1-216-067-00	METAL GLAZE 5.6K	5% 1/10W	R1012	1-216-053-00	METAL GLAZE 1.5K	5% 1/10W
R410	1-216-025-00	METAL GLAZE 100	5% 1/10W	R1014	1-216-025-00	METAL GLAZE 100	5% 1/10W
R413	1-216-033-00	METAL GLAZE 220	5% 1/10W	R1015	1-216-025-00	METAL GLAZE 100	5% 1/10W


C








The components identified by shading and marked  are critical for safety.
Replace only with the part number specified.


— 68 —

 


Les composants identifiés par
une trame et une marque  sont critiques pour la sécurité.
Ne les remplacer que par une
pièce portant le numéro spécifié.








The components identified by
shading and marked  are critical
for safety.
Replace only with the part number
specified.

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
	*A-1642-147-A	D BOARD, COMPLETE *****		C636	 1-164-503-61	CERAMIC 0.0022MF 20% 400V	
	4-201-023-01	SPACER, INSULATING		C639	1-136-165-00	FILM 0.1MF 5% 50V	
	4-201-057-01	COVER, FUSE		C640	1-106-220-00	MYLAR 0.1MF 10% 100V	
	4-202-373-01	SPRING, IC		C647	1-162-116-00	CERAMIC 680PF 10% 2KV	
	4-812-134-00	RIVET NYLON, 3.5		C800	1-137-437-11	FILM 0.0056MF 5% 50V	
	< CAPACITOR >			C801	1-136-153-00	FILM 0.01MF 5% 50V	
C502	1-102-824-00	CERAMIC 470PF 5% 50V		C804	1-136-165-00	FILM 0.1MF 5% 50V	
C503	1-136-165-00	FILM 0.1MF 5% 50V		C805	1-106-395-00	MYLAR 0.15MF 10% 200V	
C504	1-102-824-00	CERAMIC 470PF 5% 50V		C806	1-108-704-11	MYLAR 0.1MF 10% 200V	
C506	1-126-941-11	ELECT 470MF 20% 25V		C807	1-136-853-11	FILM 0.56MF 5% 200V	
C507	1-109-953-11	ELECT 2.2MF 20% 50V		C810	1-126-772-11	ELECT 1MF 20% 250V	
C509	1-136-165-00	FILM 0.1MF 5% 50V		C811	1-102-212-00	CERAMIC 820PF 10% 500V	
C510	1-126-969-11	ELECT 220MF 20% 50V		C812	1-136-540-11	FILM 0.82MF 5% 200V	
C511	1-136-202-11	FILM 0.33MF 5% 63V		C813	1-129-722-00	FILM 0.047MF 10% 630V	
C513	1-106-220-00	MYLAR 0.1MF 10% 100V		C814	1-136-565-11	FILM 0.015MF 3% 1.4KV	
C514	1-136-165-00	FILM 0.1MF 5% 50V		C815	1-136-562-11	MYLAR 0.0082MF 10% 400V	
C515	1-126-941-11	ELECT 470MF 20% 25V		C816	1-161-754-00	CERAMIC 0.001MF 10% 2KV	
C517	1-126-941-11	ELECT 470MF 20% 25V		C817	1-161-754-00	CERAMIC 0.001MF 10% 2KV	
C518	1-102-228-00	CERAMIC 470PF 10% 500V		C818	1-162-134-11	CERAMIC 470PF 10% 2KV	
C519	1-102-228-00	CERAMIC 470PF 10% 500V		C819	1-136-208-11	FILM 0.068MF 10% 250V	
C520	1-126-941-11	ELECT 470MF 20% 25V		C820	1-102-114-00	CERAMIC 470PF 10% 50V	
C521	1-124-006-11	ELECT 10MF 20% 25V		C821	1-162-114-00	CERAMIC 0.0047MF 2KV	
C522	1-126-964-11	ELECT 10MF 20% 50V		C822	1-107-662-11	ELECT 22MF 20% 250V	
C523	1-136-165-00	FILM 0.1MF 5% 50V		C824	1-123-024-21	ELECT 33MF 160V	
C600	 1-164-503-61	CERAMIC 0.0022MF 20% 400V		C829	1-124-902-00	ELECT 0.47MF 20% 50V	
C601	 1-161-964-91	CERAMIC 0.0047MF 250V		C830	1-124-902-00	ELECT 0.47MF 20% 50V	
C602	 1-161-964-91	CERAMIC 0.0047MF 250V		C832	1-124-903-11	ELECT 1MF 20% 50V	
C603	1-125-318-00	ELECT(BLOCK) 220MF 20% 400V		C834	1-124-916-11	ELECT 22MF 20% 25V	
C604	1-124-122-11	ELECT 100MF 20% 50V		C835	1-162-318-11	CERAMIC 0.001MF 10% 500V	
C605	1-107-929-11	ELECT 10MF 20% 100V		C836	1-162-117-00	CERAMIC 100PF 10% 500V	
C606	1-162-318-11	CERAMIC 0.001MF 10% 500V		C838	1-102-228-00	CERAMIC 470PF 10% 500V	
C607	1-104-666-11	ELECT 220MF 20% 25V		C839	1-136-189-00	FILM 0.1MF 10% 250V	
C608	1-109-880-11	FILM 0.0015MF 3% 2KV		C900	1-101-810-00	CERAMIC 100PF 5% 500V	
C611	1-102-228-00	CERAMIC 470PF 10% 500V		C901	1-101-810-00	CERAMIC 100PF 5% 500V	
C612	1-104-799-11	ELECT 22MF 20% 100V		C902	1-137-372-11	FILM 0.022MF 5% 50V	
C613	1-124-347-00	ELECT 100MF 20% 160V		C903	1-137-372-11	FILM 0.022MF 5% 50V	
C614	1-126-804-11	ELECT 100MF 20% 25V		C904	1-124-910-11	ELECT 47MF 20% 50V	
C615	1-126-376-11	ELECT 470MF 20% 25V		C905	1-124-907-11	ELECT 10MF 20% 50V	
C616	1-110-639-11	ELECT 1000MF 20% 25V		C906	1-126-967-11	ELECT 47MF 20% 50V	
C617	1-107-884-11	ELECT 1000MF 20% 16V		C907	1-124-903-11	ELECT 1MF 20% 50V	
C618	1-136-165-00	FILM 0.1MF 5% 50V		C908	1-126-967-11	ELECT 47MF 20% 50V	
C619	1-102-228-00	CERAMIC 470PF 10% 500V		C909	1-124-903-11	ELECT 1MF 20% 50V	
C620	1-102-228-00	CERAMIC 470PF 10% 500V		C910	1-137-393-11	FILM 0.01MF 5% 100V	
C621	1-136-165-00	FILM 0.1MF 5% 50V		C1200	1-136-165-00	FILM 0.1MF 5% 50V	
C622	1-104-797-11	ELECT 0.47MF 20% 100V		C1201	1-136-165-00	FILM 0.1MF 5% 50V	
C623	1-104-666-11	ELECT 220MF 20% 25V		C1202	1-136-165-00	FILM 0.1MF 5% 50V	
C624	1-136-165-00	FILM 0.1MF 5% 50V		C1203	1-136-169-00	FILM 0.22MF 5% 50V	
C625	1-126-967-11	ELECT 47MF 20% 50V		C1204	1-136-169-00	FILM 0.22MF 5% 50V	
C626	1-104-666-11	ELECT 220MF 20% 25V		C1205	1-101-005-00	CERAMIC 0.022MF 50V	
C627	1-104-666-11	ELECT 220MF 20% 25V		C1206	1-101-005-00	CERAMIC 0.022MF 50V	
C628	1-126-964-11	ELECT 10MF 20% 50V		C1207	1-126-933-11	ELECT 100MF 20% 16V	
C629	1-126-800-51	ELECT 2200MF 20% 25V		C1208	1-124-927-11	ELECT 4.7MF 20% 50V	
C630	1-126-800-51	ELECT 2200MF 20% 25V		C1209	1-124-927-11	ELECT 4.7MF 20% 50V	
C631	1-126-233-11	ELECT 22MF 20% 50V		C1210	1-124-925-11	ELECT 2.2MF 20% 50V	
C632	1-104-666-11	ELECT 220MF 20% 25V		C1211	1-124-925-11	ELECT 2.2MF 20% 50V	
C633	 1-107-564-11	FILM 0.22MF 20% 300V		C1214	1-126-933-11	ELECT 100MF 20% 16V	
C634	 1-107-564-11	FILM 0.22MF 20% 300V		C1215	1-136-173-00	FILM 0.47MF 5% 50V	
C635	 1-107-564-11	FILM 0.22MF 20% 300V		C1216	1-137-366-11	FILM 0.0022MF 5% 50V	
				C1217	1-137-366-11	FILM 0.0022MF 5% 50V	
				C1218	1-126-934-11	ELECT 220MF 20% 16V	


Les composants identifiés par une trame et une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.


The components identified by shading and marked  are critical for safety. Replace only with the part number specified.






D


REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
< CONNECTOR >				< FUSE >			
CN600	1-508-786-11	PIN, CONNECTOR (5MM PITCH) 2P		D904	8-719-923-60	DIODE MTZJ-9.1A	
CN601 	1-508-765-11	PIN, CONNECTOR (5MM PITCH) 3P		D905	8-719-923-60	DIODE MTZJ-9.1A	
CN603 	*1-580-844-11	PIN, CONNECTOR (POWER)		D906	8-719-923-60	DIODE MTZJ-9.1A	
CN800	*1-580-798-11	CONNECTOR PIN (DY) 6P		D1201	8-719-109-72	DIODE RD3.9ESB2	
CN801	1-573-296-11	CONNECTOR, BOARD TO BOARD 10P		< FERRITE BEAD >			
CN803	1-695-915-11	TAB (CONTACT)		FB600	1-410-397-21	FERRITE BEAD INDUCTOR 1.1UH	
CN804	1-508-768-00	PIN, CONNECTOR (5MM PITCH) 6P		FB601	1-410-397-21	FERRITE BEAD INDUCTOR 1.1UH	
CN807	1-568-878-51	PIN, CONNECTOR 3P		FB602	1-410-397-21	FERRITE BEAD INDUCTOR 1.1UH	
CN900	1-568-678-11	TERMINAL BLOCK, S 3P		FB604	1-410-396-41	FERRITE BEAD INDUCTOR 0.45UH	
CN901	*1-564-520-11	PLUG, CONNECTOR 5P		FB605	1-410-396-41	FERRITE BEAD INDUCTOR 0.45UH	
CN902	1-695-299-11	CONNECTOR, BOARD TO BOARD 50P		FB606	1-410-397-21	FERRITE BEAD INDUCTOR 1.1UH	
CN1200	*1-568-879-11	PIN, CONNECTOR 4P		FB607	1-410-397-21	FERRITE BEAD INDUCTOR 1.1UH	
CN1201	*1-568-878-51	PIN, CONNECTOR 3P		< IC >			
< DIODE >				IC500	8-759-192-71	IC STV9379	
D500	8-719-109-85	DIODE RD5.1ESB2		IC600	8-759-183-88	IC STR-S6708	
D502	8-719-979-85	DIODE EGP20G		IC601 	8-749-924-92	IC TLP721-GR	
D503	8-719-979-85	DIODE EGP20G		IC602	8-749-920-61	IC SE-135N	
D504	8-719-901-33	DIODE 1SS133		IC603	8-759-144-82	IC μ PC2405HF	
D505	8-719-982-03	DIODE MTZJ-3.6A		IC604	8-759-250-63	IC TL750L05CLPR	
D506	8-719-901-33	DIODE 1SS133		IC605	8-759-231-58	IC TA7812S	
D507	8-719-109-85	DIODE RD5.1ESB2		IC606	8-759-267-25	IC LM2940T-9.0	
D600	8-719-510-53	DIODE D4SB60L		IC800	8-759-103-93	IC μ PC393C	
D601	8-719-046-77	DIODE EMI-V1		IC900	8-741-790-11	IC SBX1790-51	
D603	8-719-109-97	DIODE RD6.8ESB2		IC1200	8-759-250-68	IC TDA7264	
D604	8-719-046-75	DIODE EU-1-V1		IC1201	8-759-502-21	IC TDA2822M	
D605	8-719-312-61	DIODE EU-1Z		< JACK SOCKET >			
D606	8-719-312-61	DIODE EU-1Z		J900	1-764-606-11	JACK	
D607	8-719-046-78	DIODE EG-1Z-V1		< COIL >			
D608	8-719-046-75	DIODE EU-1-V1		L502	1-412-519-11	INDUCTOR 3.3UH	
D609	8-719-301-64	DIODE RU4DS		L503	1-412-519-11	INDUCTOR 3.3UH	
D610	8-719-046-74	DIODE AU-01Z-V1		L609	1-412-533-21	INDUCTOR 47UH	
D611	8-719-302-43	DIODE EL1Z		L611	1-412-527-11	INDUCTOR 15UH	
D612	8-719-053-64	DIODE RU3YX-LF-C4		L612	1-414-415-11	INDUCTOR, WIDE BAND	
D613	8-719-045-48	DIODE FML-G12S		L613	1-414-415-11	INDUCTOR, WIDE BAND	
D614	8-719-045-48	DIODE FML-G12S		L800	1-459-087-00	COIL, HCC DUST CORE 3.9MMH	
D615	8-719-046-75	DIODE EU-1-V1		L801	1-459-087-00	COIL, HCC DUST CORE 3.9MMH	
D616	8-719-110-03	DIODE RD7.5ESB2		L802	1-459-104-00	COIL, WITH CORE	
D617	8-719-901-33	DIODE 1SS133		L803	1-420-872-00	COIL, AIR CORE	
D618	8-719-901-33	DIODE 1SS133		L804	1-459-907-11	COIL, HORIZONTAL LINEARITY	
D619	8-719-901-33	DIODE 1SS133		L805	1-406-675-11	COIL, CHOK 4.7MMH	
D620	8-719-901-33	DIODE 1SS133		L809	1-412-533-21	INDUCTOR 47UH	
D622	8-719-923-60	DIODE MTZJ-9.1A		L900	1-408-409-00	INDUCTOR 10UH	
D625	8-719-901-33	DIODE 1SS133		L901	1-408-409-00	INDUCTOR 10UH	
D626	8-719-046-74	DIODE AU-01Z-V1		L902	1-408-409-00	INDUCTOR 10UH	
D800	8-719-901-33	DIODE 1SS133		L903	1-408-409-00	INDUCTOR 10UH	
D801	8-719-901-33	DIODE 1SS133		< IC LINK >			
D802	8-719-901-33	DIODE 1SS133		PS600 	1-532-686-91	LINK, IC 2.7A (ICP-F75)	
D803	8-719-908-03	DIODE GP08D		PS601 	1-532-686-91	LINK, IC 2.7A (ICP-F75)	
D807	8-719-302-43	DIODE EL1Z		PS602 	1-532-686-91	LINK, IC 2.7A (ICP-F75)	
D808	8-719-908-03	DIODE GP08D		PS603 	1-532-686-91	LINK, IC 2.7A (ICP-F75)	
D809	8-719-018-82	DIODE RGP02-20EL-6394					
D810	8-719-302-43	DIODE EL1Z					
D812	8-719-038-49	DIODE FMS-3FU-LF027-103					
D815	8-719-908-03	DIODE GP08D					
D817	8-719-109-89	DIODE RD5.6ESB2					
D901	8-719-030-11	DIODE SLA-570KT3F					
D902	8-719-923-60	DIODE MTZJ-9.1A					
D903	8-719-923-60	DIODE MTZJ-9.1A					


D

Les composants identifiés par
une trame et une marque 
sont critiques pour la securite.
Ne les remplacer que par une
piece portant le numero specifie.

The components identified by
shading and marked  are critical
for safety.
Replace only with the part number
specified.

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
PS801 	1-532-505-91	LINK, IC 0.4A (ICP-V10)		R616	1-215-479-00	METAL 270K 1%	1/4W
< TRANSISTOR >				R617	1-215-901-00	METAL OXIDE 33K 5%	2W F
Q501	8-729-119-78	TRANSISTOR 2SC2785-HFE		R618	1-247-863-91	CARBON 22K 5%	1/4W
Q502	8-729-173-38	TRANSISTOR 2SA733-K		R619	1-216-425-11	METAL OXIDE 56 5%	1W F
Q503	8-729-900-89	TRANSISTOR DTC144ES		R620	1-247-895-00	CARBON 470K 5%	1/4W
Q601	8-729-025-04	TRANSISTOR 2SC3852A		R621	1-216-425-11	METAL OXIDE 56 5%	1W F
Q602	8-729-320-28	TRANSISTOR 2SA1667		R622	1-249-437-11	CARBON 47K 5%	1/4W
Q603	8-729-027-08	TRANSISTOR 2SC2389S-R		R623	1-249-429-11	CARBON 10K 5%	1/4W
Q604	8-729-024-35	TRANSISTOR 2SC2808S-R		R624	1-249-405-11	CARBON 100 5%	1/4W F
Q605	8-729-119-78	TRANSISTOR 2SC2785-HFE		R625	1-249-434-11	CARBON 27K 5%	1/4W
Q606	8-729-900-65	TRANSISTOR DTA144ES		R626	1-249-430-11	CARBON 12K 5%	1/4W
Q607	8-729-119-78	TRANSISTOR 2SC2785-HFE		R628	1-249-415-11	CARBON 680 5%	1/4W F
Q800	8-729-119-78	TRANSISTOR 2SC2785-HFE		R629 	1-244-945-91	CARBON 1M 5%	1/2W
Q801	8-729-017-06	TRANSISTOR 2SC4793		R630 	1-216-265-21	METAL 8.2K 5%	1W
Q802	8-729-016-32	TRANSISTOR 2SC4927-01		R631 	1-205-949-11	WIREWOUND 1.8 5%	10W
Q803	8-729-119-80	TRANSISTOR 2SC2688-LK		R632	1-247-807-31	CARBON 100 5%	1/4W
Q805	8-729-900-89	TRANSISTOR DTC144ES		R633	1-247-807-31	CARBON 100 5%	1/4W
Q1200	8-729-119-78	TRANSISTOR 2SC2785-HFE		R634	1-249-397-11	CARBON 22 5%	1/4W F
Q1201	8-729-900-74	TRANSISTOR DTC143TS		R635	1-249-437-11	CARBON 47K 5%	1/4W
Q1202	8-729-900-80	TRANSISTOR DTC114ES		R636	1-249-417-11	CARBON 1K 5%	1/4W
Q1203	8-729-900-74	TRANSISTOR DTC143TS		R637	1-249-409-11	CARBON 220 5%	1/4W
Q1204	8-729-900-74	TRANSISTOR DTC143TS		R638	1-247-863-91	CARBON 22K 5%	1/4W
< RESISTOR >				R639	1-215-427-00	METAL 1.8K 1%	1/4W
R500	1-215-457-00	METAL 33K 1%	1/4W	R640	1-216-381-11	METAL OXIDE 0.22 5%	3W F
R502	1-249-421-11	CARBON 2.2K 5%	1/4W	R641	1-216-381-11	METAL OXIDE 0.22 5%	3W F
R503	1-249-429-11	CARBON 10K 5%	1/4W	R642 	1-205-949-11	WIREWOUND 1.8 5%	10W
R504	1-215-461-00	METAL 47K 1%	1/4W	R644	1-247-807-31	CARBON 100 5%	1/4W
R505	1-249-382-11	CARBON 1.2 5%	1/4W F	R645	1-249-422-11	CARBON 2.7K 5%	1/4W
R506	1-215-443-00	METAL 8.2K 1%	1/4W	R646	1-249-377-11	CARBON 0.47 5%	1/4W F
R507	1-215-888-00	METAL OXIDE 220 5%	2W F	R647	1-202-933-61	FUSIBLE 0.1 10%	1/2W F
R508	1-216-371-00	METAL OXIDE 1.5 5%	2W F	R648	1-216-397-11	METAL OXIDE 4.7 5%	3W F
R509	1-249-443-11	CARBON 0.47 5%	1/4W F	R800	1-249-421-11	CARBON 2.2K 5%	1/4W
R510	1-249-443-11	CARBON 0.47 5%	1/4W F	R801	1-249-429-11	CARBON 10K 5%	1/4W
R517	1-215-427-00	METAL 1.8K 1%	1/4W	R802	1-249-431-11	CARBON 15K 5%	1/4W
R518	1-215-427-00	METAL 1.8K 1%	1/4W	R803	1-249-423-11	CARBON 3.3K 5%	1/4W
R520	1-215-457-00	METAL 33K 1%	1/4W	R804	1-249-430-11	CARBON 12K 5%	1/4W
R521	1-215-461-00	METAL 47K 1%	1/4W	R805	1-249-425-11	CARBON 4.7K 5%	1/4W
R522	1-247-863-91	CARBON 22K 5%	1/4W	R812	1-249-421-11	CARBON 2.2K 5%	1/4W
R523	1-247-863-91	CARBON 22K 5%	1/4W	R813	1-215-867-00	METAL OXIDE 470 5%	1W F
R524	1-249-425-11	CARBON 4.7K 5%	1/4W	R814	1-249-411-11	CARBON 330 5%	1/4W
R525	1-249-425-11	CARBON 4.7K 5%	1/4W	R816	1-216-481-11	METAL OXIDE 1.2K 5%	3W F
R526	1-249-421-11	CARBON 2.2K 5%	1/4W	R817	1-216-481-11	METAL OXIDE 1.2K 5%	3W F
R527	1-215-438-00	METAL 5.1K 1%	1/4W	R818	1-215-882-00	METAL OXIDE 22 5%	2W F
R528	1-247-901-11	CARBON 820K 5%	1/4W	R819	1-216-345-11	METAL OXIDE 0.47 5%	1W F
R529	1-247-895-00	CARBON 470K 5%	1/4W	R820	1-249-403-11	CARBON 68 5%	1/4W
R600	1-216-490-11	METAL OXIDE 39K 5%	3W F	R821	1-215-909-11	METAL OXIDE 47 5%	3W F
R601	1-249-417-11	CARBON 1K 5%	1/4W	R822	1-215-868-00	METAL OXIDE 680 5%	1W F
R603	1-215-875-11	METAL OXIDE 10K 5%	1W F	R824	1-249-420-11	CARBON 1.8K 5%	1/4W
R604	1-249-420-11	CARBON 1.8K 5%	1/4W	R826	1-247-752-11	CARBON 1K 5%	1/2W
R605	1-216-362-11	METAL OXIDE 0.27 5%	2W F	R827	1-249-425-11	CARBON 4.7K 5%	1/4W
R607	1-216-421-11	METAL OXIDE 12 5%	1W F	R828	1-249-425-11	CARBON 4.7K 5%	1/4W
R608	1-216-365-00	METAL OXIDE 0.47 5%	2W F	R829	1-249-493-11	CARBON 56K 5%	1/2W
R610	1-215-427-00	METAL 1.8K 1%	1/4W	R830	1-217-778-11	FUSIBLE 1K 5%	1W F
R611	1-215-859-00	METAL OXIDE 22 5%	1W F	R833	1-249-421-11	CARBON 2.2K 5%	1/4W F
R612	1-249-428-11	CARBON 8.2K 5%	1/4W	R836	1-249-439-11	CARBON 68K 5%	1/4W
R613	1-249-417-11	CARBON 1K 5%	1/4W	R837	1-249-429-11	CARBON 10K 5%	1/4W
R614	1-215-877-11	METAL OXIDE 22K 5%	1W F	R840	1-247-807-31	CARBON 100 5%	1/4W
R615	1-249-435-11	CARBON 33K 5%	1/4W	R841	1-249-418-11	CARBON 1.2K 5%	1/4W
				R842	1-249-435-11	CARBON 33K 5%	1/4W
				R843	1-247-903-00	CARBON 1M 5%	1/4W

Les composants identifiés par une trame et une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

The components identified by shading and marked  are critical for safety. Replace only with the part number specified.

KV-C290

D

VM

REF.NO.	PART NO.	DESCRIPTION	REMARK
R846	1-247-893-11	CARBON 390K 5% 1/4W	
R847	1-247-897-11	CARBON 560K 5% 1/4W	
R848	1-249-438-11	CARBON 56K 5% 1/4W	
R849	1-249-429-11	CARBON 10K 5% 1/4W	
R850	1-249-425-11	CARBON 4.7K 5% 1/4W	
R851	1-215-898-11	METAL OXIDE 10K 5% 2W	F
R852	1-249-432-11	CARBON 18K 5% 1/4W	
R900	1-249-409-11	CARBON 220 5% 1/4W	
R901	1-202-539-00	SOLID 39 10% 1/2W	
R902	1-202-539-00	SOLID 39 10% 1/2W	
R905	1-247-804-11	CARBON 75 5% 1/4W	
R906	1-247-804-11	CARBON 75 5% 1/4W	
R907	1-247-804-11	CARBON 75 5% 1/4W	
R908	1-249-401-11	CARBON 47 5% 1/4W	
R909	1-249-437-11	CARBON 47K 5% 1/4W	
R910	1-249-437-11	CARBON 47K 5% 1/4W	
R911	1-249-423-11	CARBON 3.3K 5% 1/4W	
R912	1-249-429-11	CARBON 10K 5% 1/4W	
R913	1-249-423-11	CARBON 3.3K 5% 1/4W	
R914	1-249-429-11	CARBON 10K 5% 1/4W	
R915	1-247-791-91	CARBON 22 5% 1/4W	
R916	1-247-791-91	CARBON 22 5% 1/4W	
R917	1-247-791-91	CARBON 22 5% 1/4W	
R1200	1-249-425-11	CARBON 4.7K 5% 1/4W	
R1201	1-249-434-11	CARBON 27K 5% 1/4W	
R1202	1-249-393-11	CARBON 10 5% 1/4W	F
R1203	1-249-421-11	CARBON 2.2K 5% 1/4W	
R1204	1-249-421-11	CARBON 2.2K 5% 1/4W	
R1205	1-249-428-11	CARBON 8.2K 5% 1/4W	
R1206	1-249-428-11	CARBON 8.2K 5% 1/4W	
R1208	1-212-849-00	FUSIBLE 4.7 5% 1/4W	F
R1209	1-212-849-00	FUSIBLE 4.7 5% 1/4W	F
R1211	1-249-424-11	CARBON 3.9K 5% 1/4W	
R1212	1-249-424-11	CARBON 3.9K 5% 1/4W	
R1213	1-249-421-11	CARBON 2.2K 5% 1/4W	
R1216	1-249-413-11	CARBON 470 5% 1/4W	
R1217	1-249-425-11	CARBON 4.7K 5% 1/4W	
< VARIABLE RESISTOR >			
RV301	1-238-552-11	RES, ADJ, CARBON 470K	
< RELAY >			
RY600	1-755-018-11	RELAY	
< SWITCH >			
S601	1-571-433-12	SWITCH, PUSH (AC POWER)	
S900	1-692-979-11	SWITCH, TACTILE	
S901	1-692-979-11	SWITCH, TACTILE	
S902	1-692-979-11	SWITCH, TACTILE	
< SPARK GAP >			
SG801	1-519-422-11	GAP, SPARK	
< TRANSFORMER >			
LF600	1-421-776-21	LFT	
LF601	1-421-776-21	LFT	
T601	1-426-805-11	SRT	
T800	1-424-545-11	TRANSFORMER, FERRITE (PMT)	
T803	1-453-169-11	TRANSFORMER ASSY, FLYBACK (UX-1604A2)	

REF.NO.	PART NO.	DESCRIPTION	REMARK
T804	1-437-090-00	HDT	
< THERMISTOR >			
THP600	1-809-827-11	THERMISTOR, POSITIVE	

*A-1644-052-A VM BOARD, COMPLETE			

4-382-854-11 SCREW (M3X10), P, SW (+)			
< CAPACITOR >			
C1701	1-124-119-00	ELECT 330MF 20% 16V	
C1702	1-101-880-00	CERAMIC 47PF 5% 50V	
C1703	1-102-115-00	CERAMIC 560PF 10% 50V	
C1704	1-161-830-00	CERAMIC 0.0047MF 500V	
C1705	1-124-120-11	ELECT 220MF 20% 16V	
C1706	1-123-935-00	ELECT 33MF 20% 160V	
C1707	1-124-907-11	ELECT 10MF 20% 50V	
C1708	1-101-006-00	CERAMIC 0.047MF 50V	
C1709	1-108-704-11	MYLAR 0.1MF 10% 200V	
C1710	1-136-207-11	FILM 0.047MF 10% 250V	
C1711	1-162-318-11	CERAMIC 0.001MF 10% 500V	
C1712	1-107-667-11	ELECT 2.2MF 20% 160V	
C1713	1-162-318-11	CERAMIC 0.001MF 10% 500V	
C1714	1-136-207-11	FILM 0.047MF 10% 250V	
C1716	1-124-907-11	ELECT 10MF 20% 50V	
C1718	1-124-120-11	ELECT 220MF 20% 16V	
C1719	1-124-927-11	ELECT 4.7MF 20% 50V	
< CONNECTOR >			
CN1819	*1-568-882-51	PIN, CONNECTOR 7P	
< DIODE >			
D1701	8-719-901-33	DIODE 1SS133	
D1702	8-719-901-33	DIODE 1SS133	
D1703	8-719-901-33	DIODE 1SS133	
D1704	8-719-982-37	DIODE MTZJ-39C	
D1705	8-719-982-37	DIODE MTZJ-39C	
D1706	8-719-901-33	DIODE 1SS133	
D1707	8-719-901-33	DIODE 1SS133	
< COIL >			
L1701	1-408-417-00	INDUCTOR 47UH	
L1702	1-408-418-00	INDUCTOR 56UH	
< TRANSISTOR >			
Q1701	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q1702	8-729-173-38	TRANSISTOR 2SA733-K	
Q1703	8-729-017-05	TRANSISTOR 2SA1837	
Q1704	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q1705	8-729-017-06	TRANSISTOR 2SC4793	
Q1706	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q1707	8-729-140-96	TRANSISTOR 2SD774-34	
Q1708	8-729-901-59	TRANSISTOR BF199	
Q1709	8-729-255-12	TRANSISTOR 2SC2551-0	
< RESISTOR >			
R1701	1-247-807-31	CARBON 100 5% 1/4W	



Les composants identifiés par
une trame et une marque
sont critiques pour la sécurité.
Ne les remplacer que par une
pièce portant le numéro spécifié.

The components identified by
shading and marked are critical
for safety.
Replace only with the part number
specified.

REF.NO.	PART NO.	DESCRIPTION	REMARK
R1702	1-249-420-11	CARBON	1.8K 5% 1/4W
R1703	1-247-807-31	CARBON	100 5% 1/4W
R1704	1-249-420-11	CARBON	1.8K 5% 1/4W
R1705	1-247-736-11	CARBON	56 5% 1/2W F
R1706	1-249-414-11	CARBON	560 5% 1/4W F
R1707	1-249-412-11	CARBON	390 5% 1/4W
R1709	1-249-416-11	CARBON	820 5% 1/4W
R1710	1-249-385-11	CARBON	2.2 5% 1/4W F
R1711	1-249-432-11	CARBON	18K 5% 1/4W
R1712	1-249-435-11	CARBON	33K 5% 1/4W
R1713	1-249-438-11	CARBON	56K 5% 1/4W
R1714	1-249-429-11	CARBON	10K 5% 1/4W
R1715	1-216-476-11	METAL OXIDE	180 5% 3W F
R1716	1-249-417-11	CARBON	1K 5% 1/4W F
R1717	1-249-432-11	CARBON	18K 5% 1/4W
R1718	1-249-410-11	CARBON	270 5% 1/4W
R1719	1-249-419-11	CARBON	1.5K 5% 1/4W
R1720	1-249-441-11	CARBON	100K 5% 1/4W
R1721	1-249-414-11	CARBON	560 5% 1/4W
R1722	1-249-385-11	CARBON	2.2 5% 1/4W F
R1723	1-249-429-11	CARBON	10K 5% 1/4W
R1724	1-249-436-11	CARBON	39K 5% 1/4W
R1725	1-249-417-11	CARBON	1K 5% 1/4W
R1726	1-249-411-11	CARBON	330 5% 1/4W
R1727	1-249-402-11	CARBON	56 5% 1/4W F
R1729	1-216-451-11	METAL OXIDE	120 5% 2W F
R1731	1-249-420-11	CARBON	1.8K 5% 1/4W
R1732	1-249-426-11	CARBON	5.6K 5% 1/4W
R1734	1-249-419-11	CARBON	1.5K 5% 1/4W

REF.NO.	PART NO.	DESCRIPTION	REMARK
		MISCELLANEOUS	

	1-406-807-11	COIL, DEGAUSSING	
	1-452-032-00	MAGNET, DISK; 10MM Ø	
	1-452-094-00	MAGNET, ROTATABLE DISK; 15MM Ø	
	1-452-509-41	NECK ASSY, PICTURE TUBE (NA-308)	
	1-453-169-11	TRANSFORMER ASSY, FLYBACK (UX-1604A2)	
	1-504-146-11	SPEAKER (5X11CM)	
	1-571-433-12	SWITCH, PUSH (AC POWER)	
	1-693-185-11	TUNER (UV916H)	
	1-751-680-11	CORD, POWER (WITH NOISE FILTER)	
	8-451-422-11	DEFLECTION YOKE (Y29GXA)	
V901	8-733-841-05	PICTURE TUBE (SD-269) (M68KZT10X)	

		ACCESSORIES AND PACKING MATERIALS	

	4-039-906-11	BAG, PROTECTION	
	4-202-990-01	CUSHION (UPPER) (ASSY)	
	4-202-991-01	INDIVIDUAL CARTON	
	4-202-997-01	CUSHION (LOWER) (ASSY)	
	4-202-989-11	MANUAL, INSTRUCTION	
		(KV-C2901D/C2908D/C2909D)	
		(DUTCH/ENGLISH/GERMAN/GREEK/TURKISH)	
	4-202-989-41	MANUAL, INSTRUCTION (KV-C2901A)	
		(ITALIAN)	
	4-202-989-51	MANUAL, INSTRUCTION	
		(KV-C2903B/C2908B/C2909B)	
		(FRENCH/GERMAN/ITALIAN)	
	4-202-989-71	MANUAL, INSTRUCTION (SET.E)	
		(KV-C2903E/C2908E/C2909E)	
		(DANISH/DUTCH/FINISH/FRENCH/GERMAN/	
		NORWEGIAN/PORTUGUESE/SPANISH/SWEDISH)	
	4-202-989-81	MANUAL, INSTRUCTION (SET.G)	
		(KV-C2903E/C2908E/C2909E)	
		(DANISH/DUTCH/FINISH/FRENCH/GERMAN/	
		NORWEGIAN/PORTUGUESE/SPANISH/SWEDISH)	
	4-202-989-91	MANUAL, INSTRUCTION (KV-C2901K/C2909K)	
		(BULGARIAN/CZECHOSLOVAKIAN/ENGLISH/	
		HUNGARIAN/POLISH/RUSSIAN)	
		REMOTE COMMANDER	

	1-467-706-11	COMMANDER, STANDARD TYPE (RM-833)	

Sony Corporation
Consumer A & V Products Company
TV & Display Products Div.

9-974-890-01

English
95CP7160-1
Printed in U.K.
© 1995.3